User Manual / Care Instructions

PRODUCT #: SRSP2	**ITEM:** Vacuum Assisted Massage by Starvac		
		N/A	
		SOURCE FOR PURCHASE:	
		SpaEquip, Inc. 211 Wappo Ave., Calistoga, CA 94515 p: 707.737.1100 f: 707.737.1150 www.spaequip.net	
		LIST PRICE (USD):	

FEATURES:
This device combines the "palpate & roll" technique to vacuum massage, innovation dedicated to efficiency. Features Original and pioneering design, Wide LCD screen, Pre-set programs, Programmable, 13 treatment accessories, Patented system and Beauty, therapeutic and sport treatments. Starvac SP2 is equipped with a wide LCD screen, allowing viewing and browsing very easily and quickly through all the functions displayed. Shown with optional 3-shelf trolley and arm (ordered separately). Training billed separately.

SPECIFICATIONS:

Dimensions:	19"D x 13"W x 9"H (47.5 cm D x 32 cm W x 22.5 cm H) With Trolley: 19"D x 16"W x 41.5"H (47.5 cm D x 40.5 cm W x 104.5 cm H); 25.5 lbs (11.5 kg)
Electrical:	115V 60Hz 250W (230V 50Hz 250W)
Suggested Outlet:	Adjacent to unit
Plumbing:	None
Notes:	6' cord, 3 prong, 66 lbs. (30 kg)
Warranty:	2 Year Limited Warranty
Certifications:	CE
Country of Origin:	France
Installed By:	SpaEquip (if setup is included with order) or Client

STARVAC®

Sp2

USER MANUAL

ISO 13488 QUALITY ASSURED FIRM

CE 0459

MADE IN FRANCE Quality

CIDESCO - Sezione Italia
Comitato Internazionale
di Estetica e Cosmetologia

Spett.le Ditta
Medic Systems
25, rue André Vasseur
31200 Toulouse
France

Reggio Emilia, October 12, 2002

We have been using the STARVAC machine you produce, since June 2001 on a considerable number of customers who showed the typical blemishes of panniculopatia edemafibrosclerotic (or liposclerosis or cellulitis): orange-peel skin, localized edema, fibrosis or sclerosis of the tissues, pain at palpation, teleangectasies diffused over lower limbs.

Each customer has been treated with STARVAC (between ten and thirty treatments, according to the case) at the rate of two treatments a week.

At the end of the cycle of treatments we were able to observe the following:

- orange peel had become normal skin (85% cases)
- localized edema had been reduced of 60% (70%of the cases)
- localized pain at palpation, fibrosis or sclerosis of the tissue had been reduced of 95% (100% of the cases)
- it was also noticeable a 40% improvement of skin relaxation (60% of the cases).

In consideration of the above

CIDESCO ITALY CERTIFIES THAT

STARVAC is effective in the treatment of panniculopathy or liposclerosis or cellulitis

The President of ~~CIDESCO ITALY~~
Giorgio Dionisio

Sede
Via Bojardi 2
42100 Reggio Emilia
Italia

tel. +390522541761
fax +390522407042
email cidescoitalia@cidesco.it
www.cidesco.it

SUMMARY

ACCESSORIES FUNCTION

I) TREATMENT HEADS
II) SUCTION CUPS
III) BUST SUCTION CUPS (Optional)

HOW TO OPERATE THE SYSTEM

I) PACKING
II) SWITCHING ON THE APPLIANCE
III) CLEANING – MUST BE READ
IV) USE

PROGRAMMES

I) BEAUTY & BODY CARE

A) CELLULITE
B) LYMPHATIC DRAINAGE
C) RELAXING MASSAGE
D) HEAVY LEGS
E) FACE
F) BUST TREATMENT (Optional)

II) THERAPEUTIC APPLICATIONS

A) RHEUMATHOLOGY
B) TRAUMATOLOGY
C) SPORT
D) REFLEX THERAPIES

ACCESSORIES FUNCTION

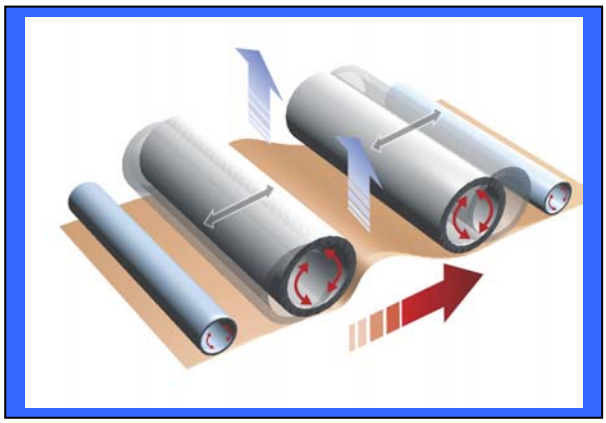

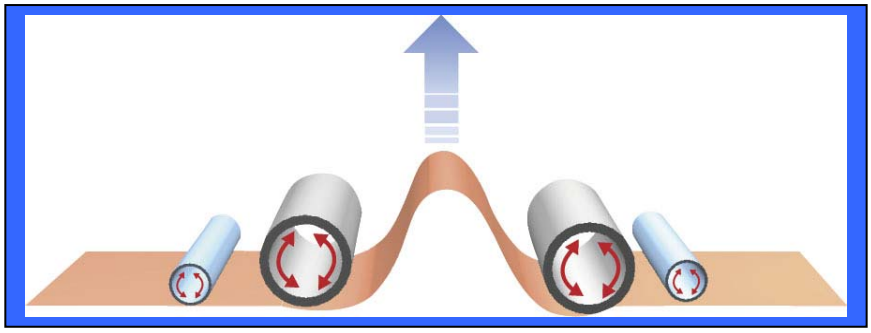

PRINCIPLE

- A depression is created on the surface of the skin, which is sucked in between the suction head two inner mobile rollers, which adapt automatically to the thickness of the skin fold created.
  While moving the suction head, the skin fold is rolled between the two mobile rollers, which reproduce the "palpating & rolling" massage method.
- The two spatulas, situated front and back of the mobile rollers, make the resulting lymphatic drainage all the more effective. The two outer mobile rollers complete the massaging action, making it easier to slide the suction head across the treated area. This innovative and patented suction head ensures that Starvac SP2 requires less air intake in use, without affecting its vacuum power.

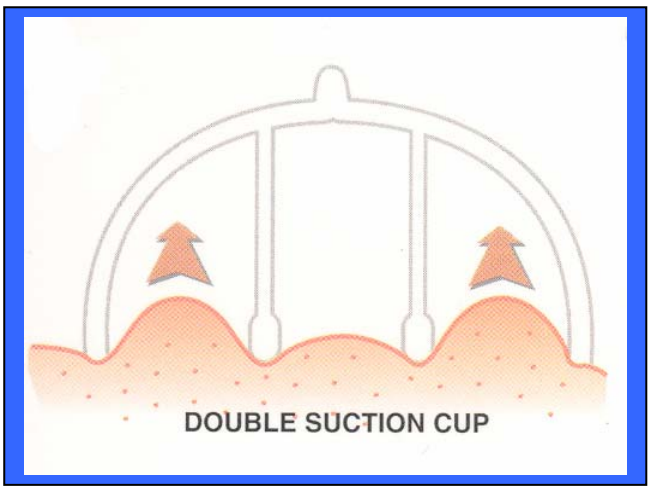

INDICATIONS :

- Corrective action on orange peel and cellulite.
  Restores skin suppleness and elasticity. Reduces wrinkles.
- Hypertrophic scars treatment.
- Drains lymphatic system and stimulates muscles. Eliminates stiffness after exercising. Accelerates recovering process.

Starvac SP2 technology:

Thanks to its action on conjunctive tissue, Starvac SP2 successfully treats:

- Fleshy deposits & cellulite, by re-vascularising fat cells
- Circulation problems, by bracing the metabolism through significant hyperaemia
- Dermalgia reflexes, by relieving spasms
- Muscular contractions

1) TREATMENT HEADS

TREAMENT HEAD

- STARVAC SP2 is a massage appliance, using a patented four-roller treatment head.
- The two inner mobile rollers perform a circular massage, reproducing the "palpating & rolling" technique, while the two outer rollers allow the suction head to glide more easily across the surface of the skin.

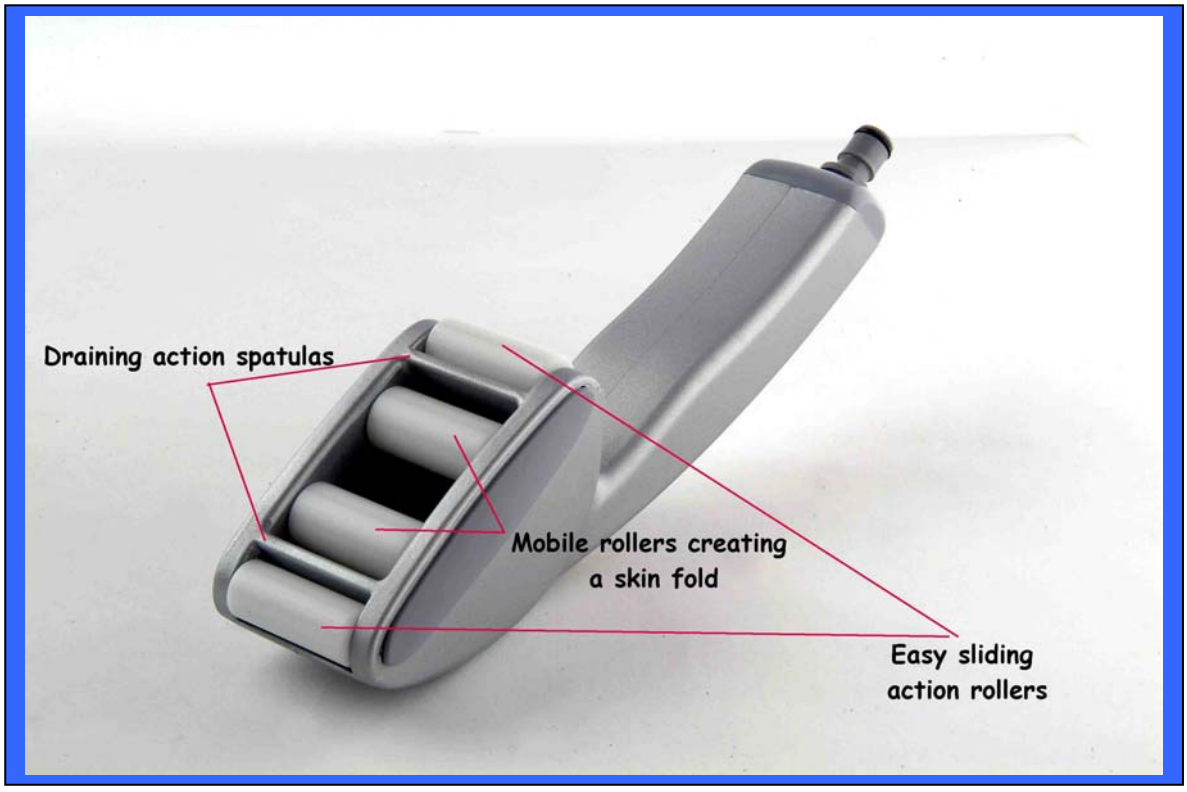

2) SUCTION CUPS

BASIC SUCTION CUPS Face & Scars

BASIC SUCTION CUPS

DOUBLE SUCTION CUPS

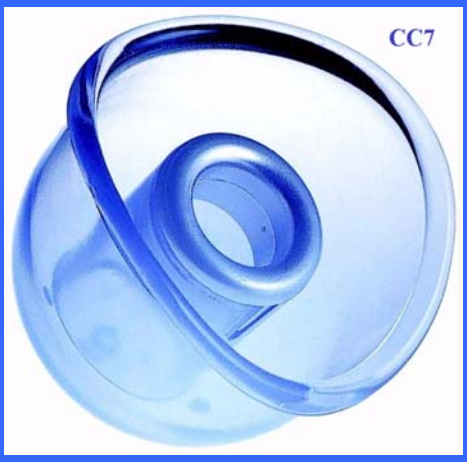

DERMATHERAPY®
SP2 performs either static or mobile DERMATHERAPY treatments thanks to a varied assortment of suction cups.
These cups can be used in manual or automatic mode

BASIC SUCTION CUPS

- Manual mode :

The transparent basic suction cups are fitted with a hole that can be blocked with the finger, to provoke suction or rhythmic vacuum.

- Automatic mode :

Basic suction cups are also available hole less. In that case, the appliance pulsed vacuum mode creates the rhythmic vacuum.

DOUBLE SUCTION CUPS

- Automatic mode :

The double suction cups, which are hole less, must be used for pulsed vacuum treatment.
Starvac SP2makes it possible to use up to 4 double suction cups simultaneously, thanks to a branch connector.

HOW TO OPERATE THE SYSTEM

1) PACKING

- Starvac SP2 without trolley
  The appliance is delivered in a made-to-measure carton box, with the following dimensions L 57x l 46 x h50 cm. It is secured by a made-to-measure chock system, in order to prevent damage during transport. The accessories are disposed on top of the appliance, so that they are the first items to be seen when unpacking.

- Starvac SP2 with trolley
  The appliance is delivered on a pallet, in a made-to-measure carton box with the following dimensions L 57x l 46 x h116 cm. The accessories are packed in an individual carton box, placed on the top shelf of the trolley. The whole equipment is secured by a made-to-measure chock system, in order to prevent damage during transport

2) SWITCHING ON THE APPLIANCE

- Plug the appliance to the mains.
- Switch on the ON/OFF switch at the back of the appliance.
  Insert the connection tubing female plug into the male socket at the front of the appliance. To do so, slide back the female plug ring, force the female plug into the male socket, then let the female plug ring slide back into place to secure connection.

3) CLEANING

MUST BE READ

- **Accessories**
  All accessories must be cleaned thoroughly after each and every treatment. We recommend to use hot soapy water and to proceed to a thorough cleaning. A disinfectant solution may be used, while respecting carefully dilution indications. Not respecting the dilution indications may cause damage to the integrity of the suction cups and treatment heads material, which shall not be accepted for replacement under warranty.
  All cleaned accessories must be left to dry out completely. The tiniest drop of water that would be sucked into the appliance could cause a technical hazard that may result in a serious failure.

- **Filter sponge**
  The circular filtering sponge is integrated within the silicon tube and located inside the filter body. This sponge must be washed weekly and left to dry out completely before being used again. This is the reason why we include a second filtering sponge; so that the appliance may be used at all times with a dry filter sponge.

4) USE

The control knobs "High" and "Low" are used to regulate the power of the maximum vacuum (High) and the mini vacuum (Low) in pulsed mode. The pulsed mode is the passage, more or less fast, from a maximum vacuum to a mini vacuum during one given period.

Pulsed Mode :

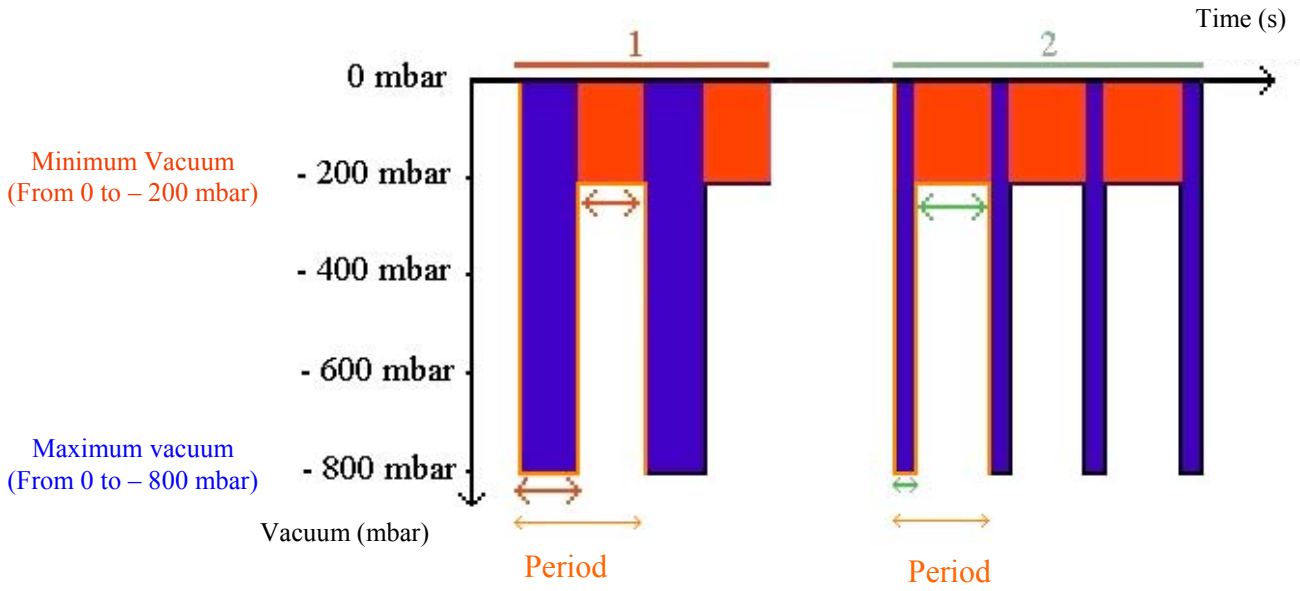

Cycle: Maximum vacuum proportion within one period.

(1) Example 1 : Cycle = 50%
(50% maximum vacuum, 50% minimum vacuum).

(2) Example 2 : Cycle = 20 %
(20% maximum vacuum, 80% minimum vacuum).

Frequency: Number of periods of commutation within 1 second.
If frequency = 1Hz, there will be one period (a maximum vacuum + a minimum vacuum) in 1 second.

HOW TO BROWSE THROUGH THE LCD SCREEN

- There are 5 Push Buttons (PB) beneath the LCD screen. Each PB activates a part of the LCD screen, which is divided in 5 squares, displayed at the bottom of the screen.
  Each PB activates the square situated above it.
  To go back to previous screen or erase an error, press PB 5.

INSTANCE OF USE
(To treat oedema cellulite)

Level 1: select your language

- Press PB 1 to browse through the languages proposed and select the required one.
- Press PB 3 to validate your choice

Level 2: choose the type of treatment

- Press PB 1 to display the two major types of treatments proposed and select the required one.
- Press PB 3 to validate your choice.

Level 3: choose the programs family

- Press PB 1 to display the programs families under the type of treatment chosen and select the required one.
- Press PB 3 to validate your choice.

Level 4: choose your program

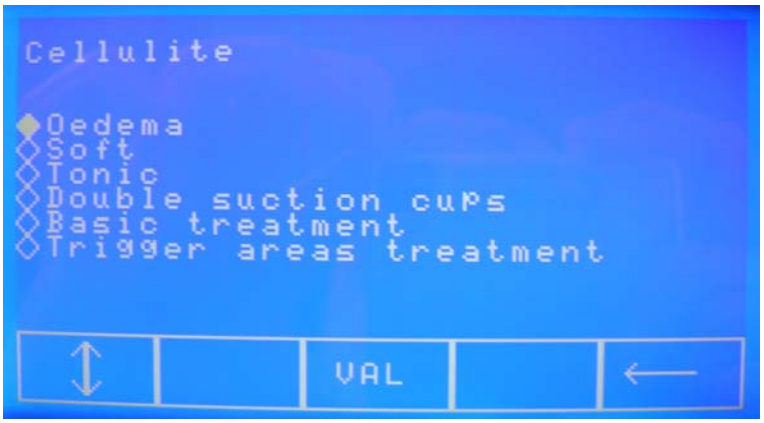

- Press PB 1 to display the programs available under the family type chosen and select the required one.
- Press PB 3 to validate your choice.

Level 5: Start the program

Before starting the program, the following screen comes up:

- Press PB3 (START/PAUSE) to start the program. The program is initiated for the pre-recorded duration and the following screen comes up:

- If you wish, you can momentarily stop the program by pressing PB3 again.
  The program comes to a halt and you just have to press PB3 again to re-start the program.

- If you wish to stop the program, press PB 5 (STOP). The program is stopped and the screen switches back to the previous one.

Parameters modification:

Program parameters can be modified at any time during the treatment session (Duration, Frequency, and Cycle).
To do so, simply select the parameter to be modified by pressing PB 1 (↕), then increase or decrease the selected value by pressing PB4 (↓) or PB2 (↑).

To validate modifications and start again automatically the program with the newly modified parameters: press PB 3.
When the program stops, it automatically re-sets itself to the initial parameters.

To skip a treatment phase:

A treatment session may comprise various treatment stages. It is possible to skip 1 or various stages while the treatment session is running. In order to do so, simply press PB4 and the program will automatically go onto the next stage.
Please note that once a stage is skipped, it is not possible to go backwards.

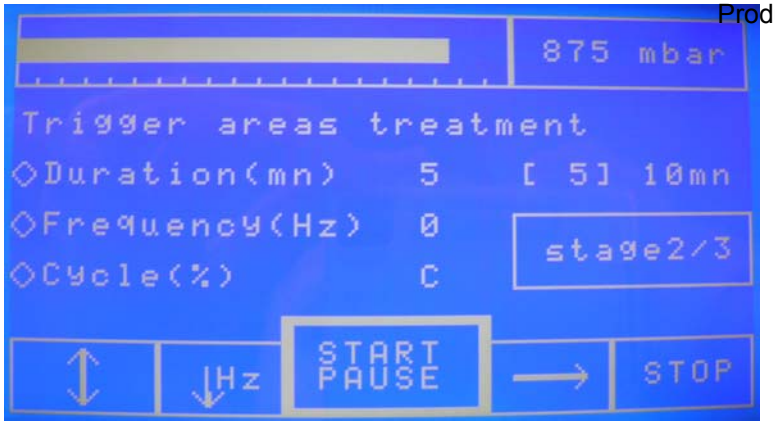

Quick frequency modification :

It is possible to quickly modify the frequency setting while the program is running.
When a pulsed mode program is started, a small « Hz » appears in the square corresponding to PB2.

Pressing on PB2 will get the frequency choices scrolling on the screen. Releasing the pressure on the setting desired is all you have to do, in order for the program to start again with the new frequency setting.

Once all the frequency choices will have appeared, the last choice will be « 0 » (equivalent to continuous mode). There will be a small pause and a blipping sound will be heard.
If you release the pressure on PB2 at that moment, the program will start again in continuous mode.
If you maintain the pressure on PB2, the frequency choices will start scrolling again.

Diagnosis & Tests

The SP2 allows performing diagnosis and tests.
Select « Diagnosis and tests » in the main menu

Then select « Diagnosis »
Before pressing PB3 to validate and launch the program, the appliance pneumatic outlet must be blocked (with one's thumb for example), and the vacuum high button turned to the maximum.

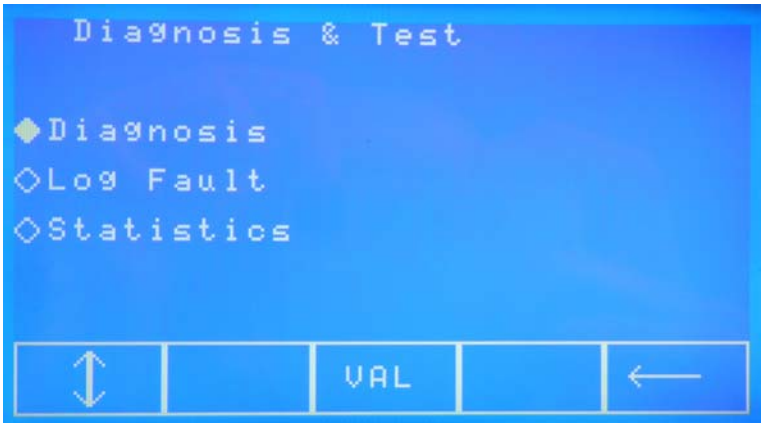

The appliance will launch automatically a series of tests of the main check points.
If everything works fine, the following screen will appear:

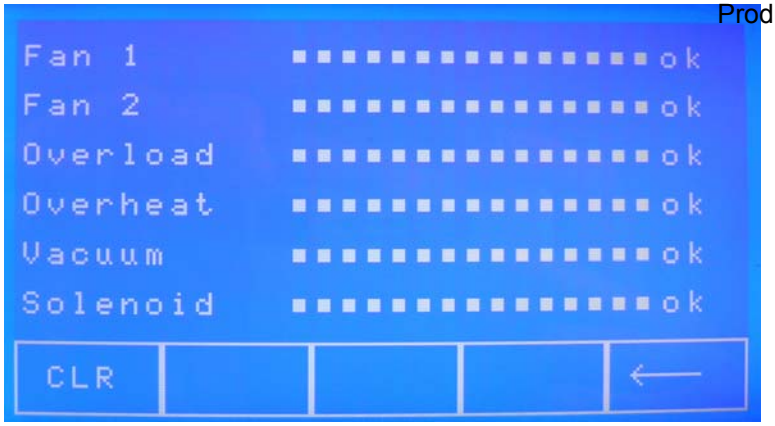

If one of the main check points is defective, « Fail » will appear on the same line and the control light will turn to orange (for a problem related to the fans) or red (for a problem related to the vacuum pump, or the electro valve).
Pressing PB1 (CLR) will launch the testing again.

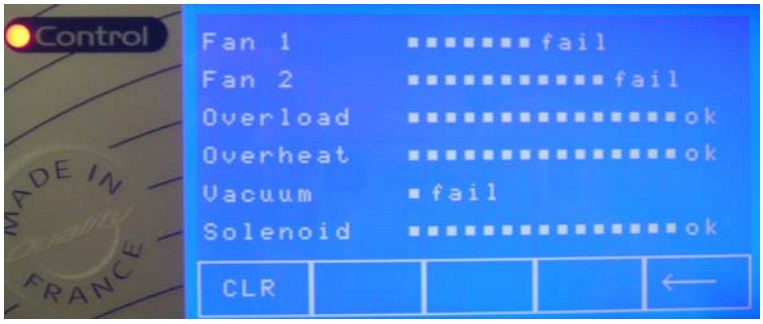

Log Fault :

If the control light turns to red or orange while the appliance is running, it is possible to go into « Log Fault » in order to check which component is defective.

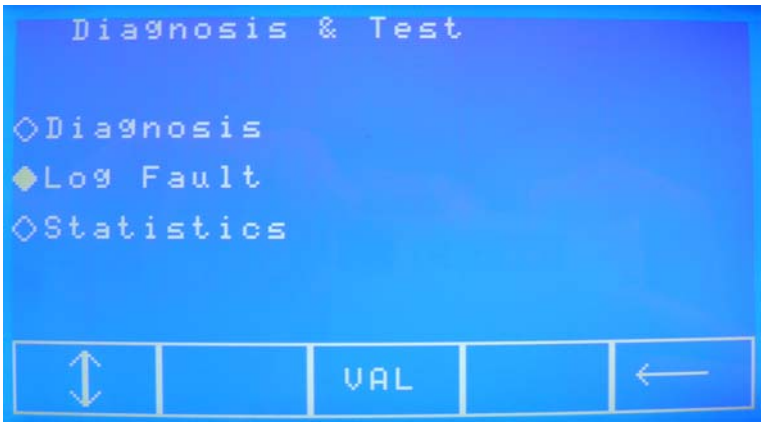

If no components are defective, the following screen will appear:

If, for example, one of the ventilators is defective, “FAULT FAN 1” will appear on the screen. You may then call your supplier and let them know about the failure stated.

In order to erase the message, press PB1 under the « CLR » sign, and the following screen will appear. The control light will also turn to green again.

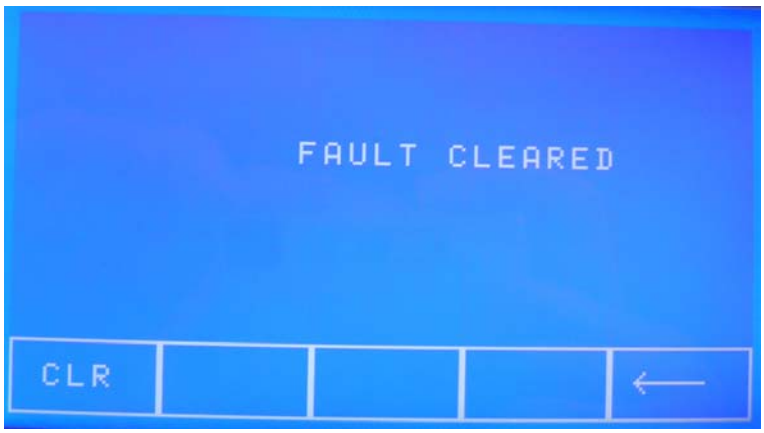

Statistics:

The SP2 also allows getting statistics. Select “Statistics” on the main menu.

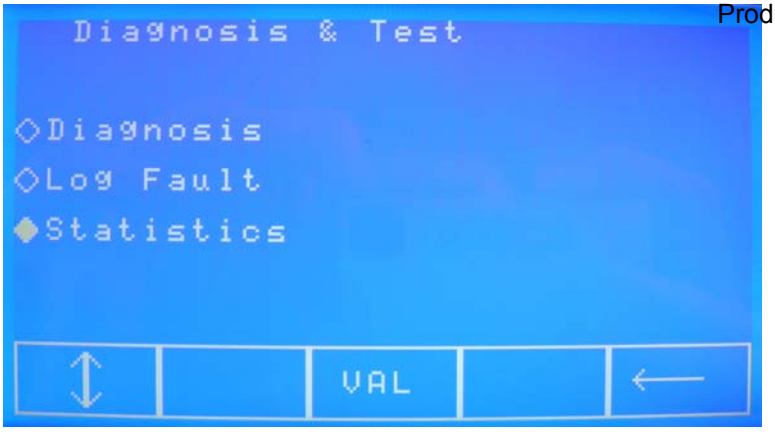

The following screen will appear, giving the total time in use (aggregated time) and the number of treatment sessions performed (treatment sessions):

Programming:

The SP2 allows recording 49 personal programs within the « Beauty &Body care » programs family and 49 personal programs within the « Therapeutic applications » programs family.

Here are the common uses of each PB for all setting to be performed:

1. PB1 is used to select the parameter
2. PB2 decreases the parameter value,
3. PB4 increases the parameter value,
4. PB5 allows going back to previous menu
5. PB3 validates the program

First, select « free programs » within “beauty & body care” or “therapeutic applications”, then select “record”:

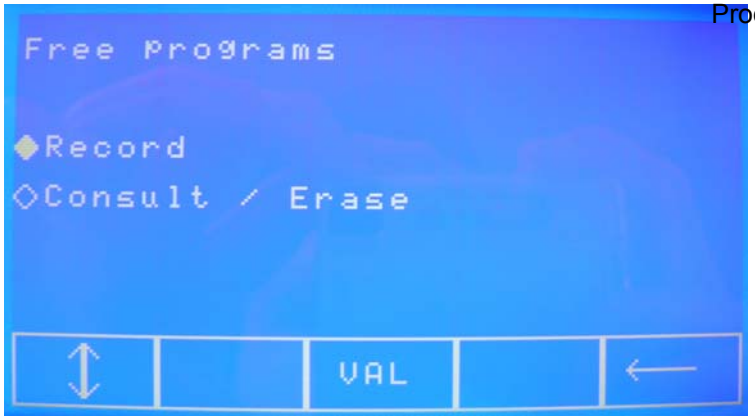

The following screen will appear:

Enter the name of the program. PB 4 is used to get the letters scrolling in alphabetical order. Once the 1st letter is chosen, press PB1 to go onto the next letter, using then PB4 to scroll through the alphabet, etc… Press PB2 (DEL) in order to delete a letter which was chosen by mistake.

Once the name of the program is appearing in full on the screen, press PB3 (VAL) to validate.

The following screen will appear, allowing you to record your own duration, frequency and cycle settings:

- Press once on PB1 to select the duration parameter (the dot gets shaded).

- Use PB2 or PB4 to set the duration required.

Once the setting is correct, press PB 1 to select the frequency parameter.

- Use PB2 or PB4 to set the frequency required.

Then press PB 1 to select the cycle parameter

- Use PB2 or PB4 to set the cycle required

NB: Values can be modified as long as the program is not recorded, going back to the parameter to be modified with PB 1.
Duration values are comprised between 1 & 60 minutes.
Frequency values are comprised between 0 to 5 Hz.
Cycle ratio values are comprised between 10 to 90%.
If Frequency = 0, Cycle ratio must show = C (continuous vacuum).
When setting the frequency on 0, and starting the program, the cycle will automatically switch to continuous mode.

It is possible to record 3 different stages within the same program. Just repeat the operations described above for each stage.
The stage number appears on the screen further to each programming as shown below:

At the end of stage n° 3, the program is automatically recorded and the screen below comes up. The program can be recorded at any time during the programming phase by pressing PB5. For example, if you only wish to have 1 or 2 stages within the same program, simply press PB5 once each program stage parameters will have been set. The program will have the have been recorded with 1 or 2 stages, according to your choice.

When programs have been recorded, you may consult them or erase them. To do so, select « consult / erase » and validate by pressing PB3.

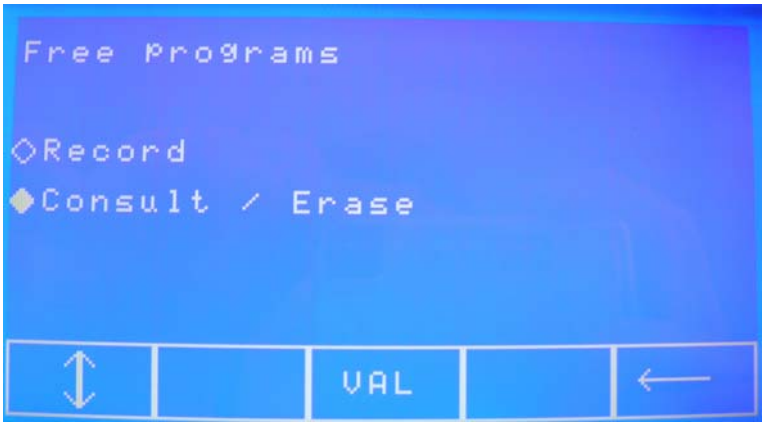

The programs available show up on the screen:

- Press PB4 in order to scroll through all available recorded programs
- Press PB5 to go back to the previous program
- Press PB3 to launch the selected program
- Press PB1 to erase the selected program

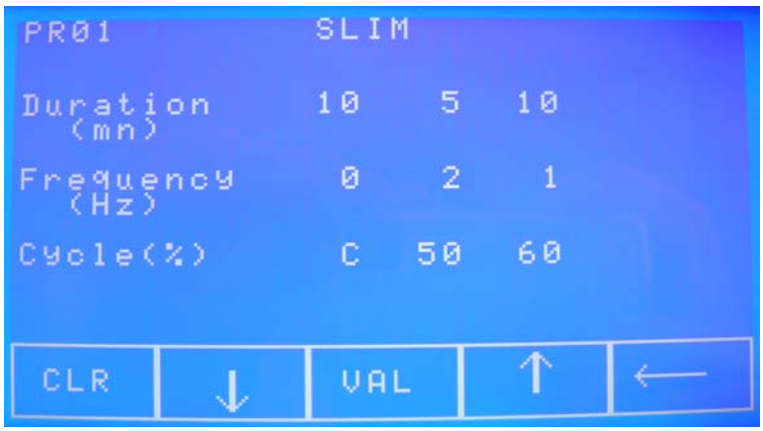

Programmes

1) BEAUTY & BODY CARE

A) CELLULITE
- **a)** NODE STIMULATION
- **b)** LOCAL PETRISSAGE
- **c)** DOUBLE SUCTION CUPS
- **d)** SOFT / TONIC
- **e)** OEDEMA

B) DRAINAGE
- **a)** GANGLION / NODE STIMULATION
- **b)** GLOBAL DRAINAGE
- **c)** REFLEX TREATMENT

C) RELAXING MASSAGE
- **a)** GLOBAL MASSAGE
- **b)** REFLEX TREATMENT

D) HEAVY LEGS
- **a)** GENERAL MASSAGE
- **b)** REFLEX TREATMENT

E) FACE
- **a)** FACE LYMPHATIC DRAINAGE
- **b)** FACE REFLEX TREATMENT (GLOWING COMPLEXION)
- **c)** WRINKLES
- **d)** TONING
- **e)** GANGLION / NODE STIMULATION

F) BUST TREATMENT (OPTIONAL)

2) THERAPEUTIC APPLICATIONS

A) RHEUMATOLOGY
- **a)** SPINE TREATMENT
  - Cervical aches
  - Back aches
  - Lumbago
  - Sciatica
- **b)** UPPER LIMB
  - Shoulder treatment
  - Elbow treatment
  - Wrist treatment
  - Hands and fingers treatment
- **c)** LOWER LIMB
  - Hip treatment
  - Knee treatment
  - Foot treatment

B) TRAUMATOLOGY
  - Ankle sprain
  - Haematoma
  - Scars

C) SPORT
- **a)** MUSCLE STIFFNESS
- **b)** TENDINITIS

D) REFLEX THERAPIES

Typical cellulite treatment session example

Duration of the treatment session: 35 to 45 mn

1. Node stimulation (5 to 10 minutes)

Refer to page 24
This preliminary treatment allows “opening” the lymphatic system.

2. Local petrissage (5 to 10 minutes)

Refer to page 25
This treatment specifically targets the abdomen and thigh region

3. Basic or double suction cups - 2 treatment options (3 to 5 minutes)

- Double suction cups (CC7)

Recommended for old & fibrous cellulite types, localised on the thighs and the abdomen

This is a treatment preliminary to the treatment heads treatment stage, allowing a gain in time and efficiency on the areas concerned.
Start the double suction cups program; apply the 4 double suction cups on the areas to be treated. Leave the cups on for about 30 seconds, then take them away and place them on the following zone to be treated.

- Basic suction cups (C4 to C7)

Recommended for a painful & localised cellulite, accompanied by dermalgia points.

Start the painful cellulite program and choose from the transparent basic suction cups. Apply the Starvac cream, and then apply the suction cup (which size must be selected according to the area being worked on) on the painful area. Once the dermalgia points relieved and the painful sensation taken away, this treatment phase can be suppressed, to be replaced by the treatment head session.

4. Treatment heads (15 to 25 minutes)

Apply Starvac cream on the areas to be treated, and then carry out treatment by working in all directions, as pointed in the diagrams on pages 27 & 28, according to the type of cellulite to be treated.

5. End of treatment session: 5 to 10 minutes

A massage can be performed with the treatment heads, in order to drain the body from all the elements generated by the action of the cellulite treatment, as shown on page 30.

A) CELLULITE

a) GANGLION / NODE STIMULATION

- Duration : 5 to10 minutes
- Frequency : 0,4 Hz
- Cycle : 50 %
- Treatment accessory : basic suction cup

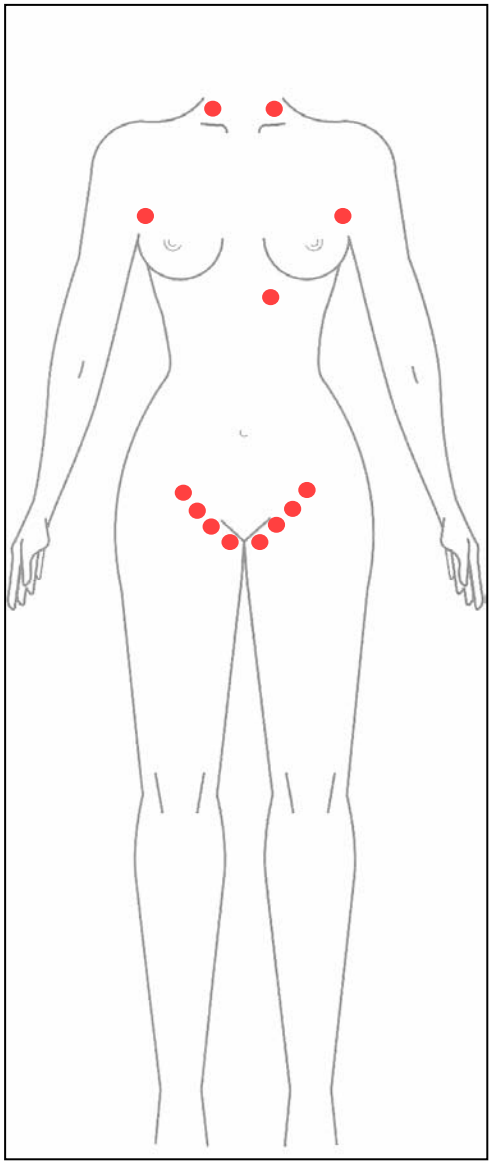

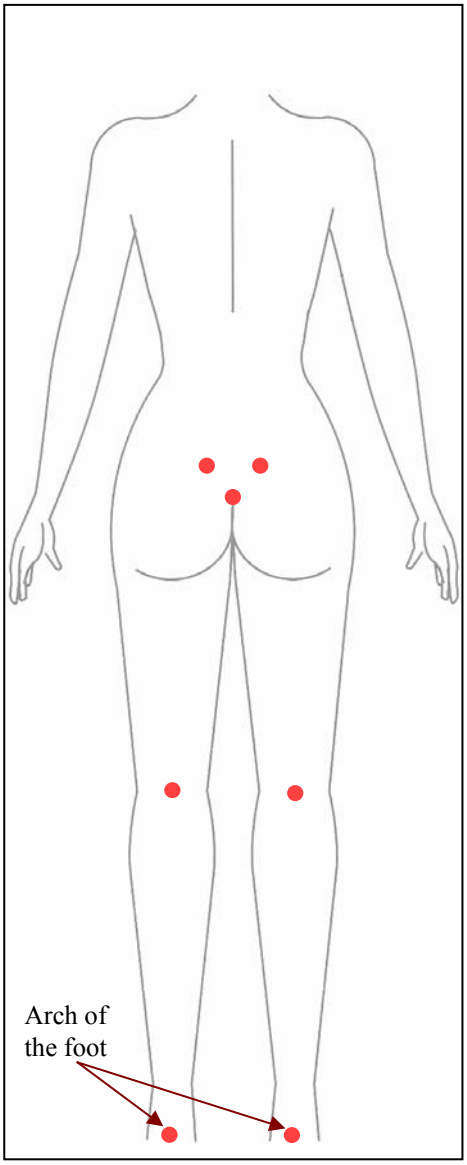

NOTES :

1. This treatment is performed with the basic cups, while leaving them on each of the indicated spots, counting 7 pulsations on each point.
2. Perform small circular movements while the cup is applied to the particular spot being treated
3. The cup size must be chosen according to the area requiring treatment.

b) LOCAL PETRISSAGE

- Duration : 10 minutes
- Frequency : 0,6 Hz
- Cycle : 50 %
- Treatment accessory : Basic suction cup

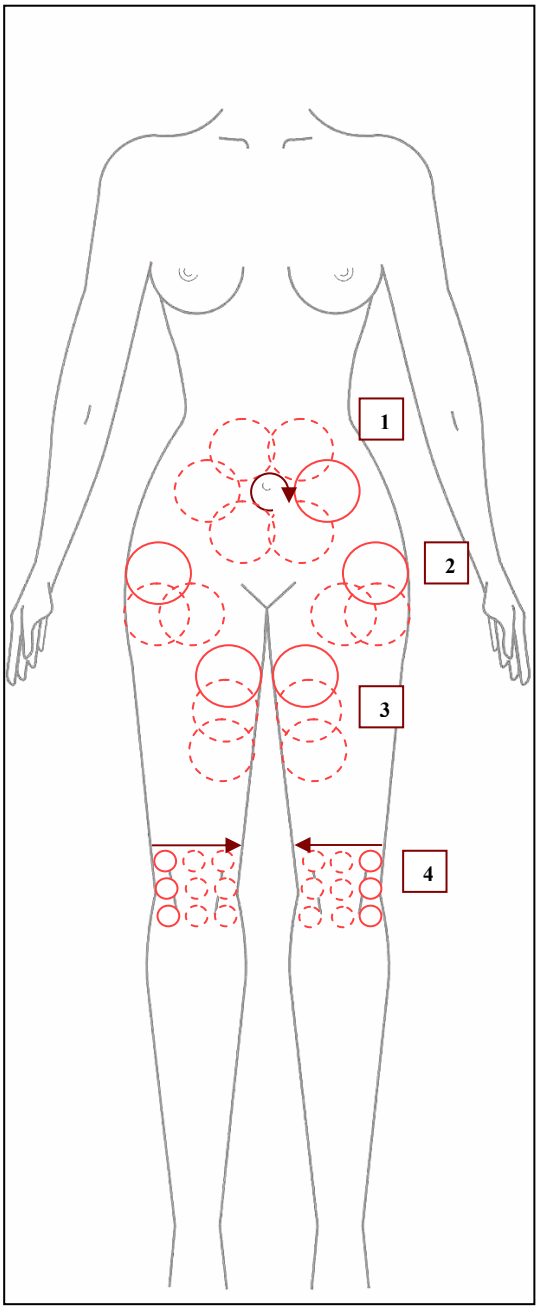

NOTES

1. This treatment is performed with the basic cups, while massaging the areas pointed out, and respecting the direction of the arrows (digestion passage on the abdomen and towards the interior of the knees).
2. The cup size must be chosen according to the area requiring treatment.
3. The knee treatment (B) is optional , as it will only be performed on clients presenting a problematic knee area with fatty deposits.

c) DOUBLE SUCTION CUPS

- Duration : 5 minutes
- Frequency : 1.2 Hz
- Cycle : 70%
- Treatment accessory : Double Suction Cups

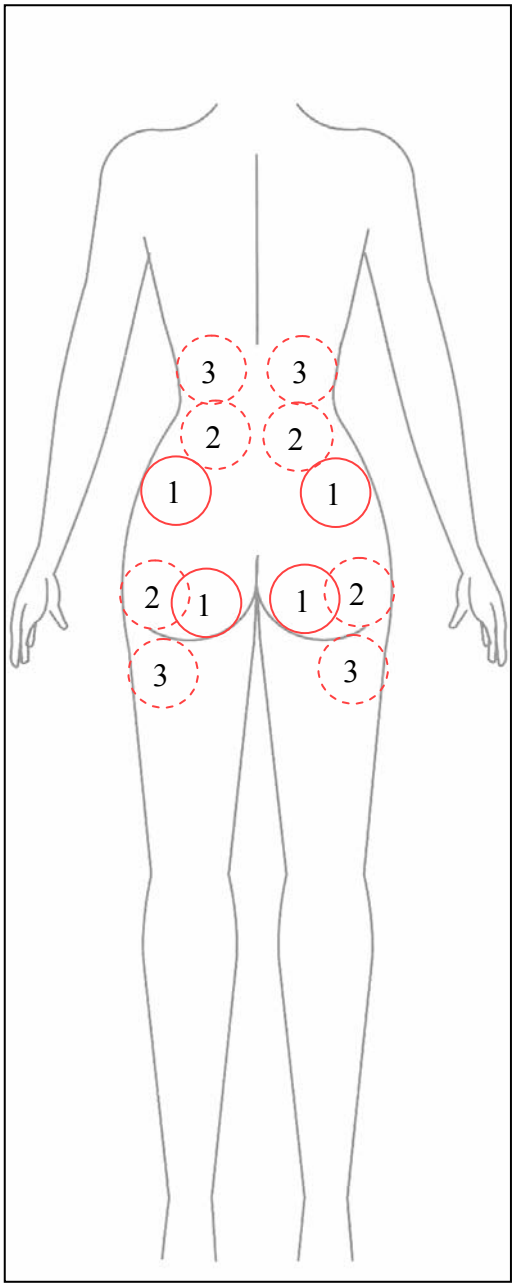

NOTES

1. Recommended for old & fibrous cellulite types, localised on the thighs
2. This is a treatment preliminary to the roller suction head treatment stage, allowing a gain in time and efficiency on the areas concerned, should it be required.
3. Start the double suction cups programme and apply the 4 double suction cups on the areas to be treated. Leave the cups on for approximately 30 seconds, then take them away and place them on the following zone to be treated, as soon as the skin begins to redden.

d) TREATMENT HEADS

SOFT / TONIC CELLULITE

- Duration : 20 to 25 mn
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

A

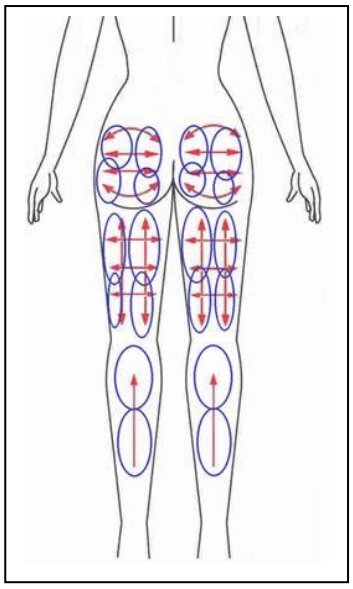

B

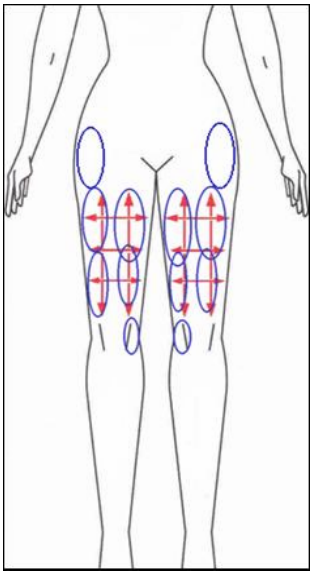

C

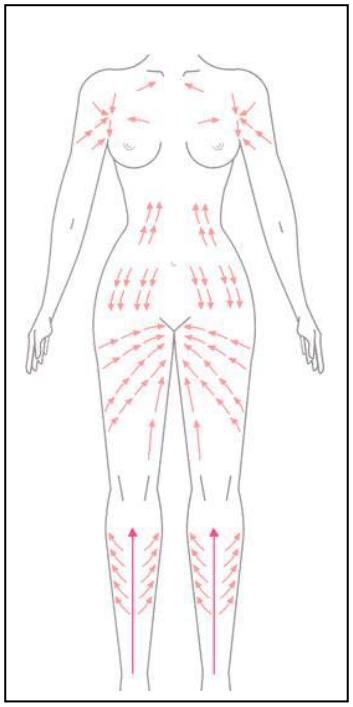

D

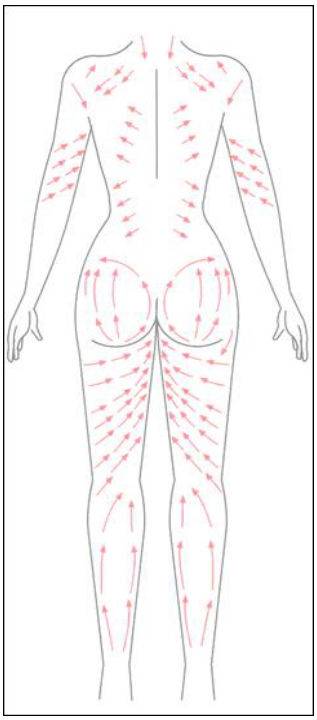

NOTES:

1. During 10 to 15mn, a local petrissage must be performed, working the targeted cellulite zones in all directions as shown in diagrams A & B. Not only should the arrow diagrams be followed, but we recommend drawing figure of 8 shapes on the limb as well as oblique strokes upwards and downwards, within the blue circle zones, until each targeted area becomes very red.
2. Once all the problematic zones have been treated, an overall lymphatic drainage must be performed for the rest of the treatment time, as shown in diagrams C & D, which will allow natural evacuation of all the elements liberated during the previous stages of the treatment.
3. This treatment is performed in pulsed mode by default. Once the painful sensations have disappeared on the cellulite area (if any felt), this treatment can then be performed in continuous mode.

OEDEMA CELLULITE

- Duration : 20 to 25 mn
- Frequency : 2.2 Hz
- Cycle : 40 %
- Treatment accessory : Treatment Head

A

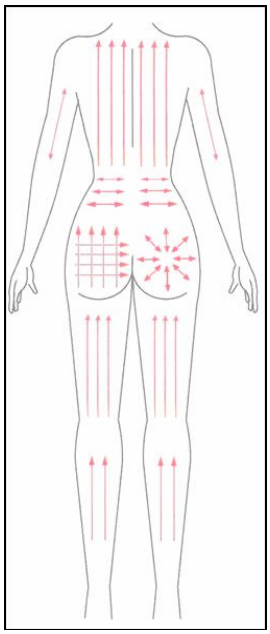

B

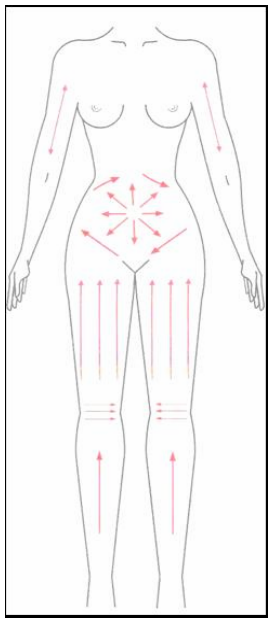

C

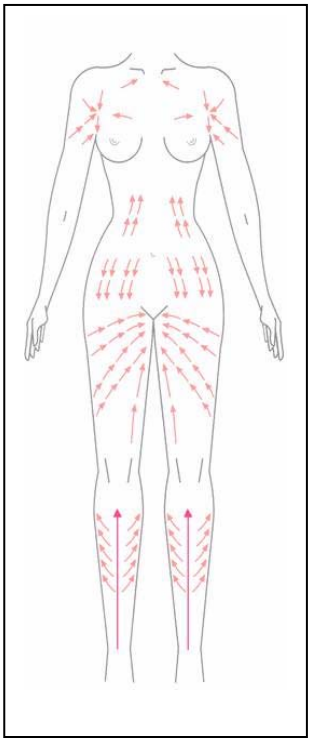

D

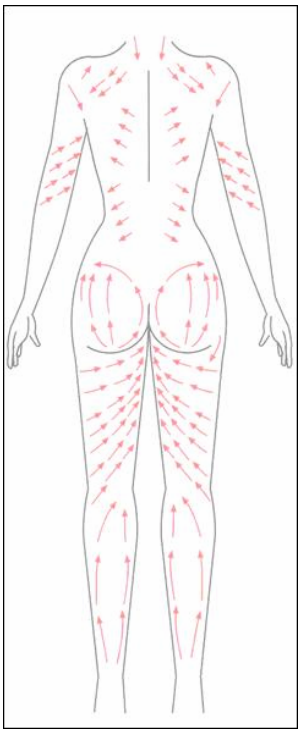

NOTES:

1. During 10 to 15mn, a local petrissage must be performed, working the targeted cellulite zones in all directions as shown in diagrams A & B. Not only should the arrow diagrams be followed, but we recommend working each zone from bottom to top, until each targeted area becomes slightly red.
2. Once all the problematic zones have been treated, an overall lymphatic drainage must be performed for the rest of the treatment time, as shown in diagrams C & D, which will allow natural evacuation of all the elements liberated during the previous stages of the treatment.

B) LYMPHATIC DRAINAGE

1. NODE STIMULATION

- Duration : 10 minutes
- Frequency : 0.4 Hz
- Cycle : 50%
- Treatment accessory : Basic suction cup

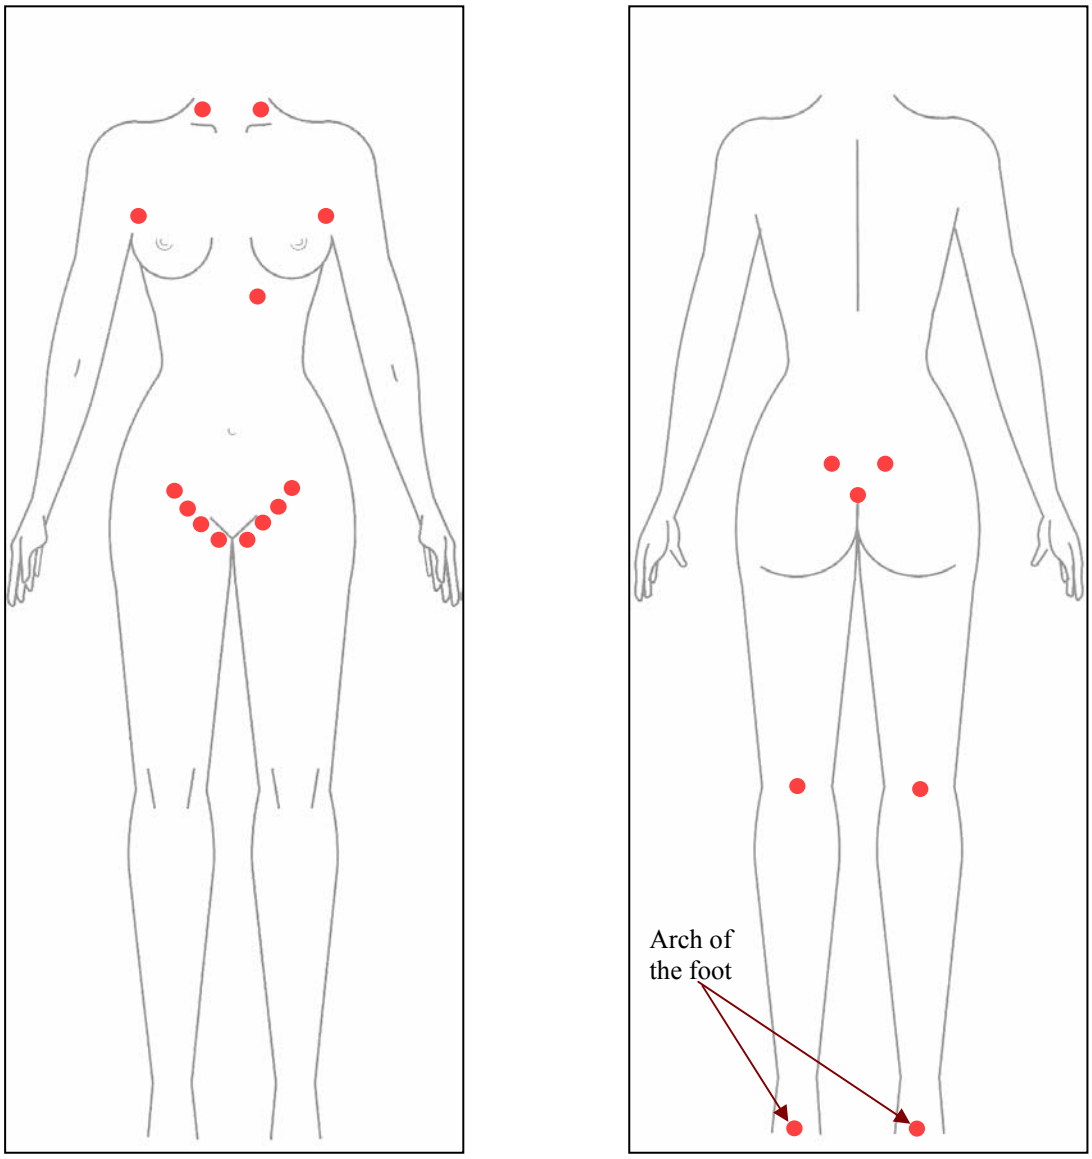

NOTES

1. This treatment is performed with the basic cups, while leaving them on each of the indicated spots, counting 7 pulsations on each point.
2. Perform small circular movements while the cup is applied to the particular spot being treated
3. The cup size must be chosen according to the area requiring treatment.

2. GLOBAL DRAINAGE

- Duration : 35 minutes
- Frequency : 2.2 Hz
- Rapport de cycle : 50 %
- Treatment accessory : Treatment Head

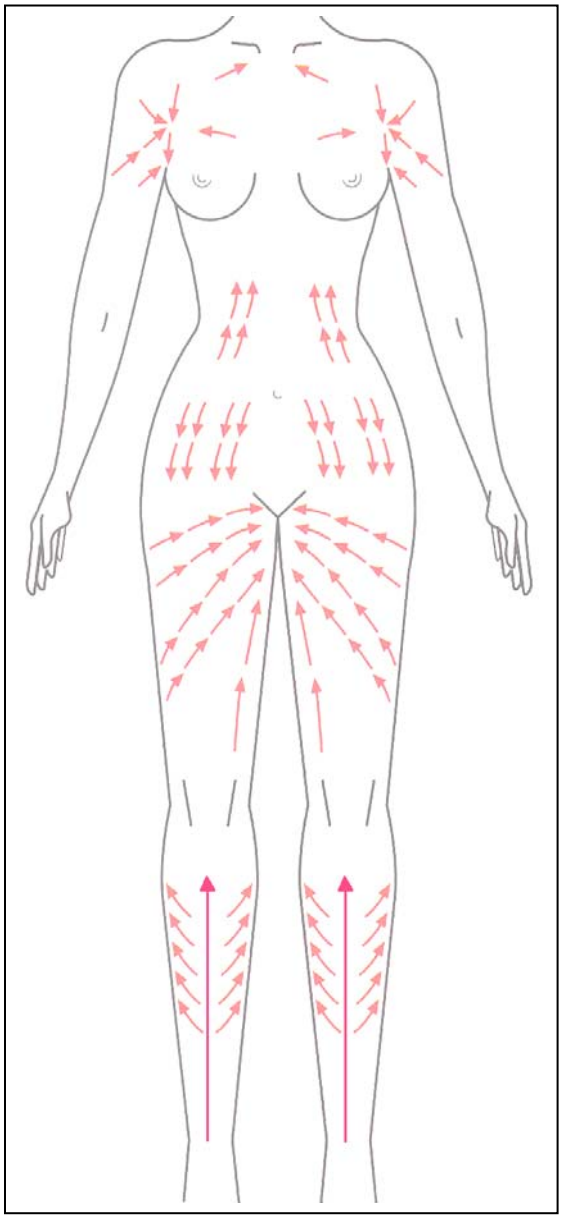

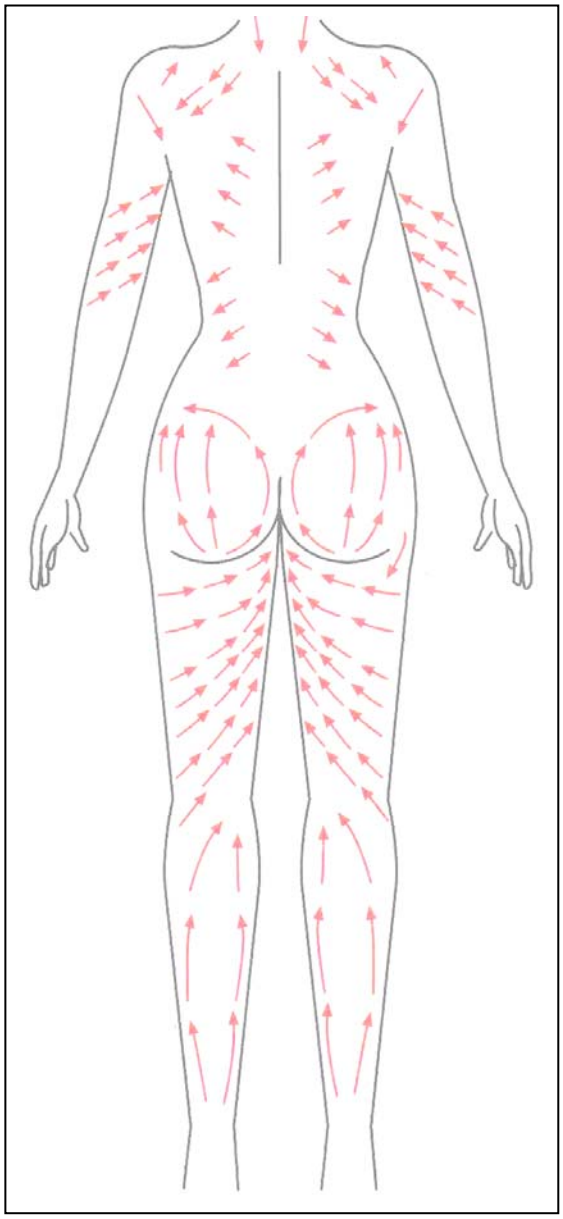

NOTES

1. Adapt the vacuum high value according to how the customer feels
2. Work in all directions as shown in the diagrams above, with slow and continuous movements.

3. REFLEX TREATMENT (3 PHASES)

PHASE 1. TREATMENT BY AREAS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50 %
- Treatment accessory : Treatment Head / Basic Suction Cup

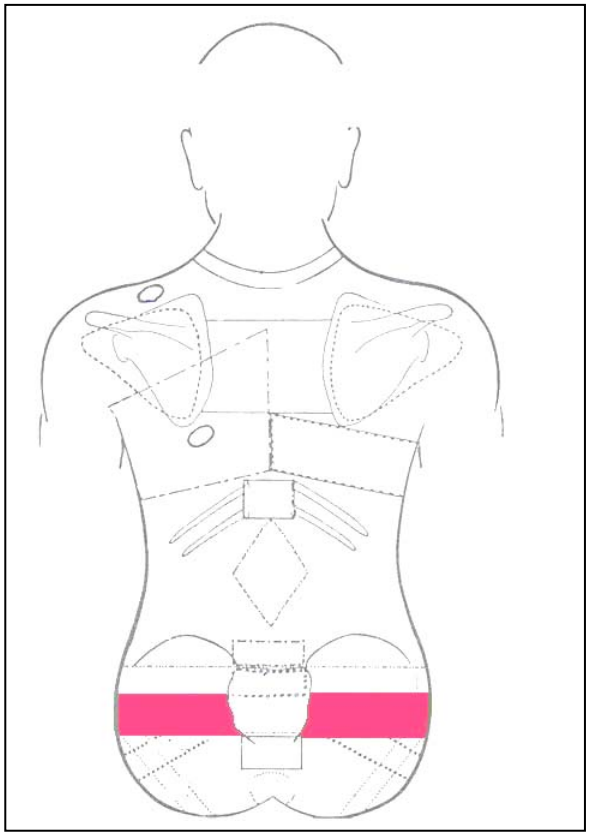

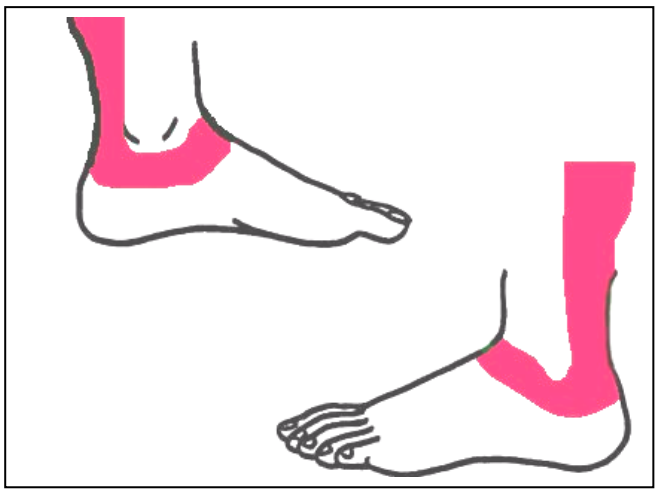

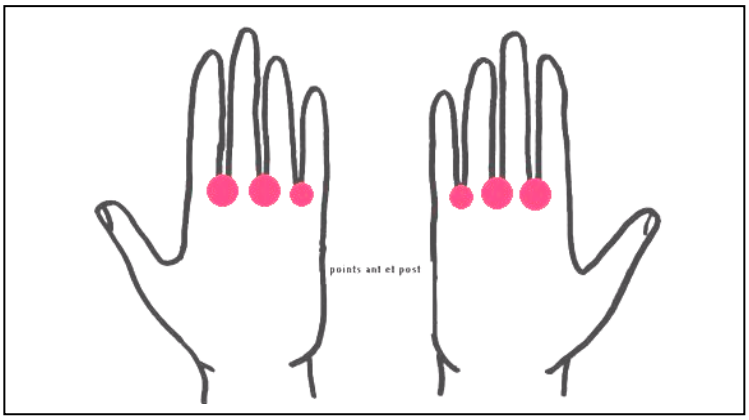

NOTES

PHASE 2. TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2.2 Hz
- Cycle : 70 %
- Treatment accessory : Treatment Head

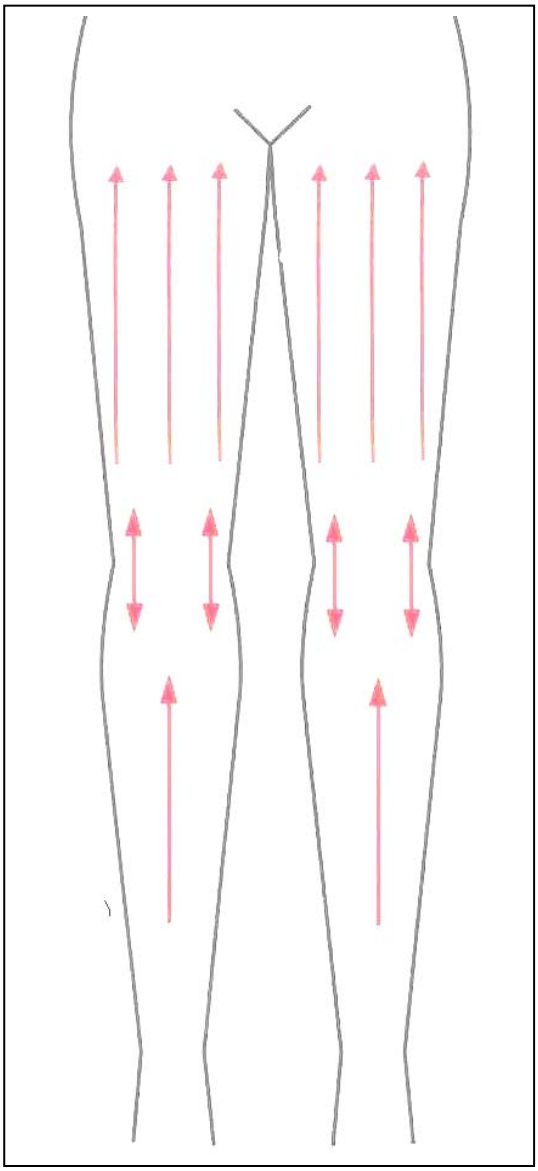

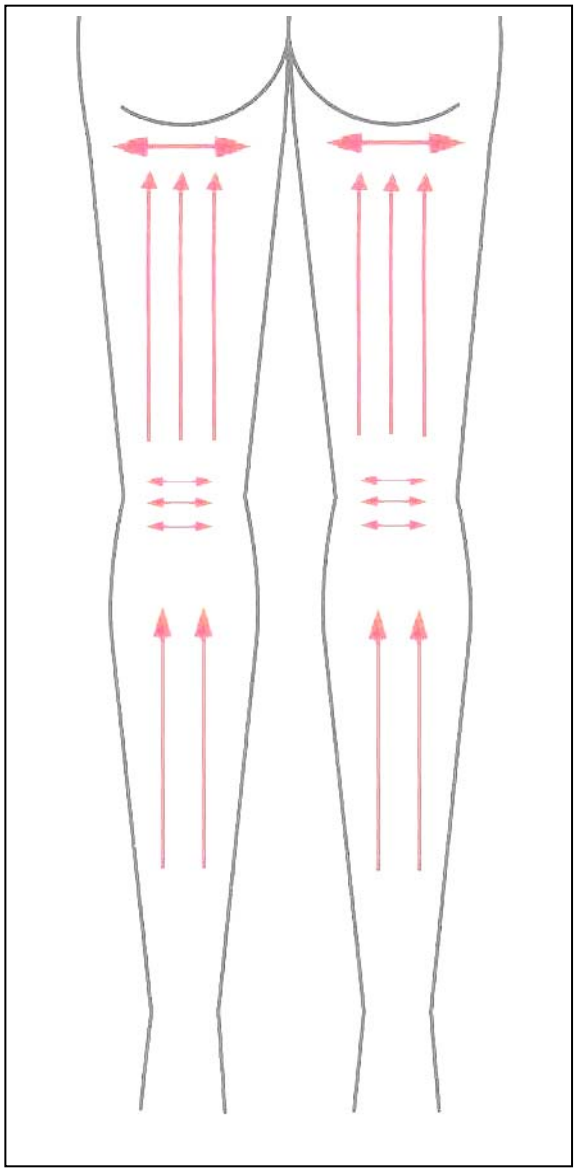

NOTES :

PHASE 3. TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Basic Suction Cup

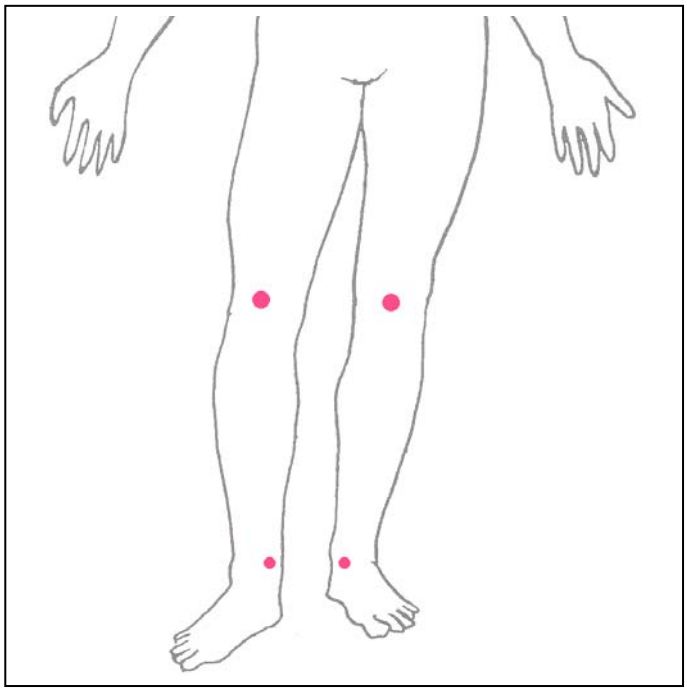

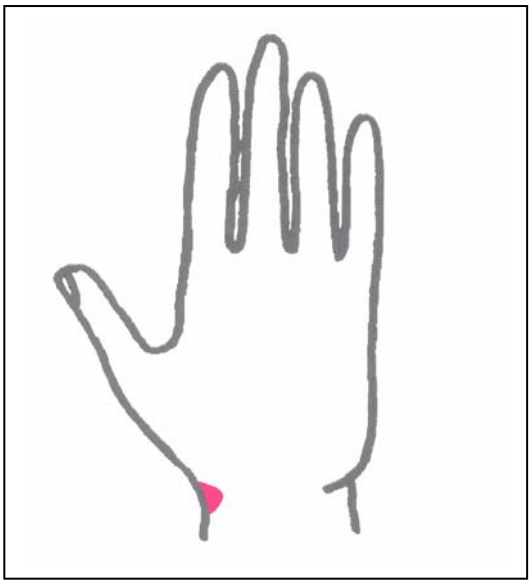

NOTES :

C) RELAXING MASSAGE

1. GLOBAL MASSAGE

- Duration : 15 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

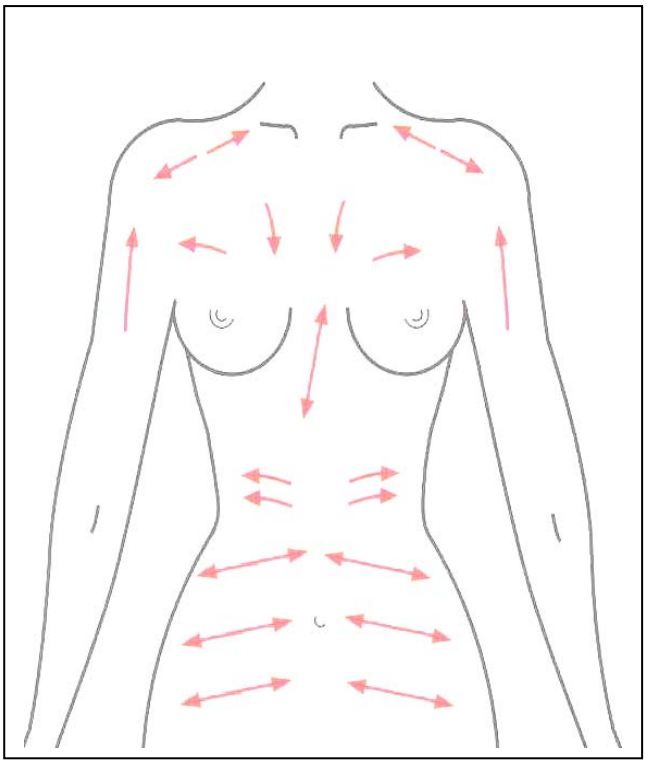

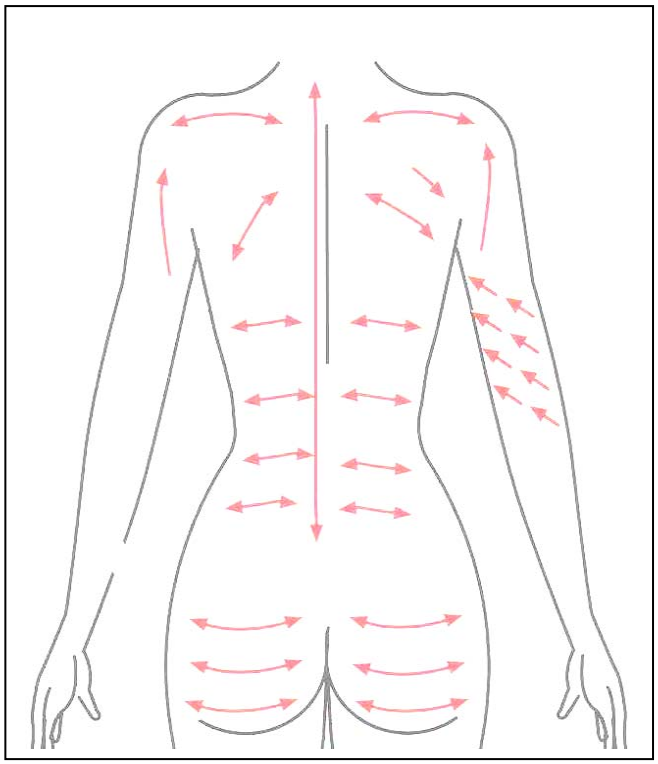

NOTES :

2. REFLEXE TREATMENT (2 PHASES)

PHASE 1. TREATMENT BY STOKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 70 %
- Treatment accessory : Treatment Head

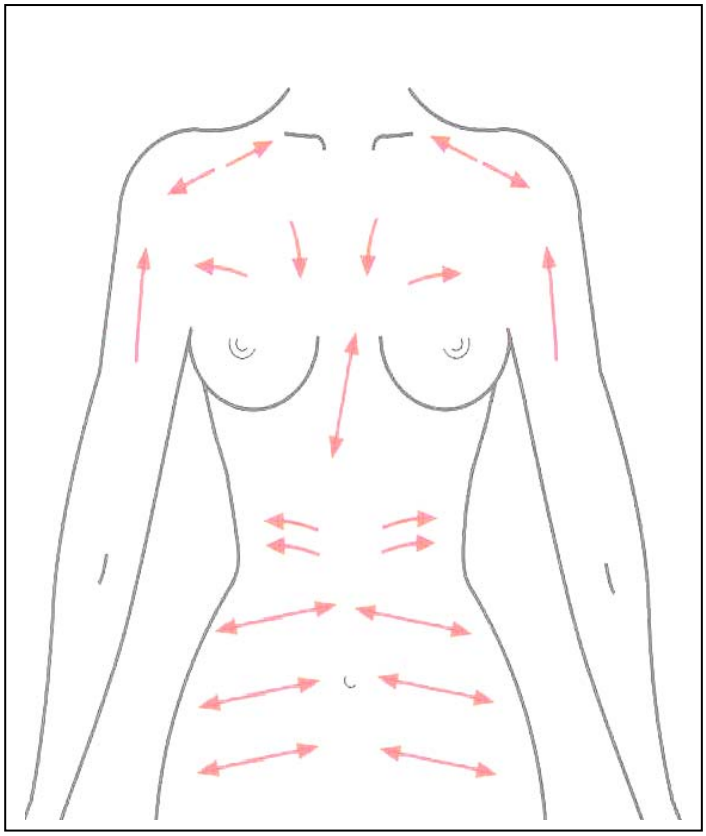

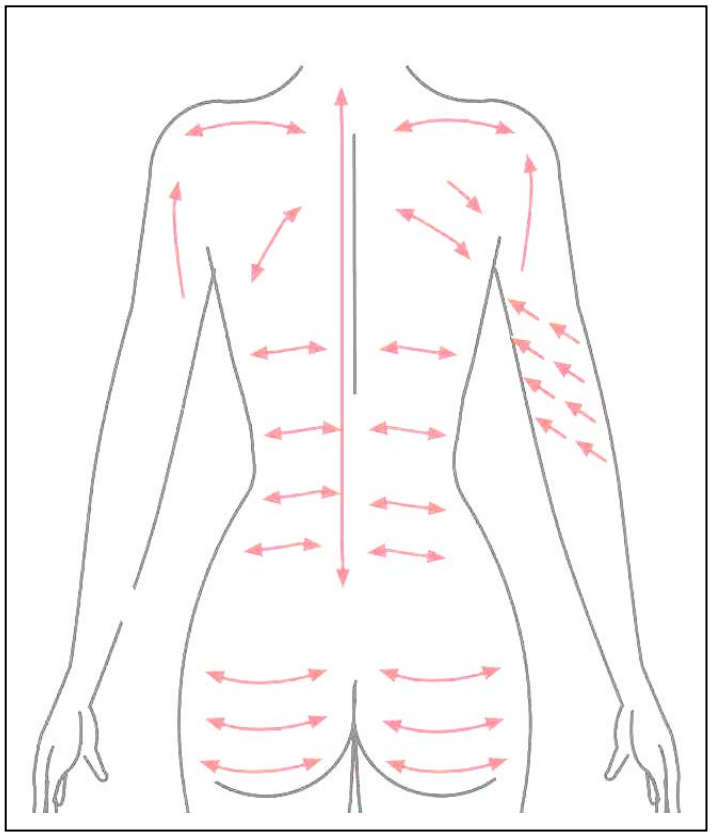

NOTES :

PHASE 2. TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Basic suction cup

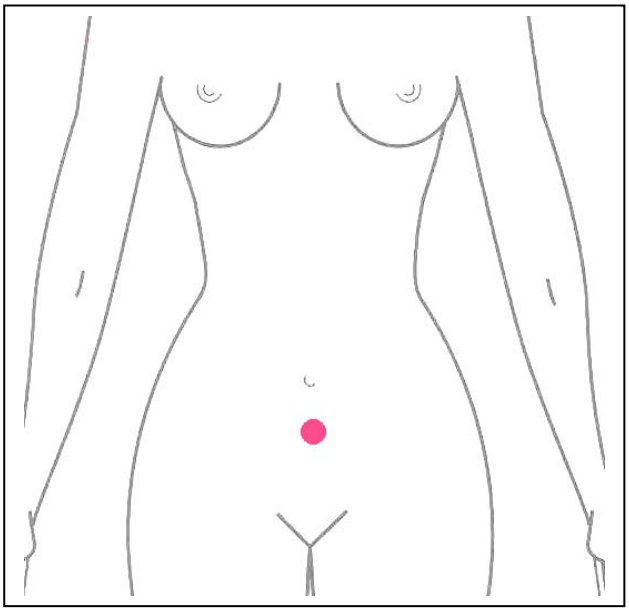

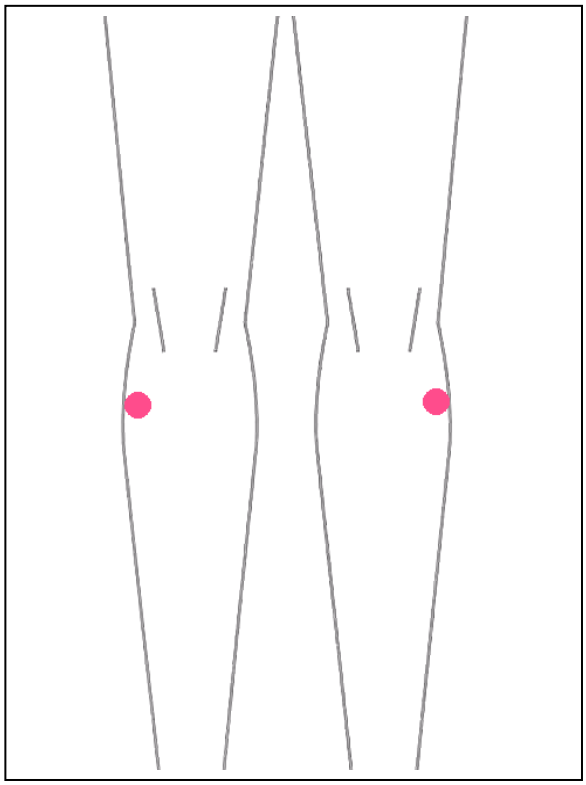

NOTES :

D) HEAVY LEGS

1. GENERAL MASSAGE (2 PHASES)

Stage 1
- Duration : 10 minute
- Frequency : 0,5 Hz
- Cycle : 50%

Stage 2
- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50 %

- Treatment accessory: Treatment Head / Basic Suction Cup

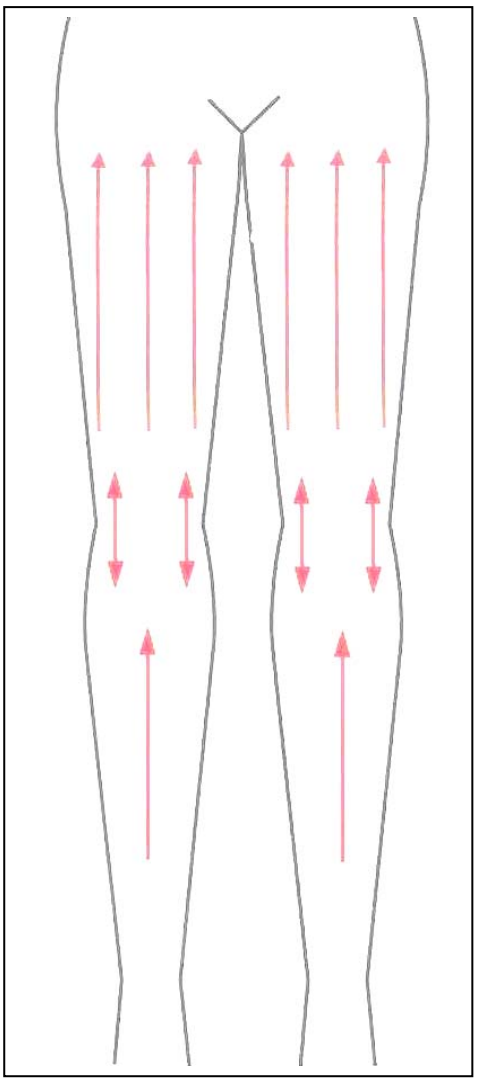

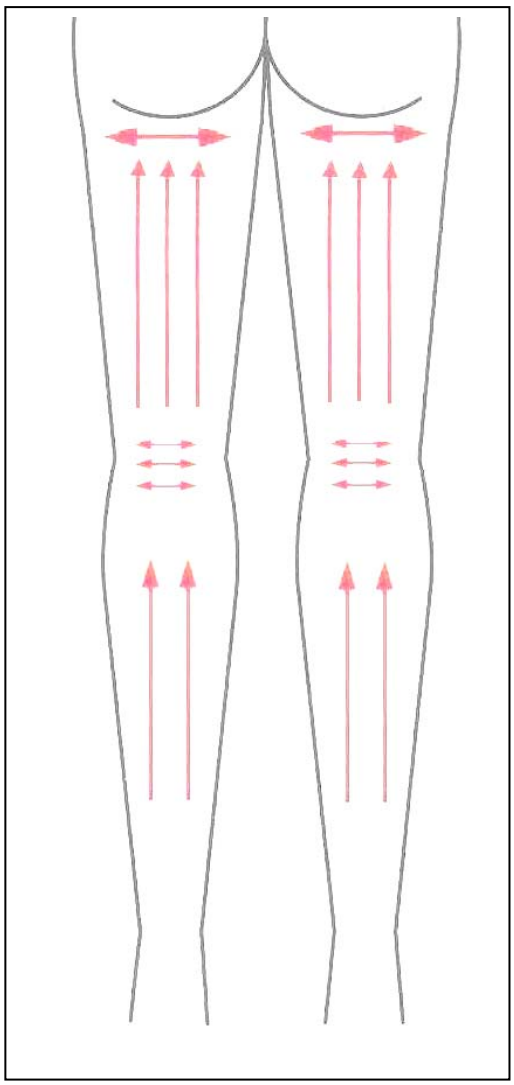

NOTES :

1. Maximum vacuum high value at 400mbar. The value should be adjusted according to the customer's sensitivity.

2. REFLEX TREATMENT (3 PHASES)

PHASE 1. TREATMENT BY AREAS

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment Accessory : Treatment head / Basic Suction Cup

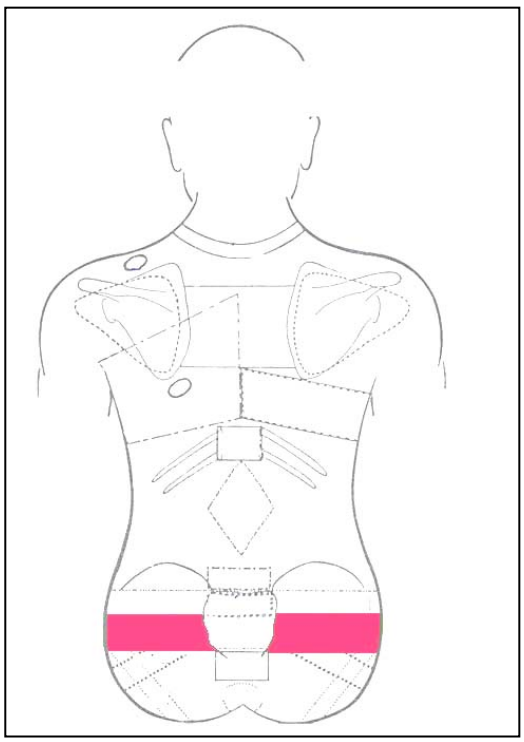

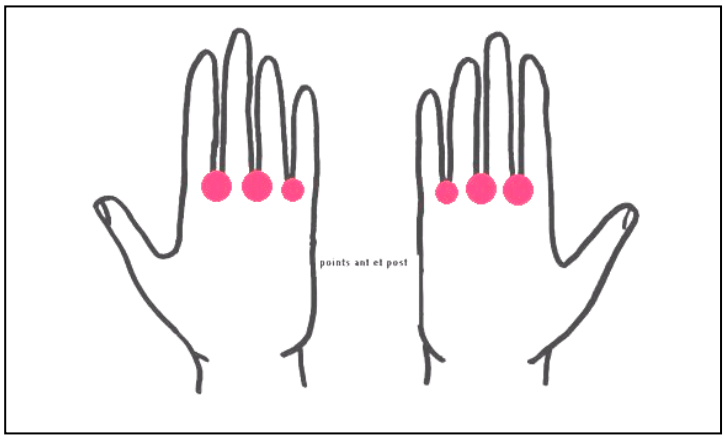

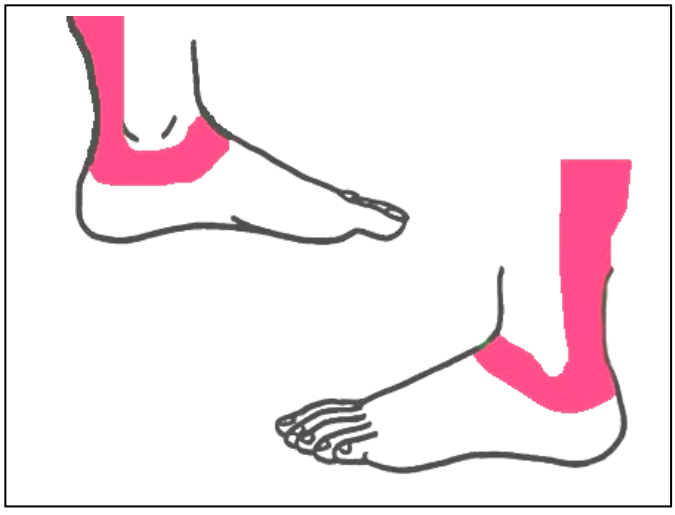

NOTES :

PHASE 2. TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

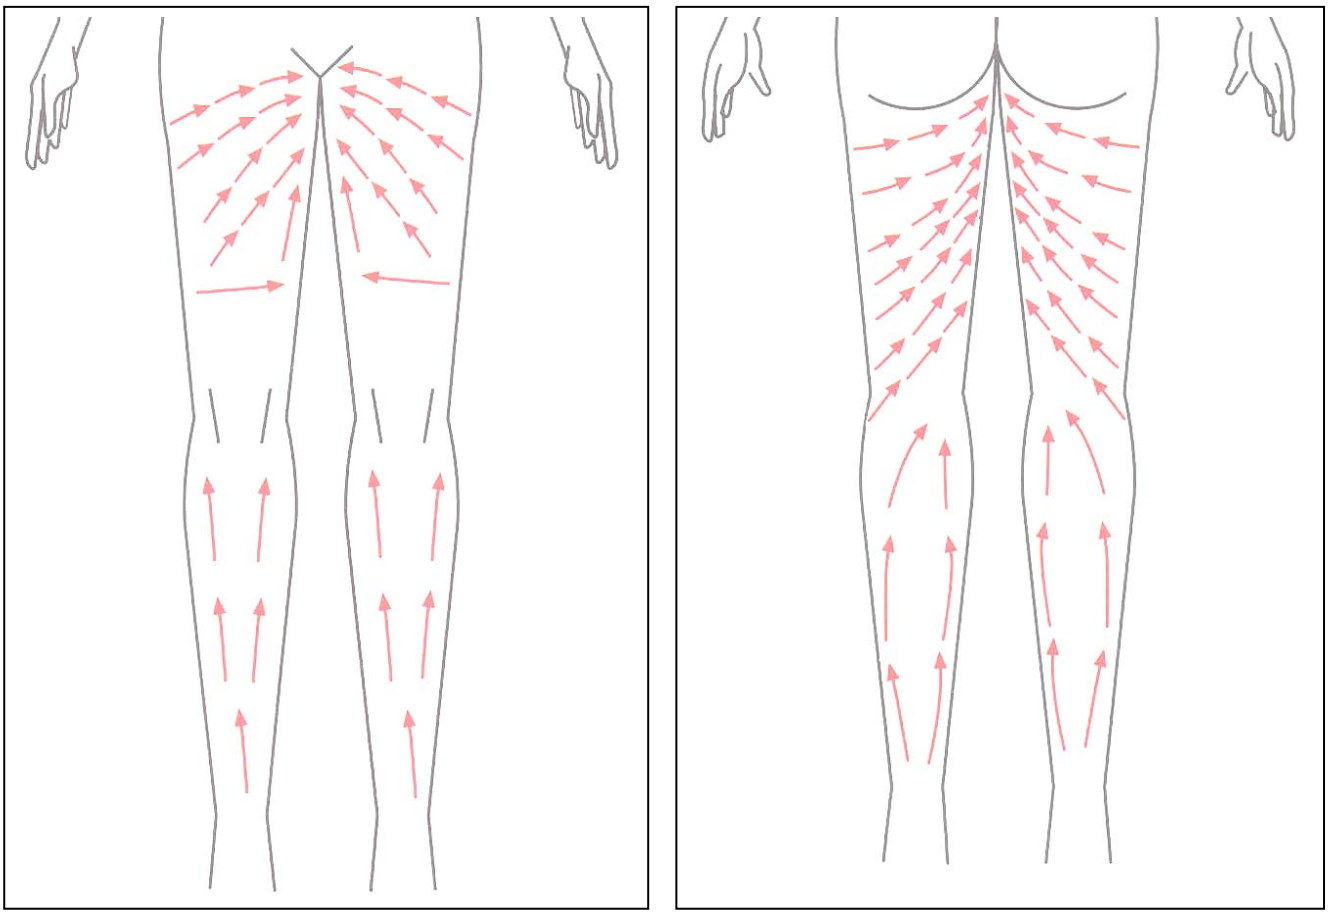

NOTES :

PHASE 3. TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment Accessory : Basic Suction Cup

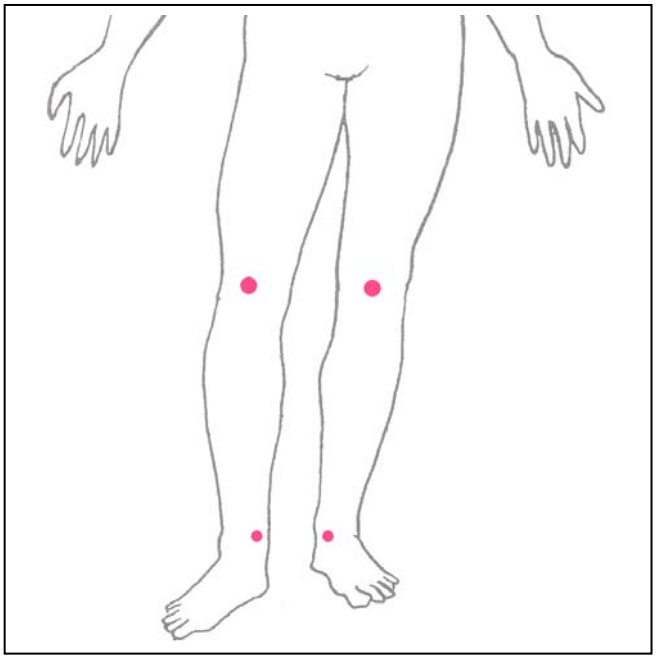

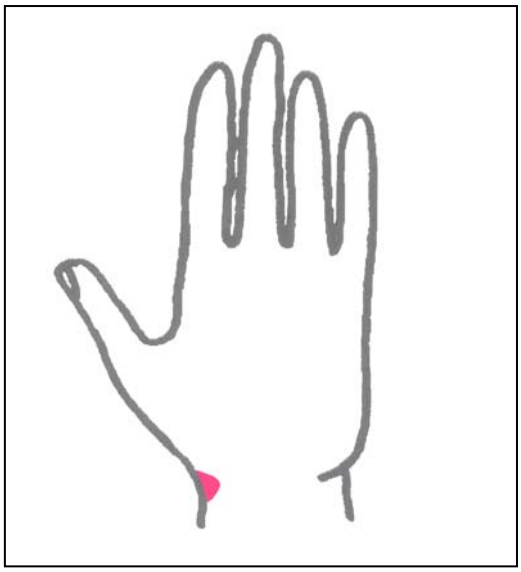

NOTES :

E) FACE

1. Ganglion / Node stimulation

- Duration : 5 minutes
- Frequency : 0,7 Hz
- Cycle 50 %
- Treatment accessory : Basic Suction Cup

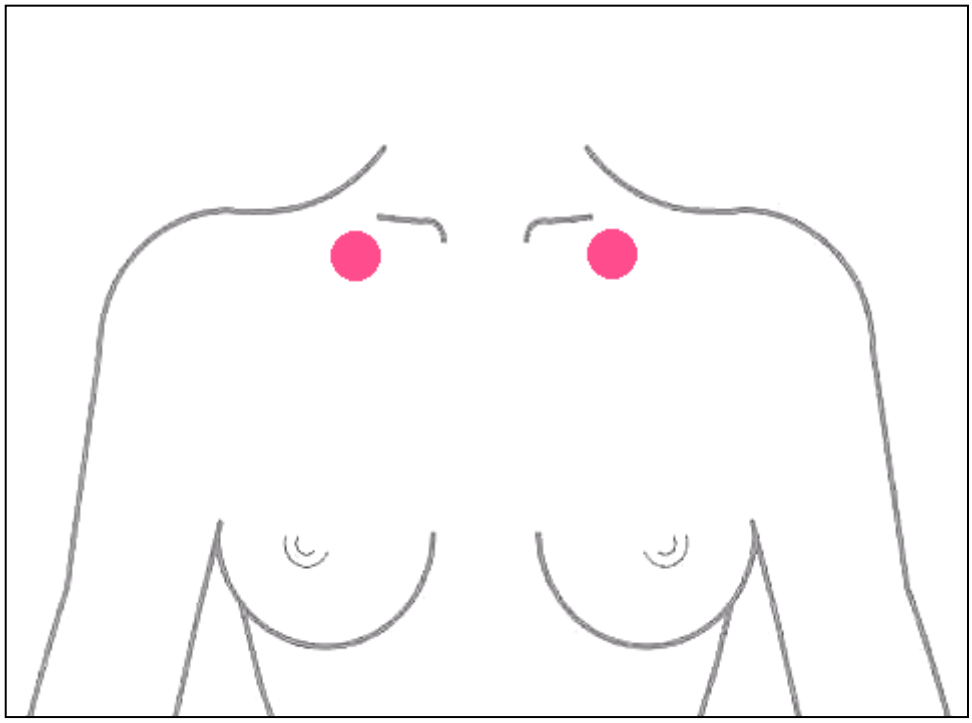

NOTES :

1. This treatment is performed with the basic cup C4, leaving it on each of the indicated spots, counting 7 pulsations on each point.
2. Perform small circular movements while the cup is applied to the particular spot being treated

2. WRINKLES

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Suction cup C1

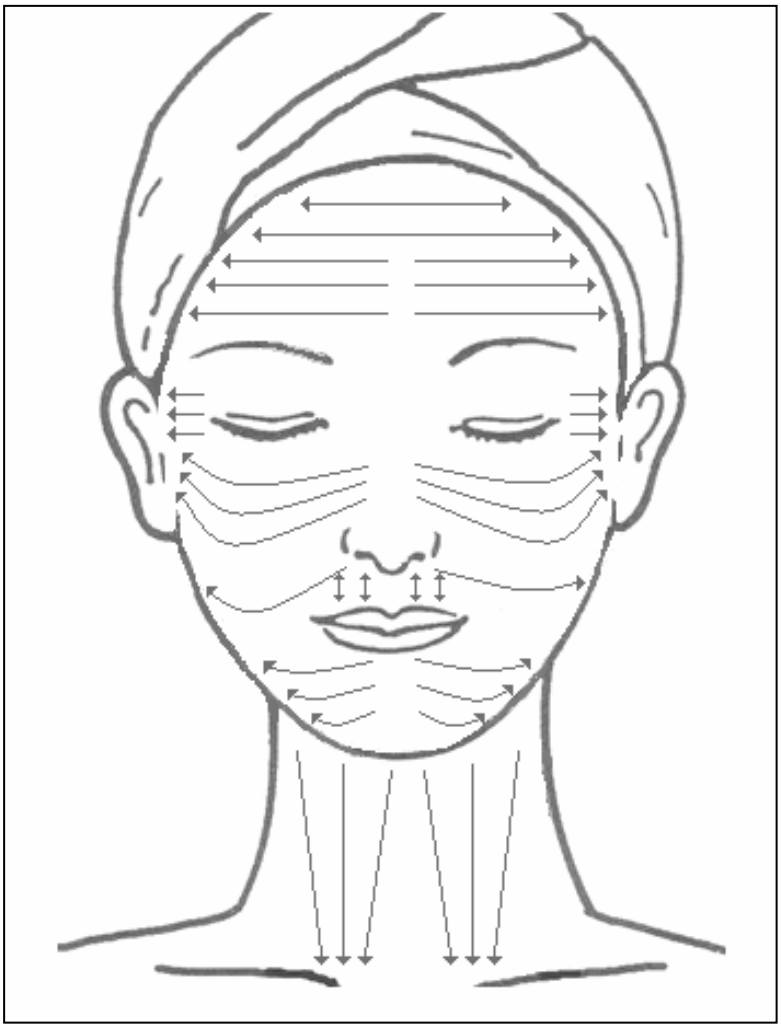

NOTES :

1. Follow each wrinkle line with smoothing movements
2. Repeat the smoothing movements for the treatment duration

3. TONING

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Suction cup C2

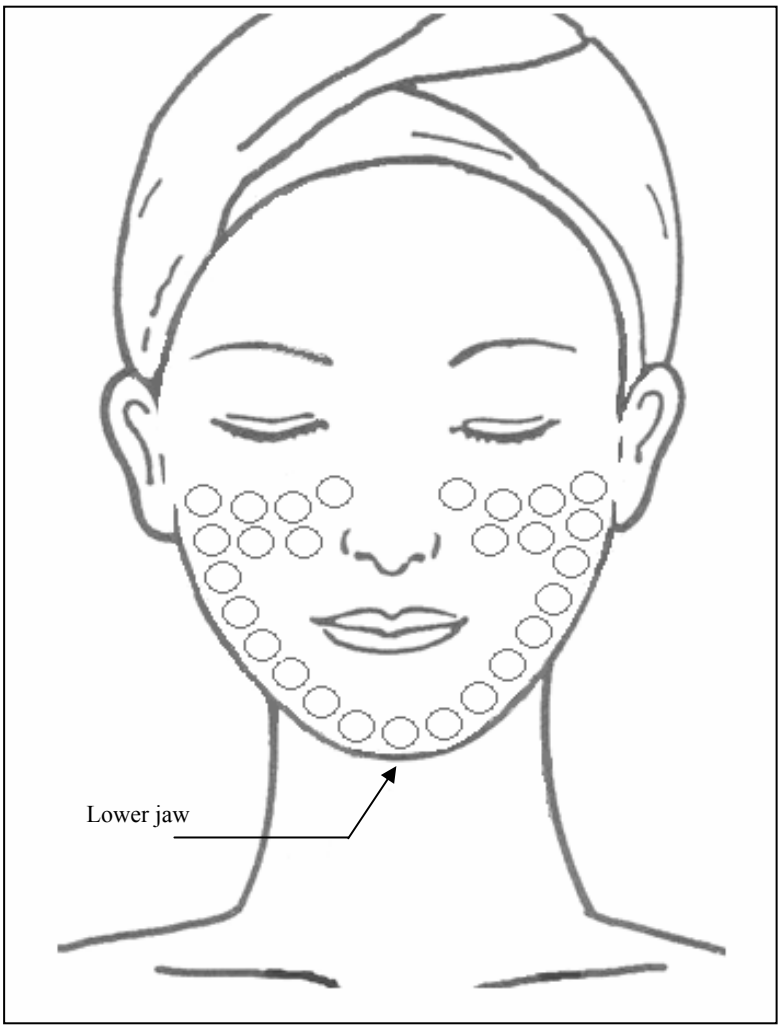

NOTES :

1. This treatment must be performed with light tapping movements in order to tone the skin and reduce double chins.

4. FACE LYMPHATIC DRAINAGE

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Suction cup C3

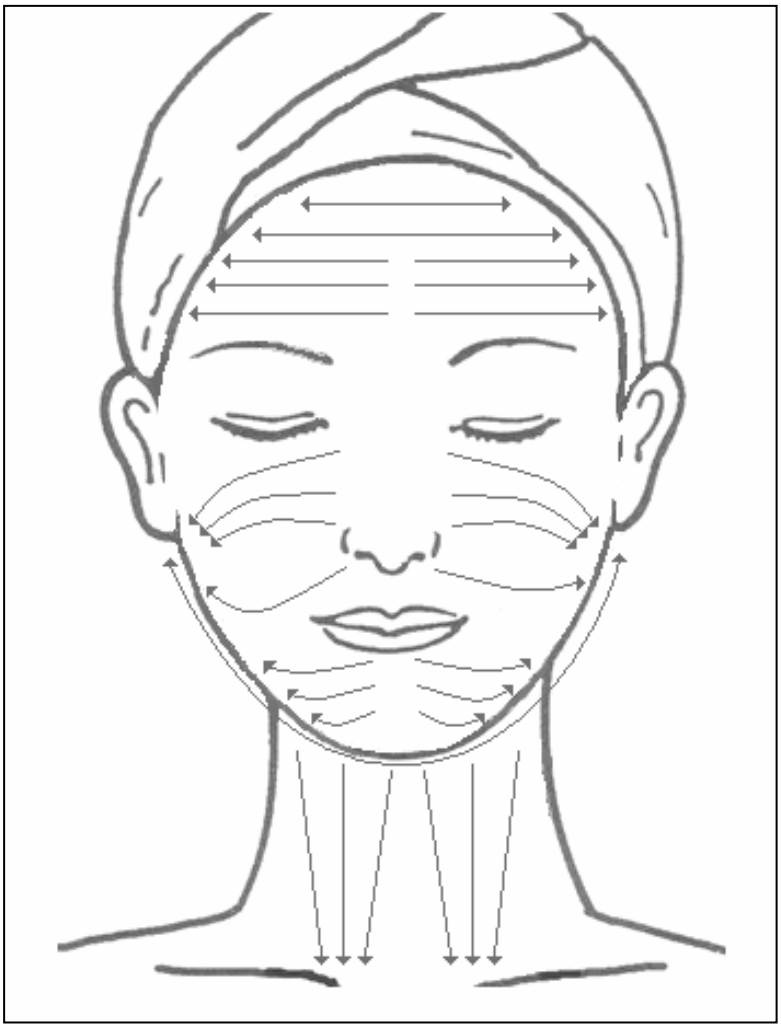

NOTES :

1. Smoothing movements performed from the centre of the face towards each side and down the neck towards the ganglions.

5. FACE REFLEX TREATMENT

- Duration : 10 minutes
- Frequency : 1.4 Hz
- Cycle : 50%
- Treatment accessory : Basic suction cup C3

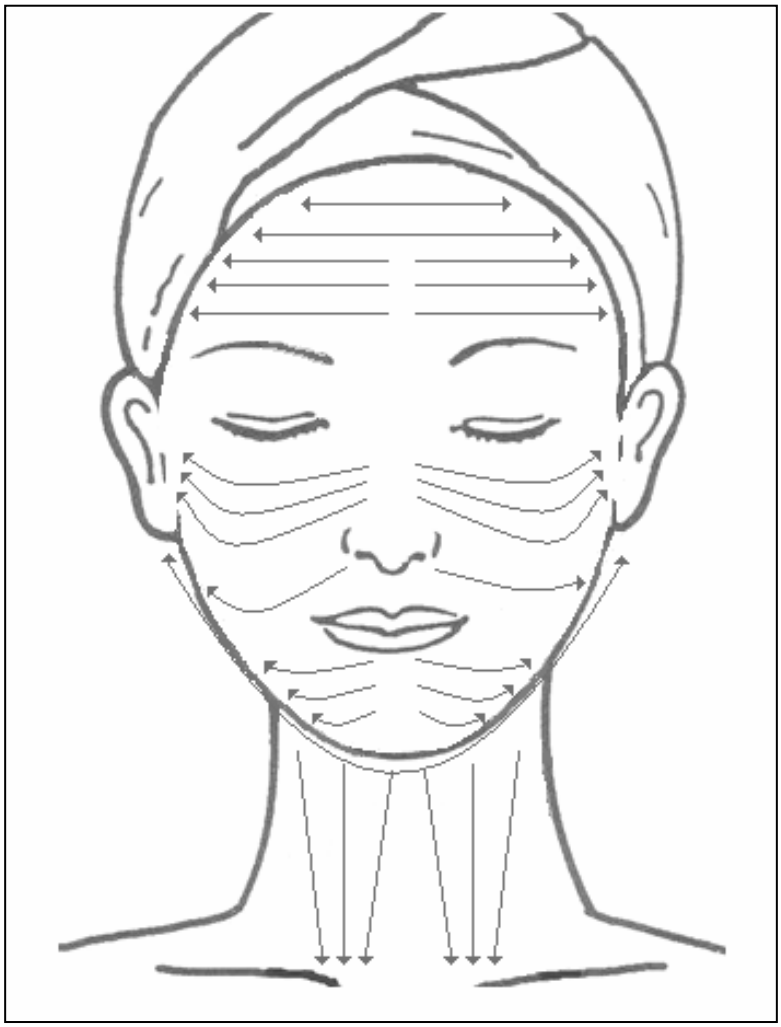

NOTES :

BUST TREATMENT

STIMULATION

- Duration : 10 minutes
- Frequency : 0,8 Hz
- Cycle 70 %
- Treatment accessory : Bust suction cup

TONIFICATION

- Duration : 5 minutes
- Frequency : 0,6 Hz
- Cycle 40 %
- Treatment accessory : Bust suction cup

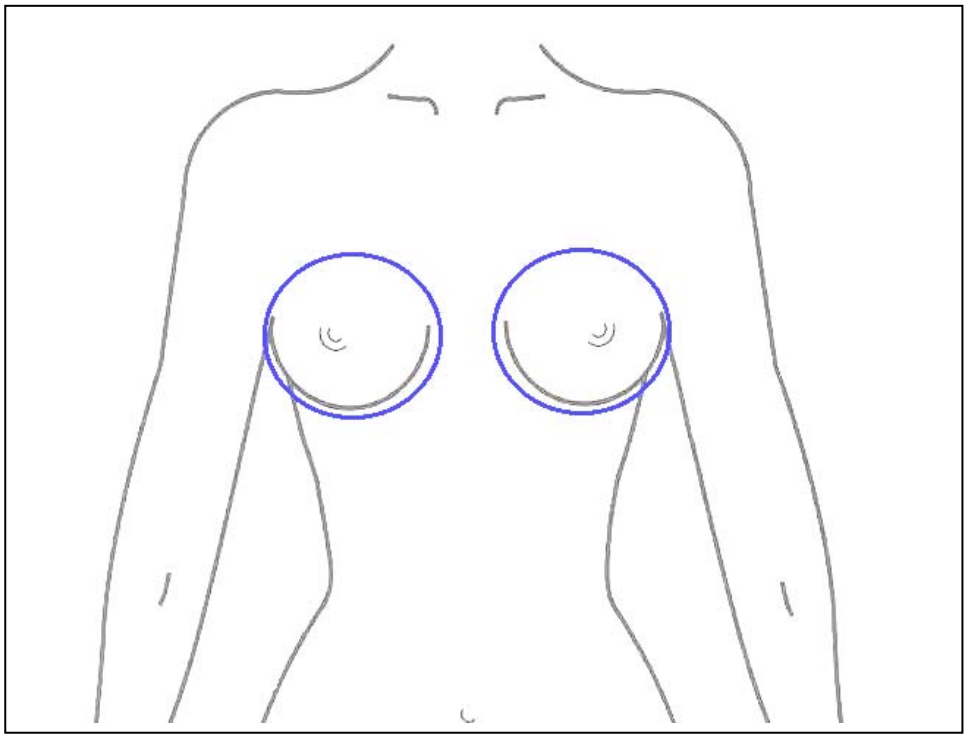

NOTES:

This optional treatment (which shall be activated with a special code given if the appliance is ordered with this option) is performed with 2 special bust suction cups that must placed on each breast.
This treatment has been devised to stimulate and tone up the bust in order to increase breasts volume and firmness.
This program has been restrained regarding the parameters and maximum depression settings, in order to prevent this very sensitive organ from treatments implemented with wrong settings.
The frequency setting must not be < 0, 6 Hz and the maximum depression setting must not be > 300 millibars.
If the settings are not as indicated above, the appliance will start blipping and will stop working. If this happens, please press START/STOP; modify the frequency and depression parameters so that they fit within the given indications, then press START/STOP to start the treatment again.

We recommend 3 treatment sessions per week, leaving 1 day off in between each session, and a maximum of 15 treatment sessions.

2) THERAPEUTIC APPLICATIONS

A) RHEUMATOLOGY

a) SPINE TREATMENT

CERVICAL ACHES

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : treatment head

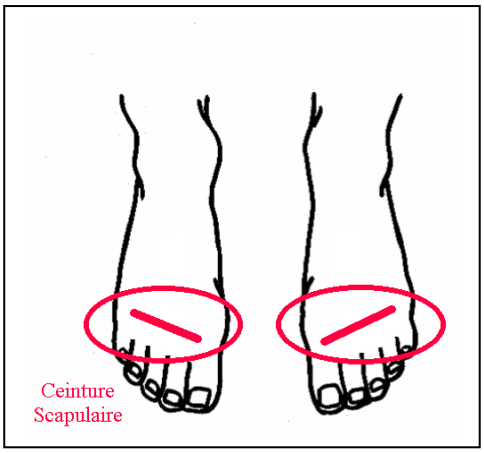

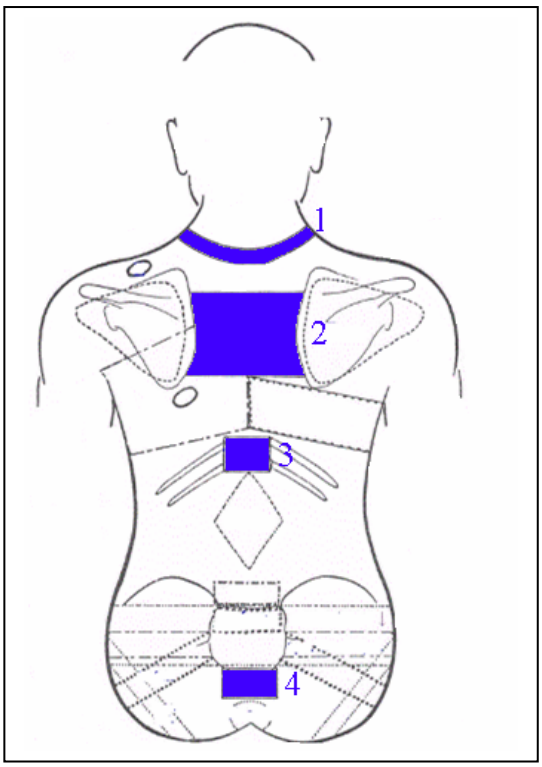

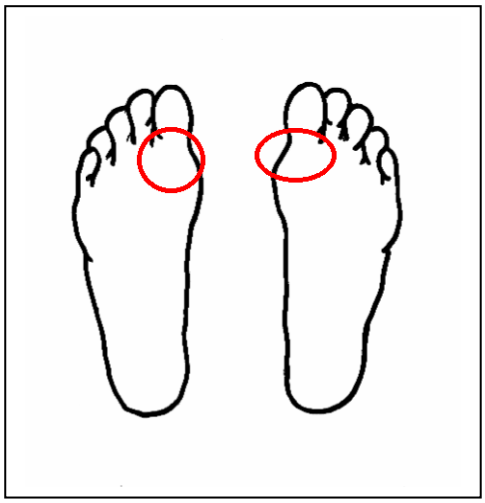

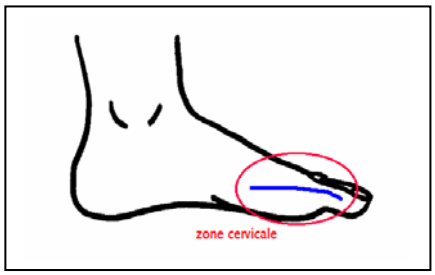

NOTES :

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

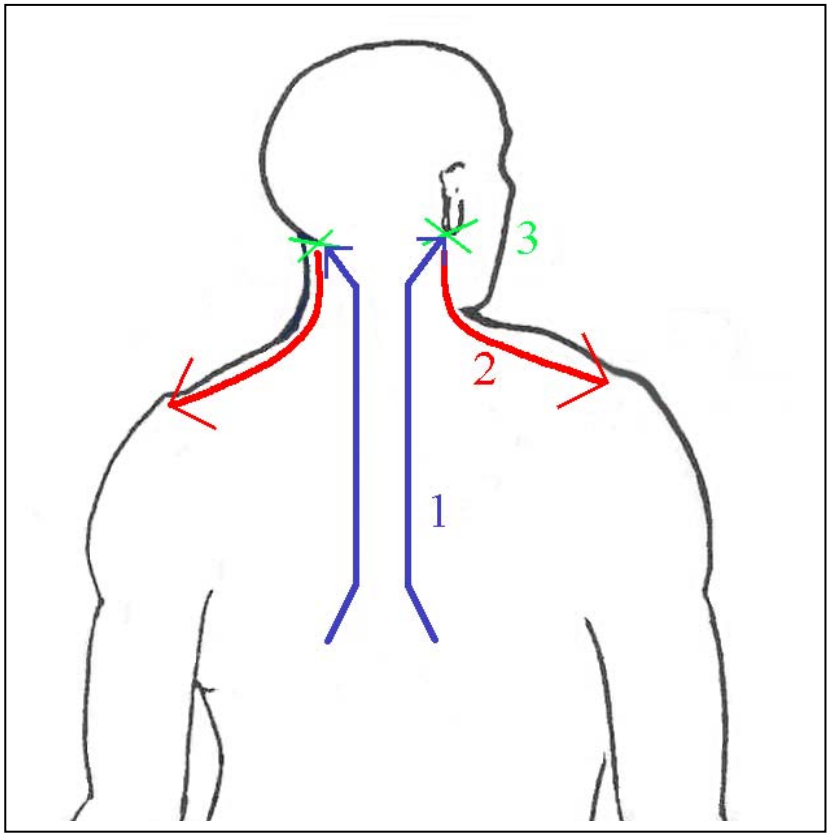

TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

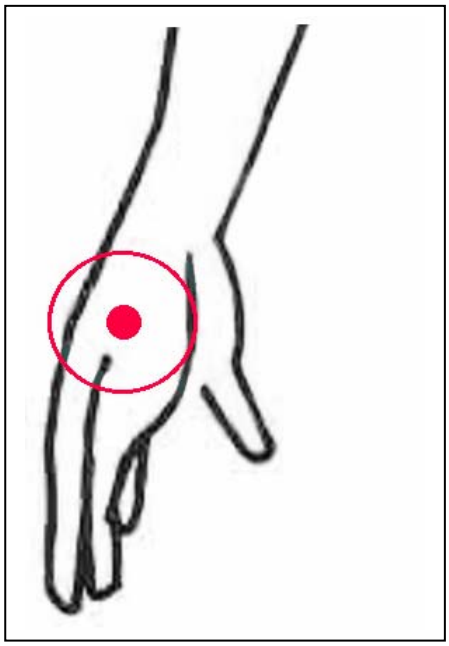

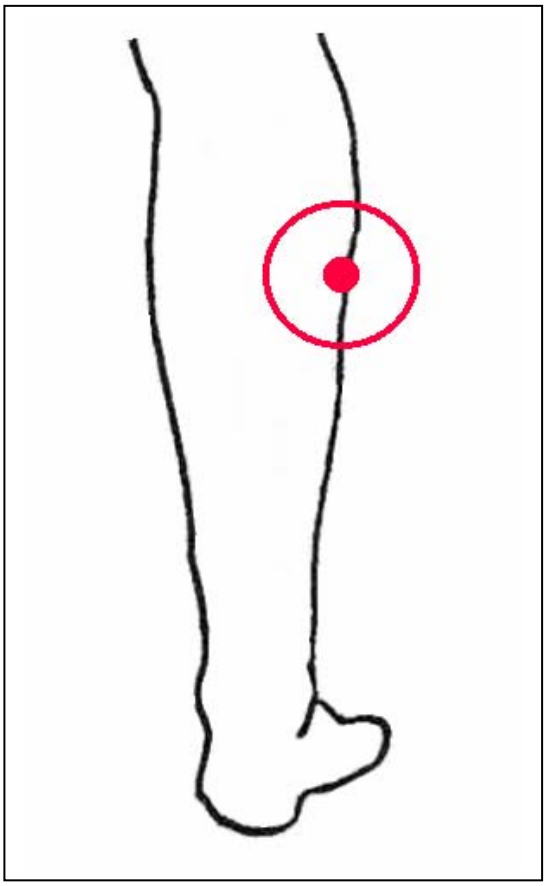

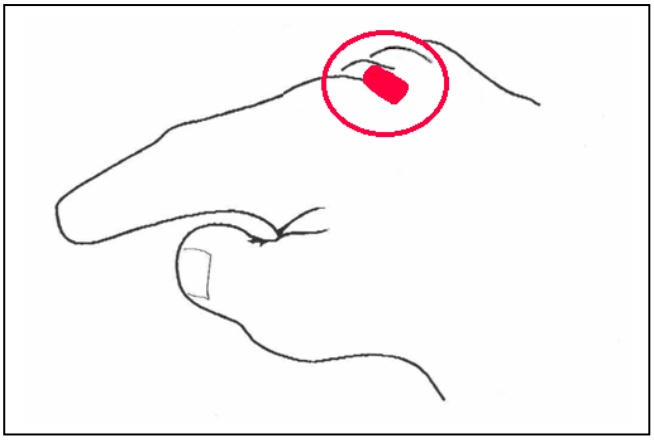

DORSALGIA

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

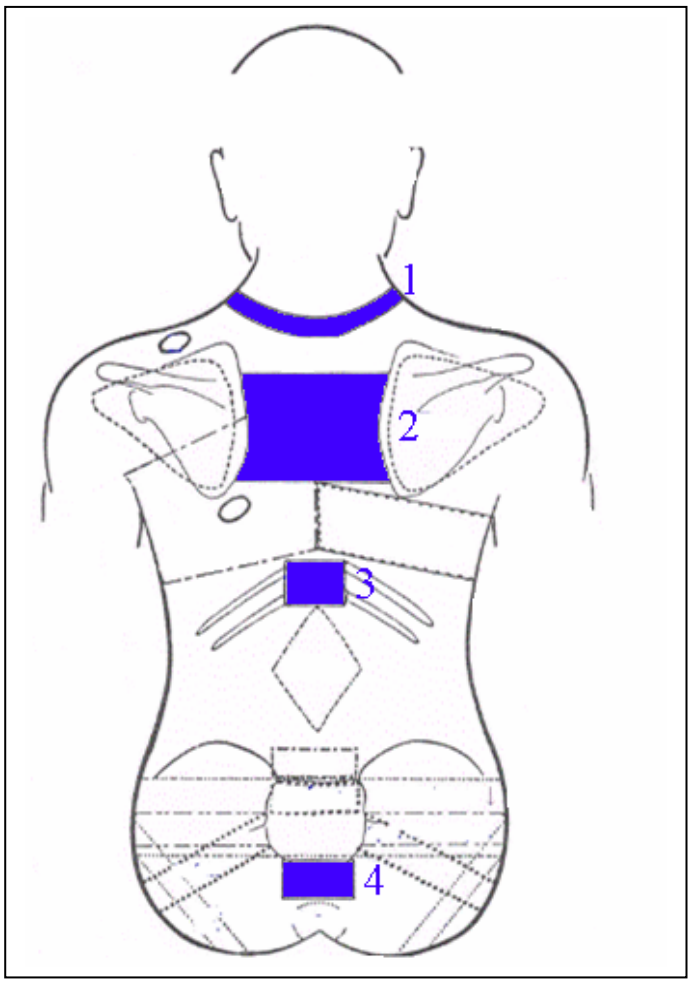

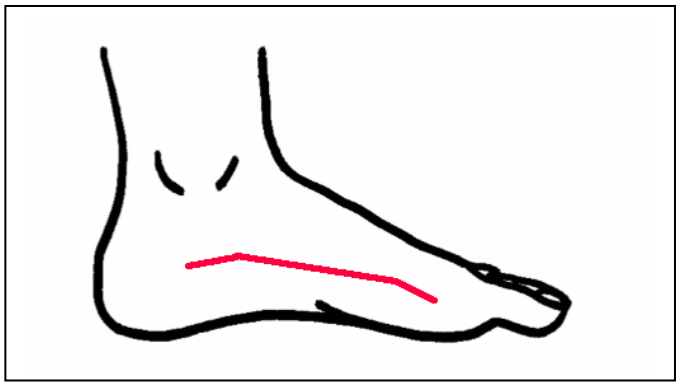

TREATMENT BY STROKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

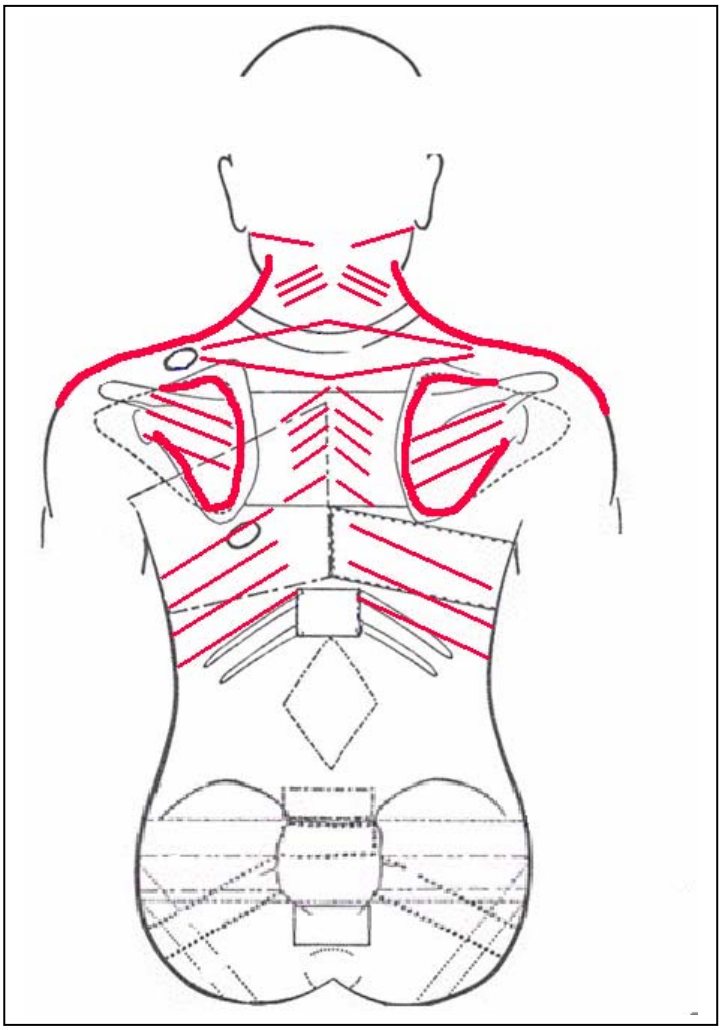

TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : suction cups

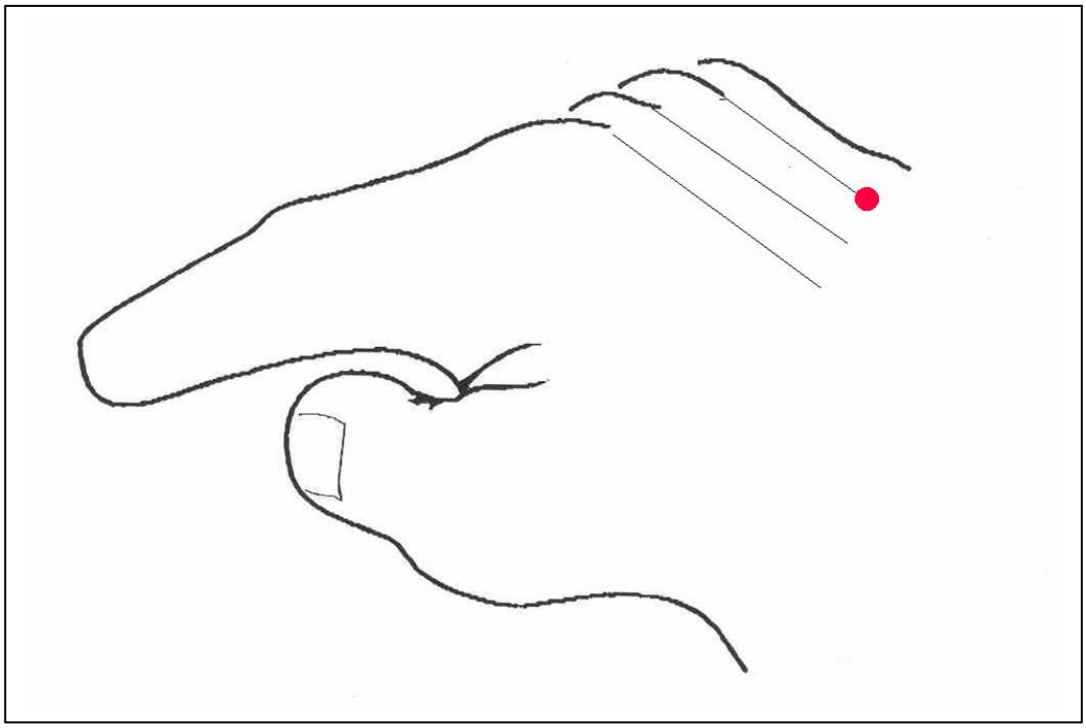

LUMBAGO

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

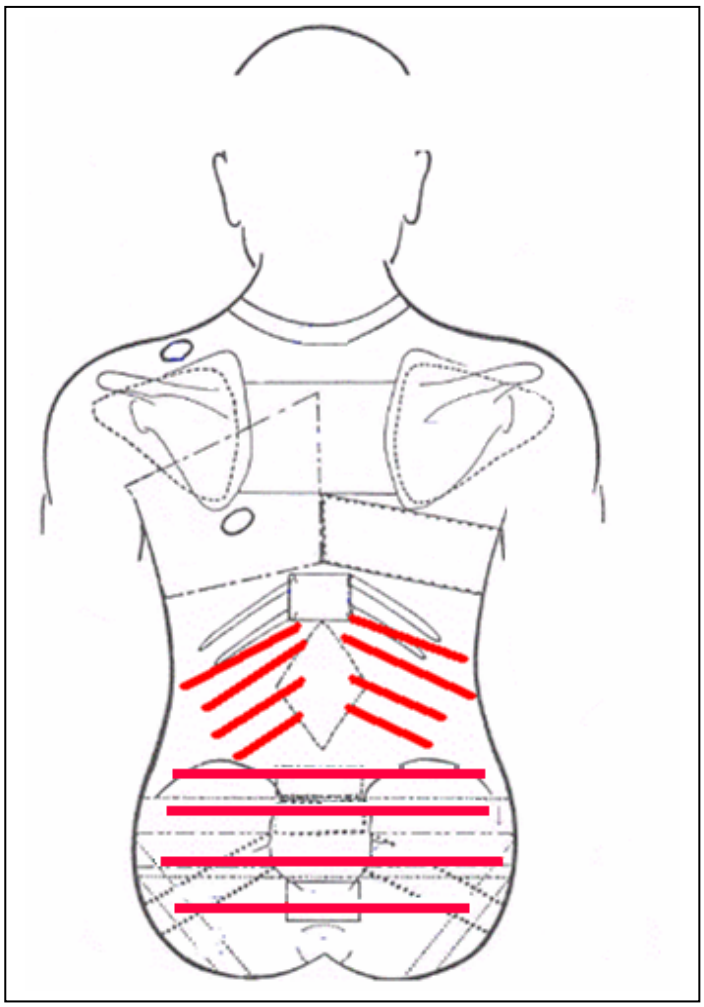

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

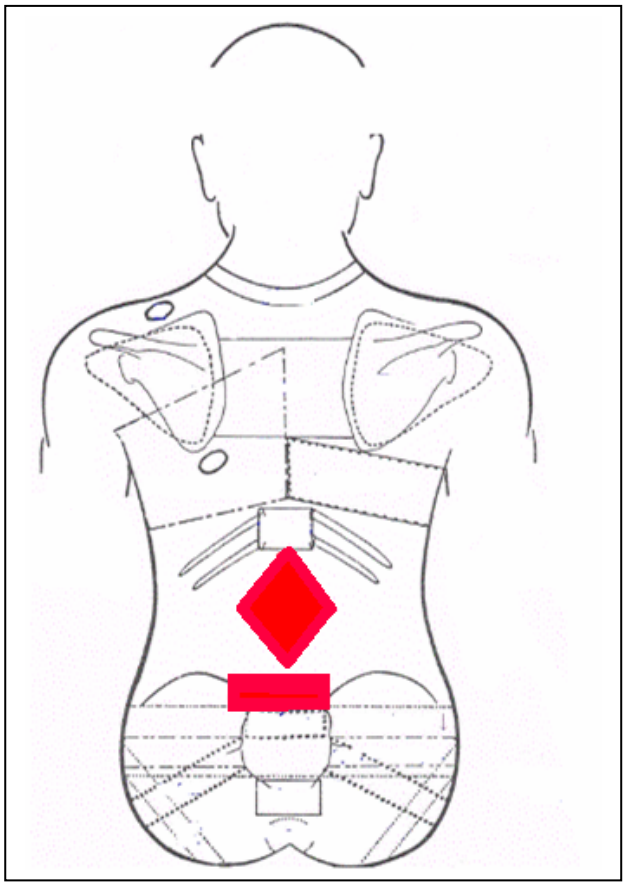

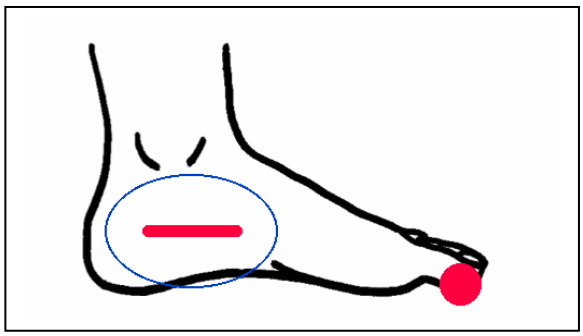

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

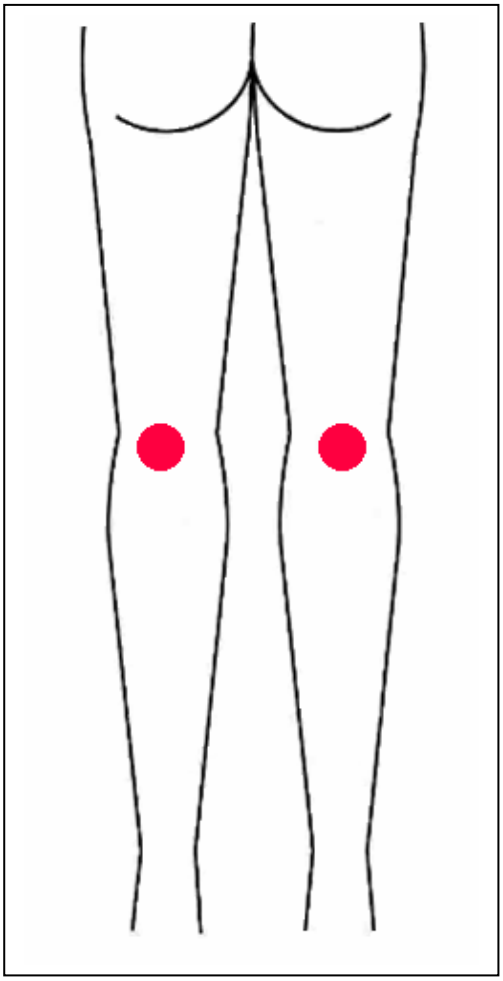

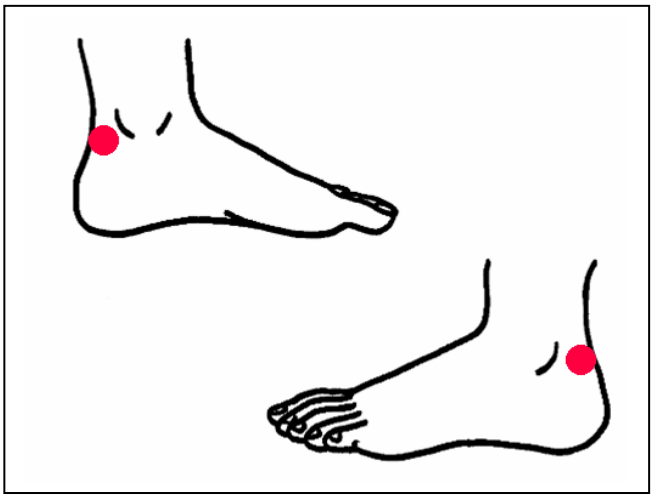

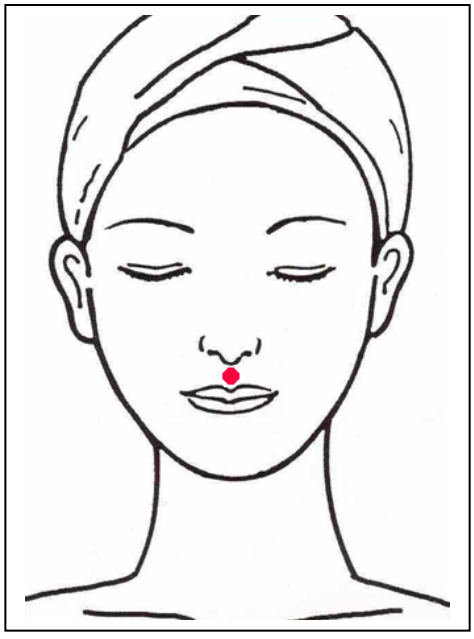

SCIATICA

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

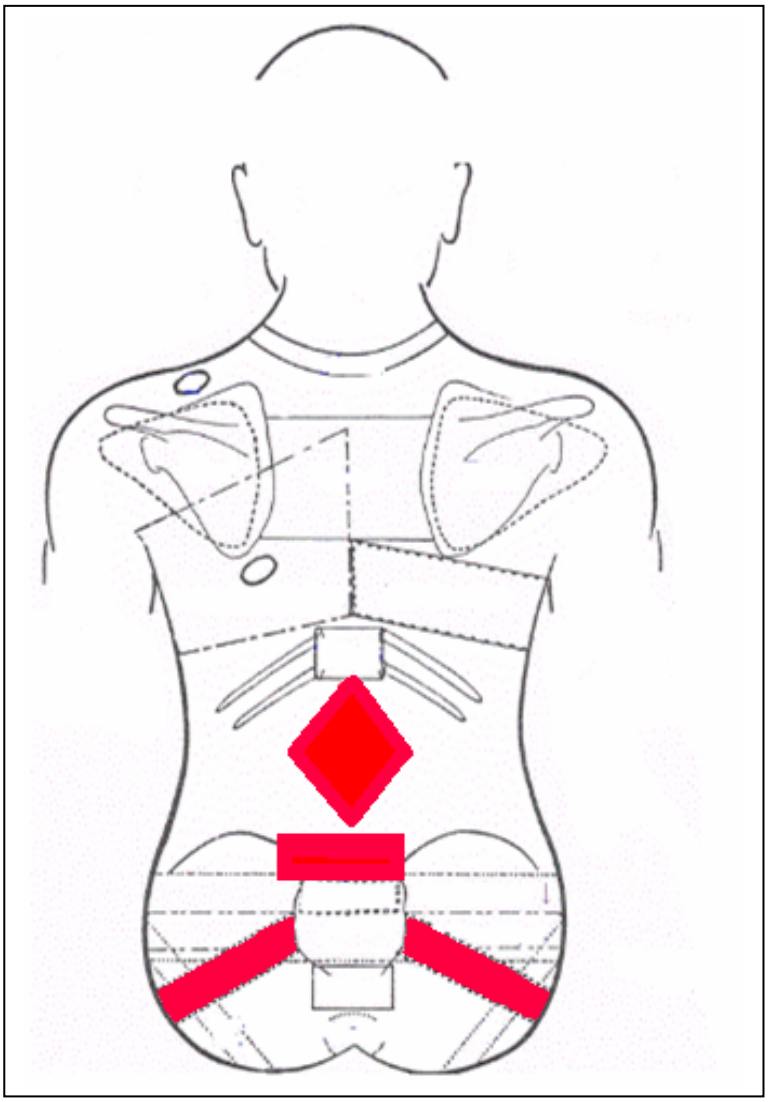

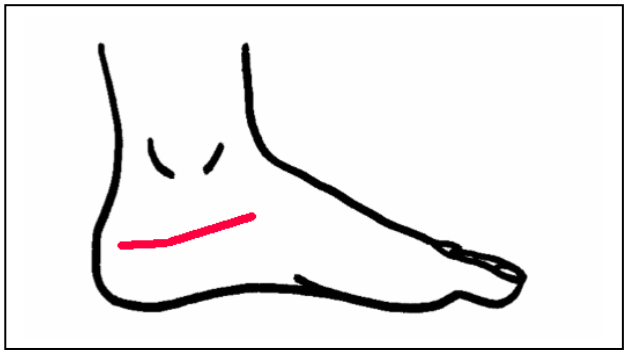

TREATMENT BY STROKES

- Duration : 15 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

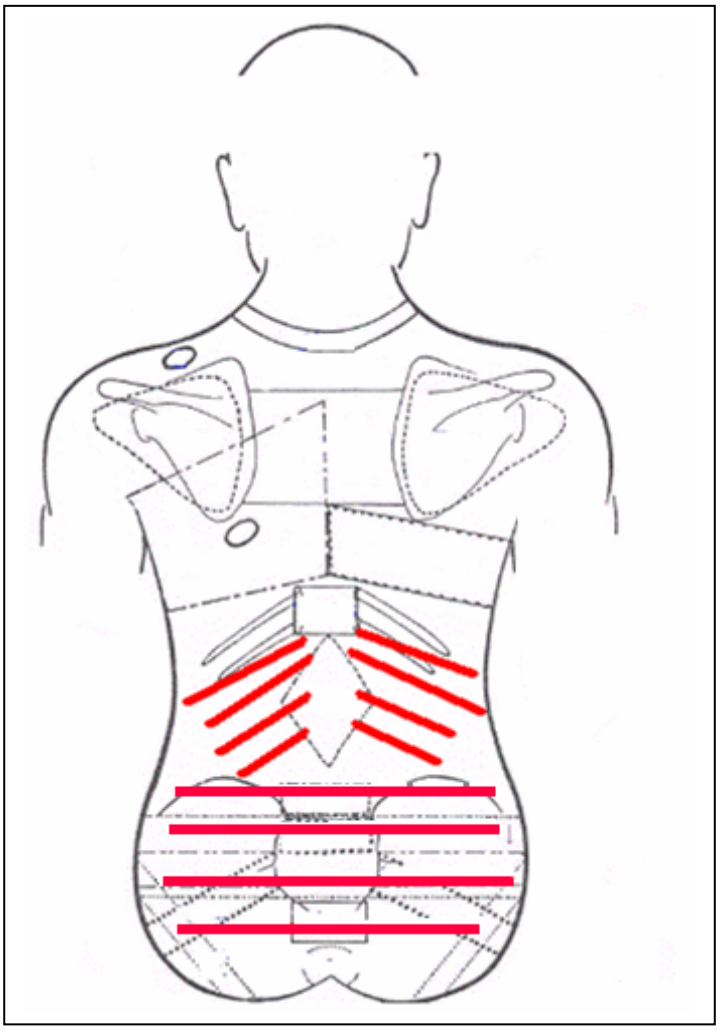

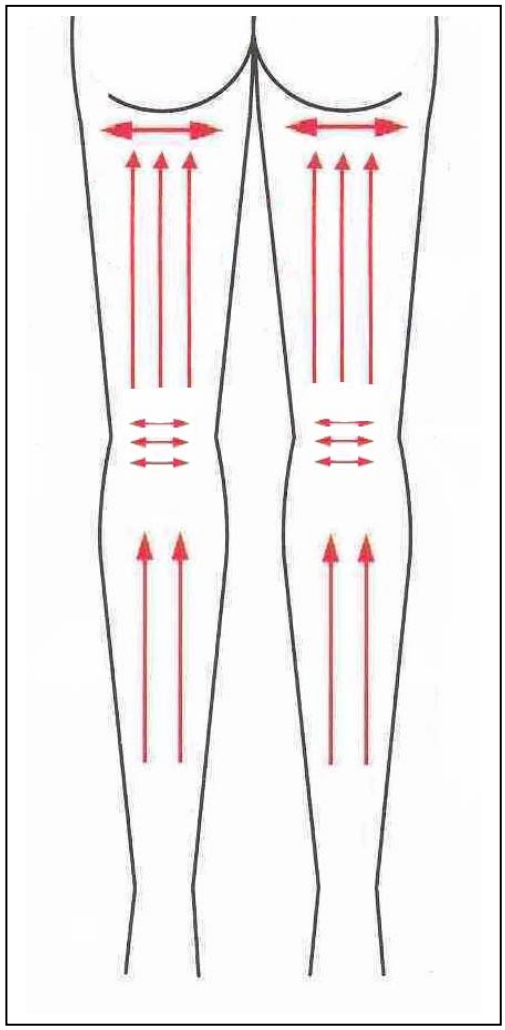

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

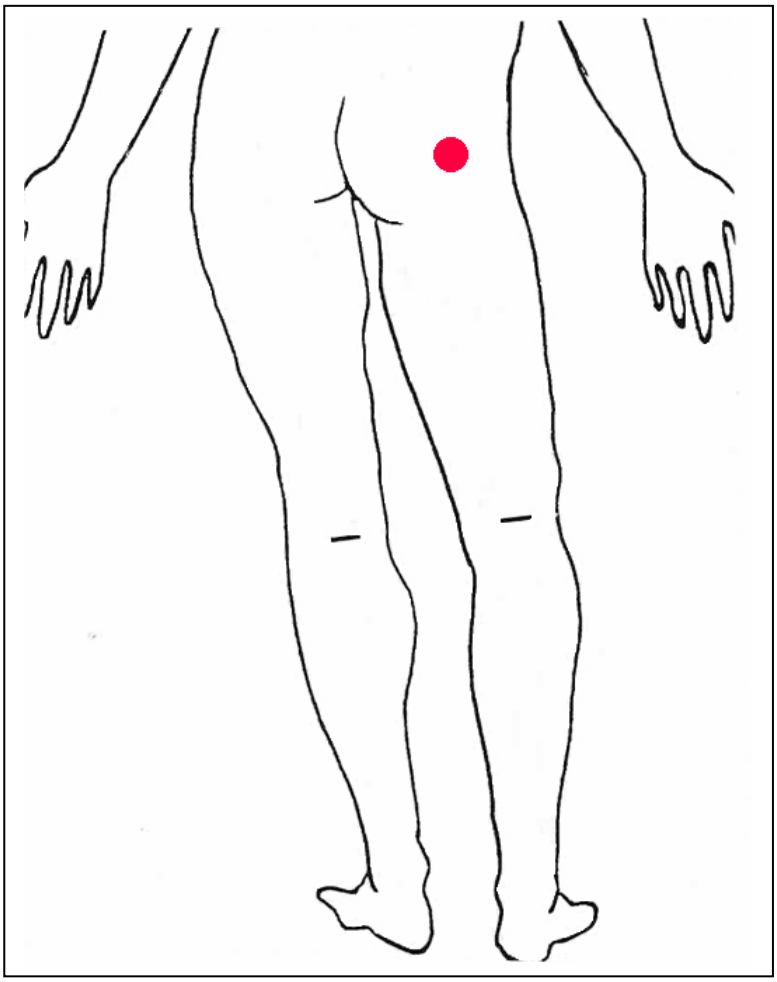

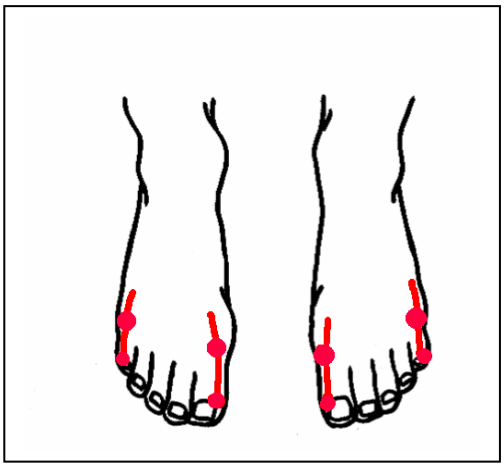

A) RHEUMATOLOGY

b) UPPER LIMB

SHOULDER TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 15 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

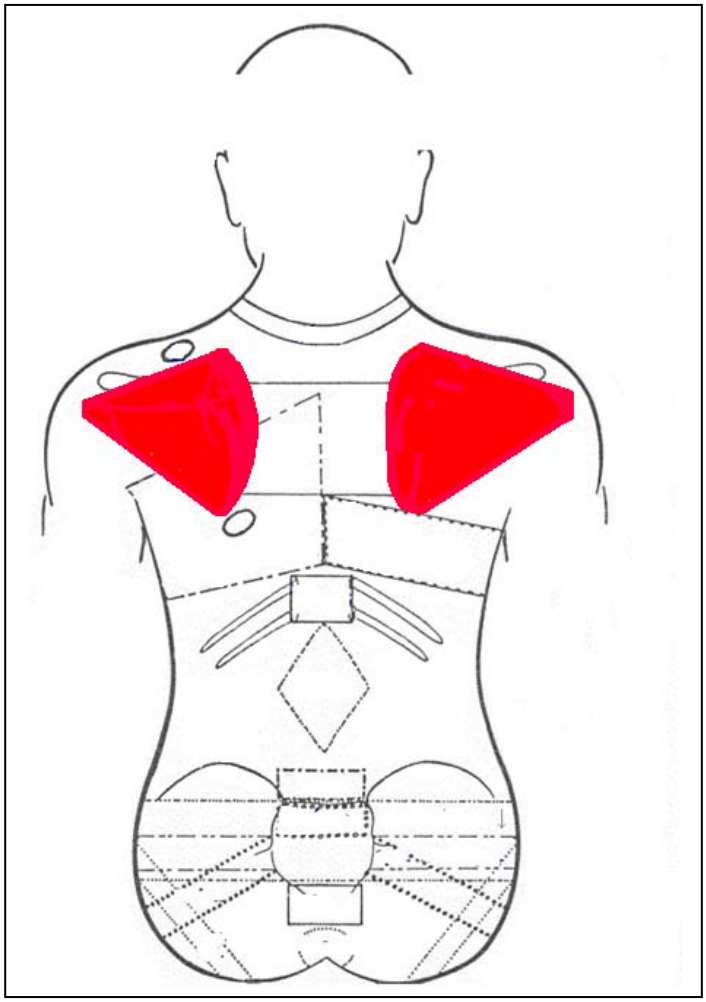

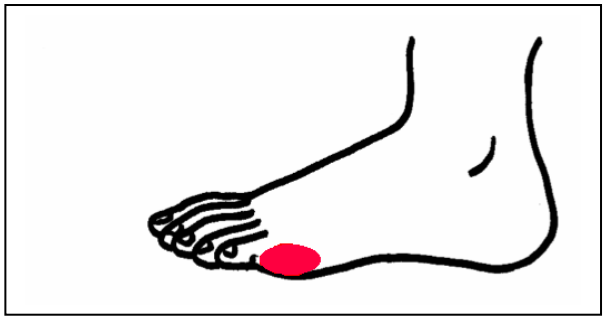

TREATMENT BY STROKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

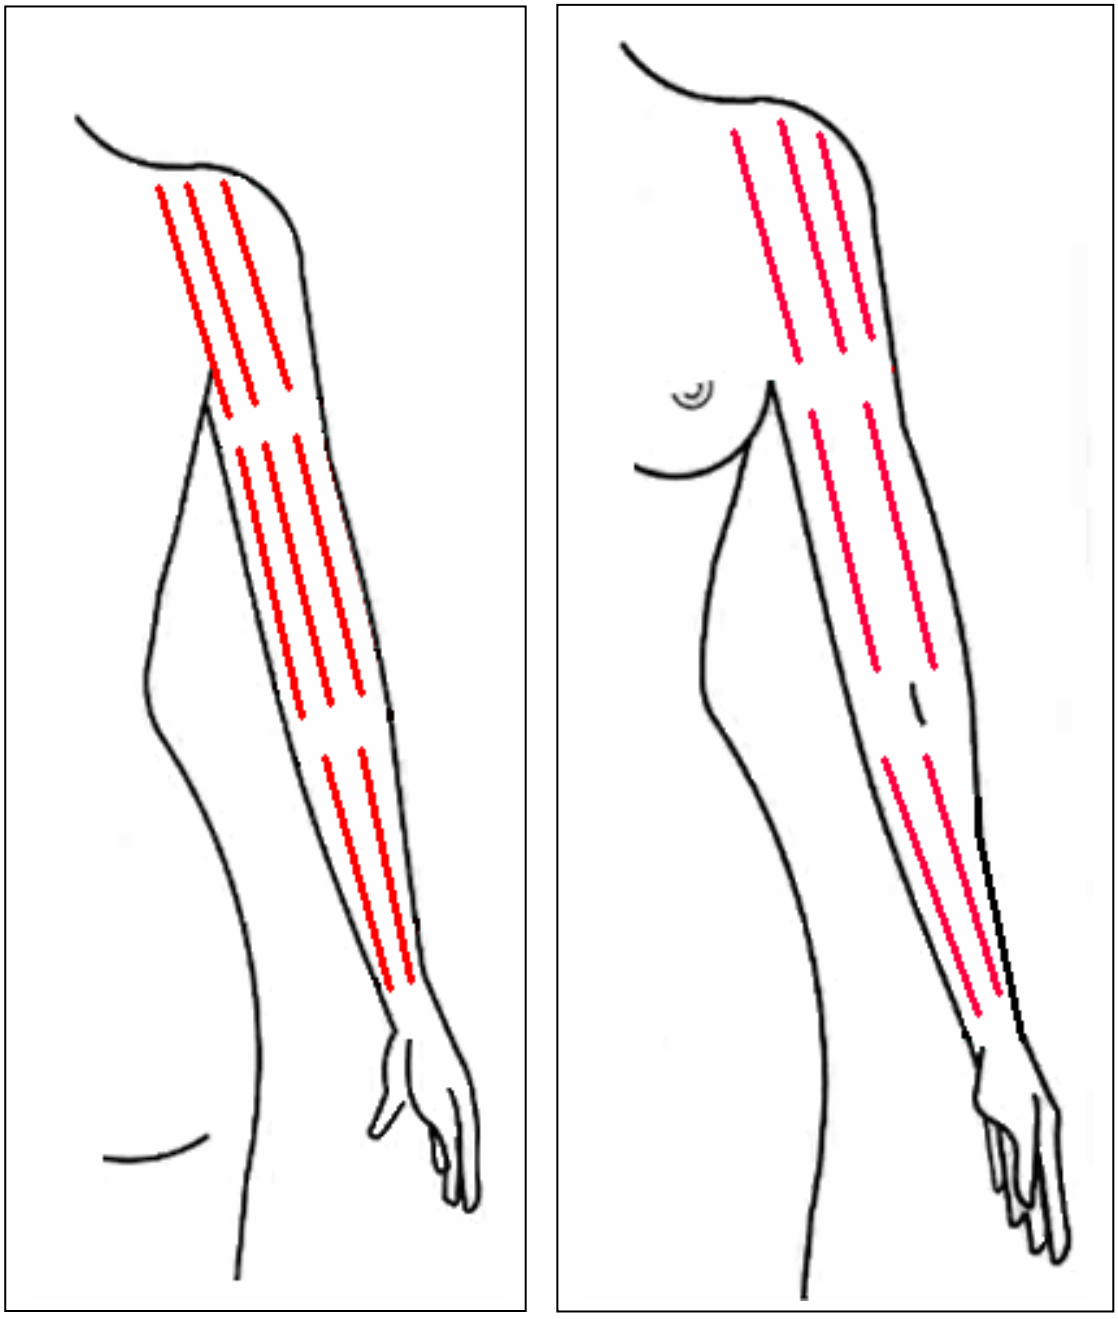

TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

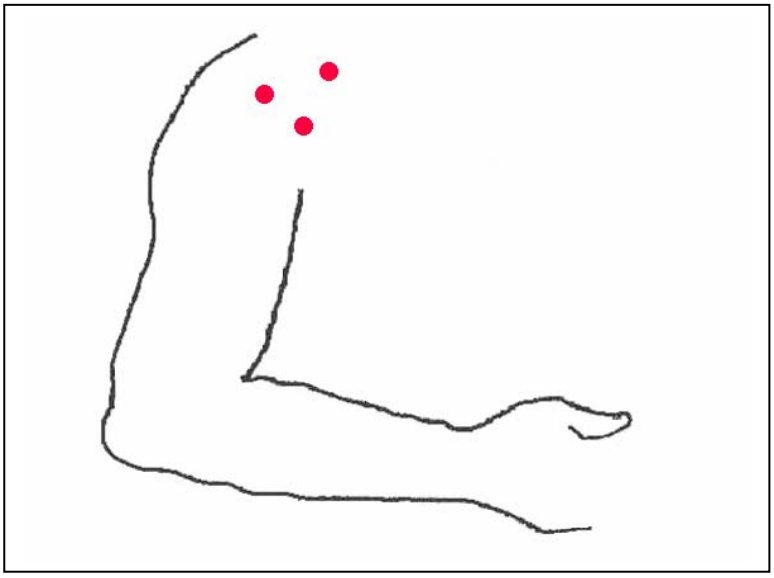

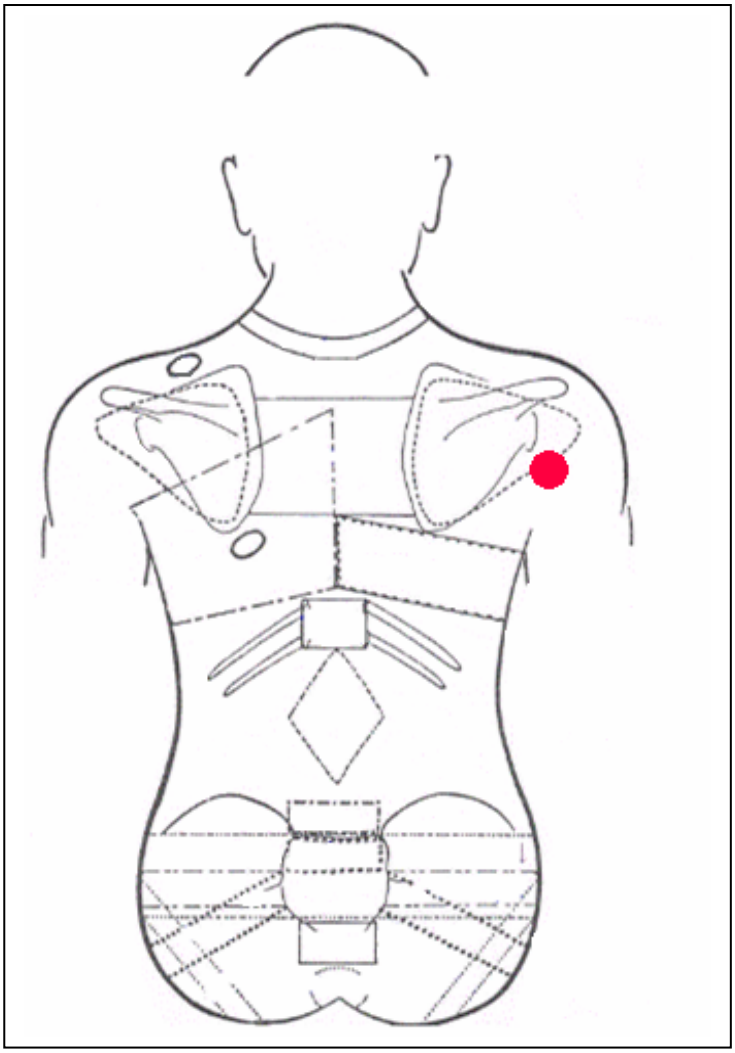

ELBOW TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

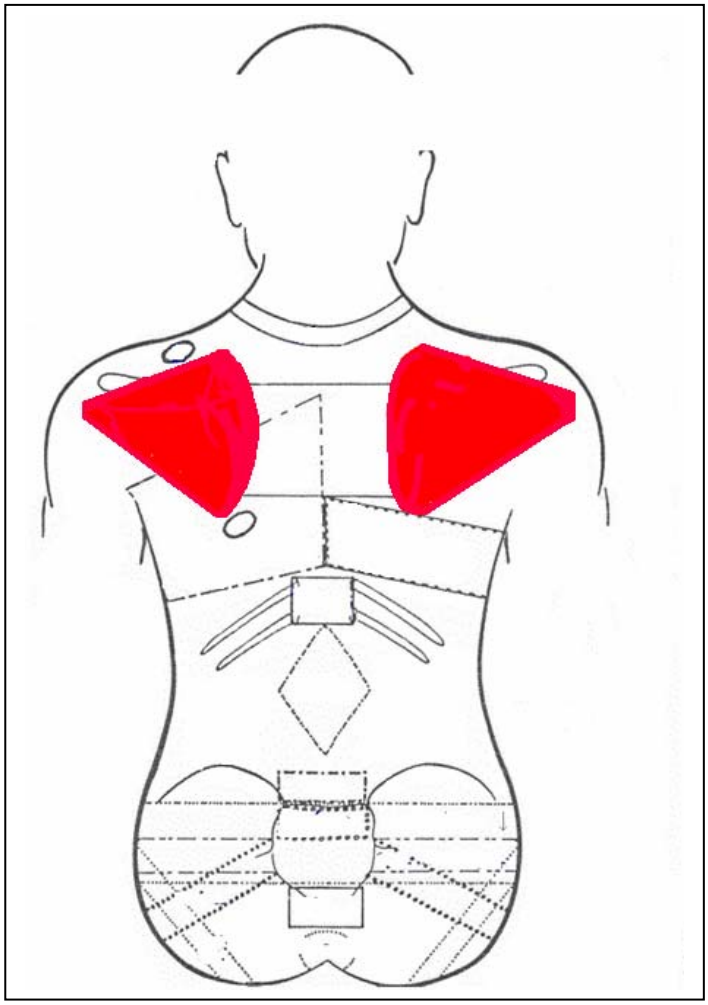

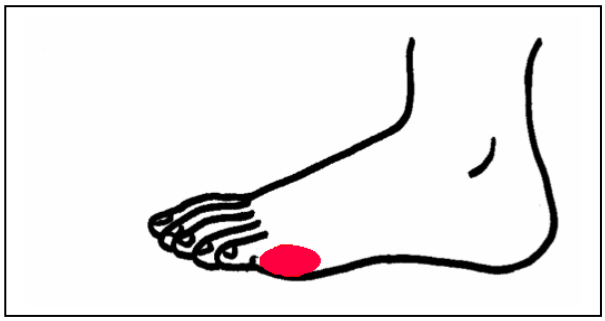

TREATMENT BY STROKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

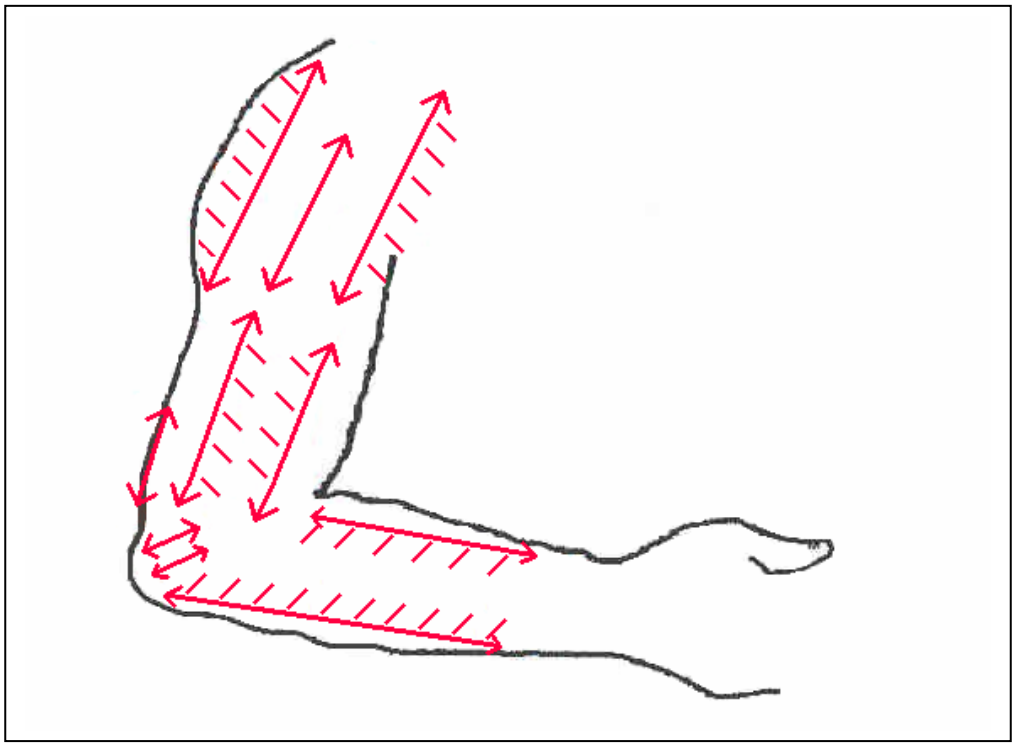

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Basic Suction Cups

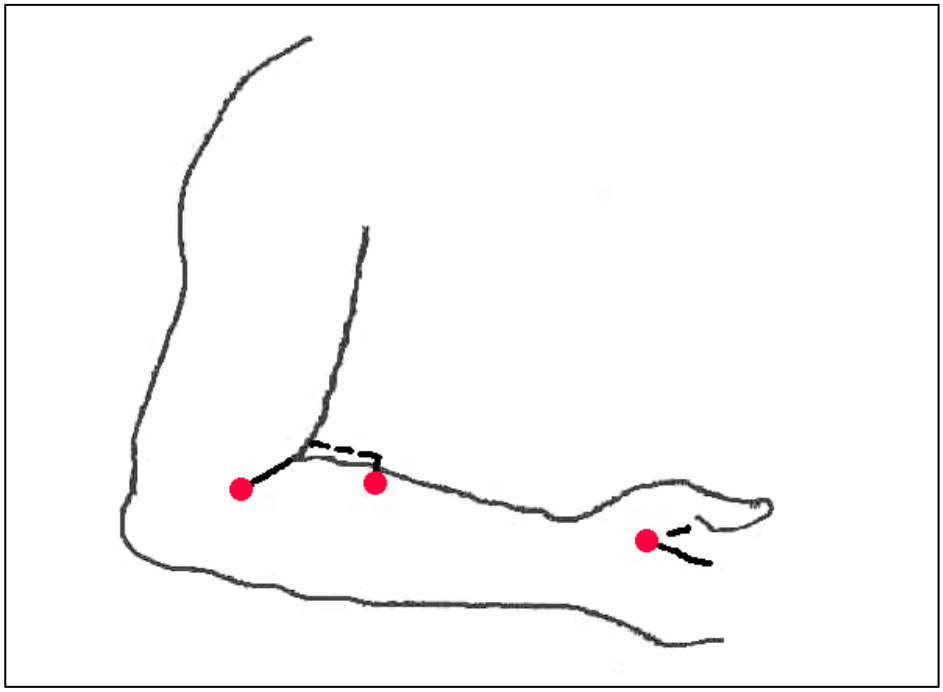

WRIST TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

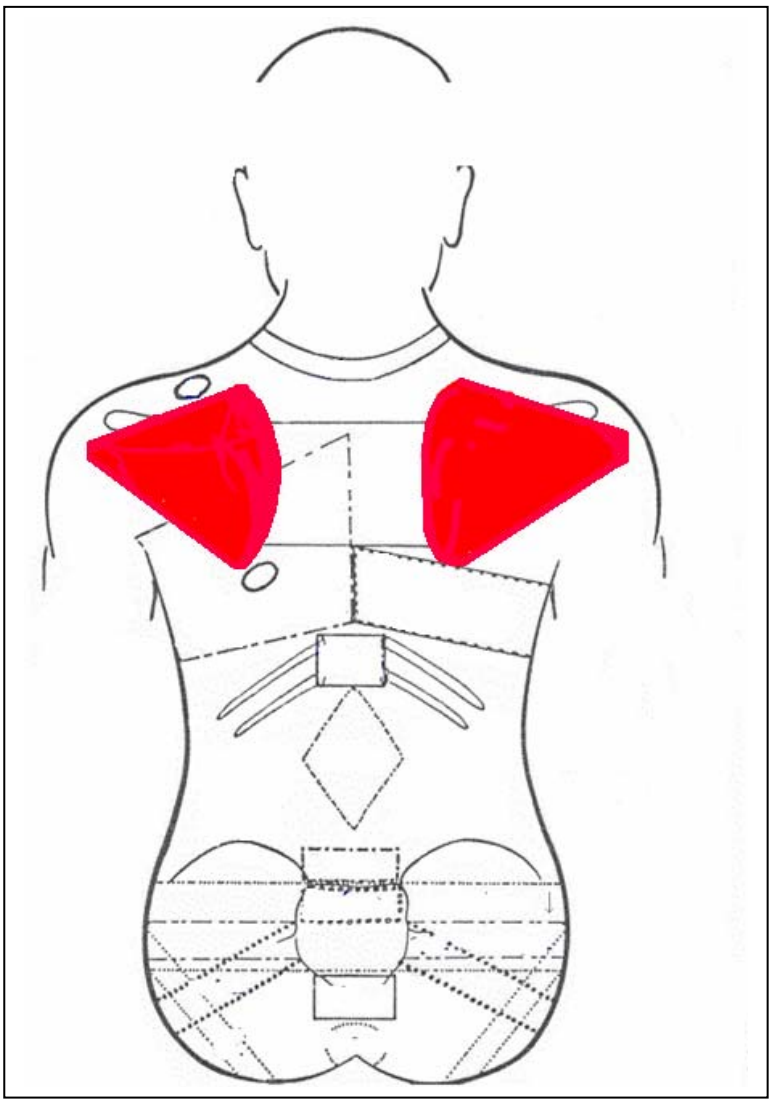

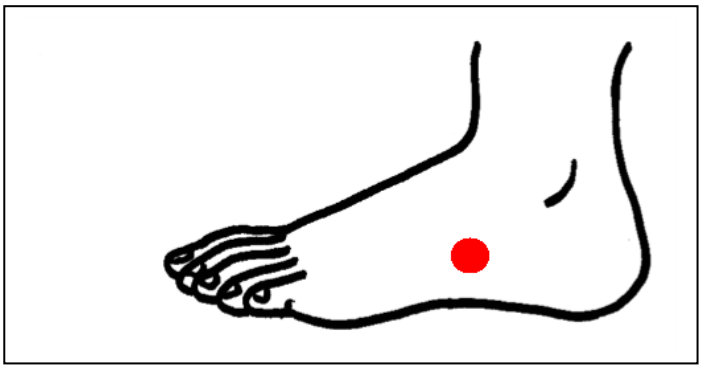

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

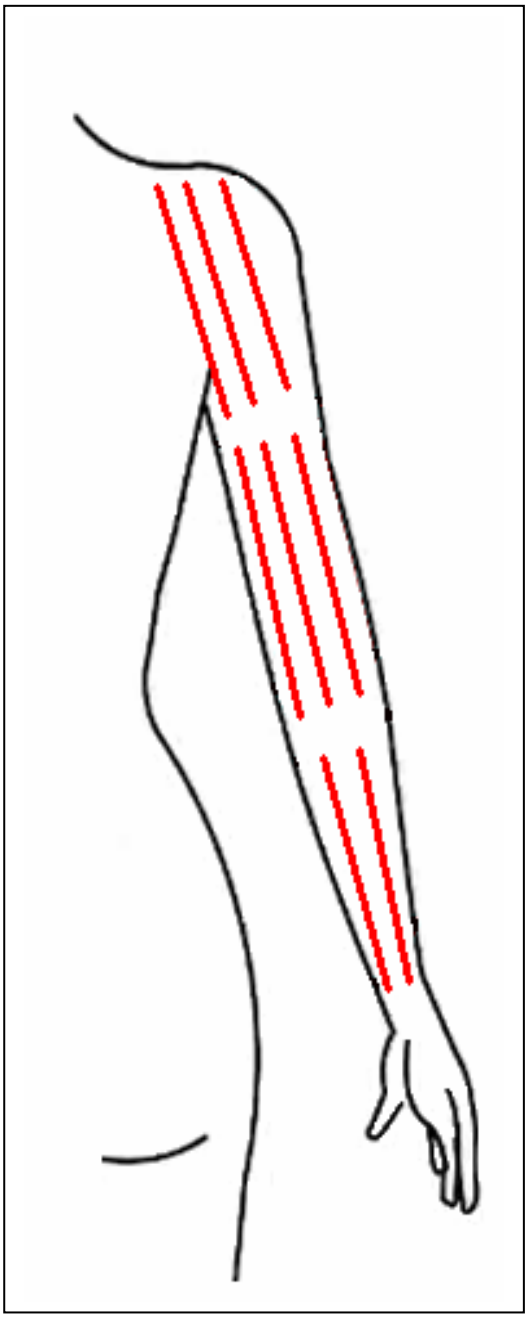

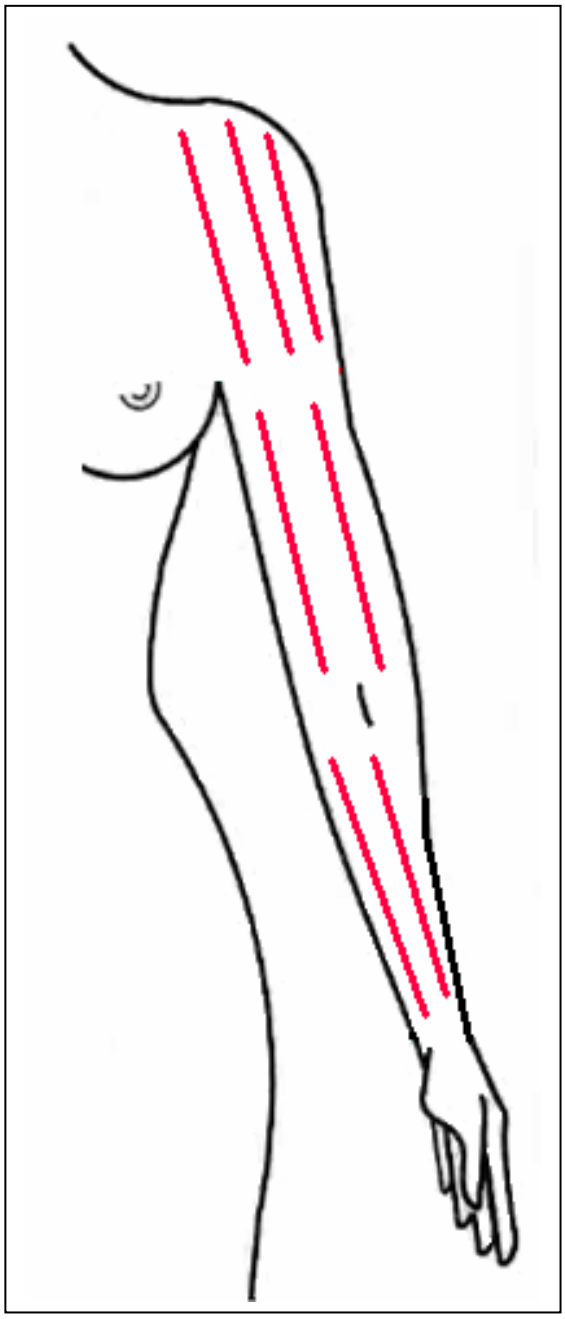

TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small Suction Cups

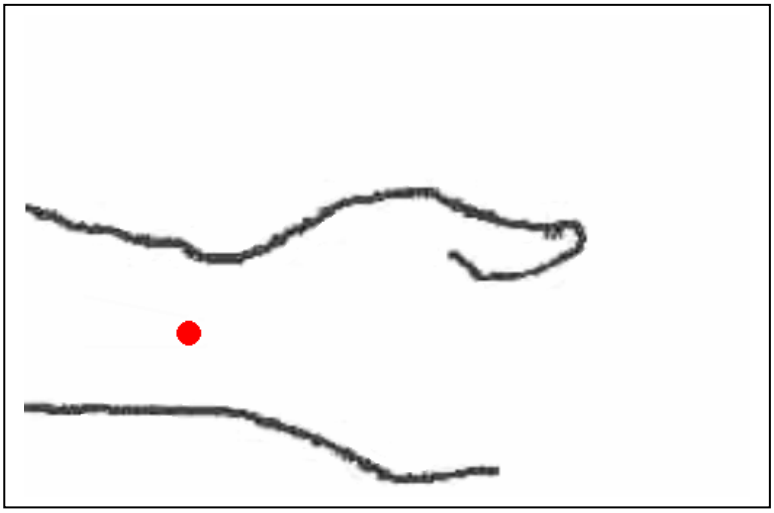

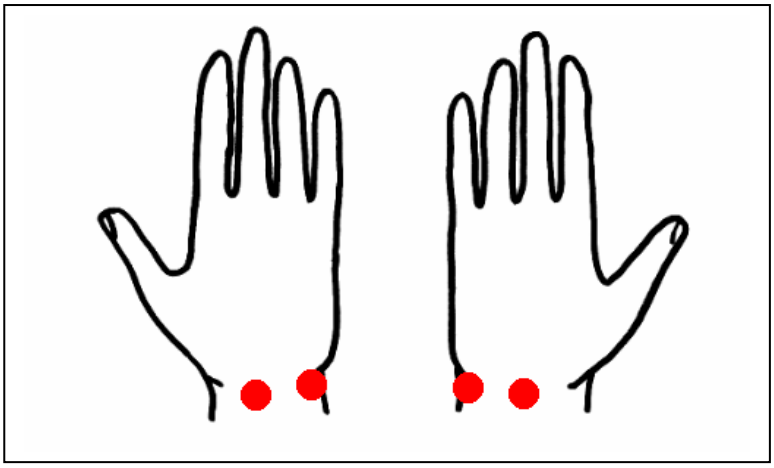

HANDS AND FINGERS TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

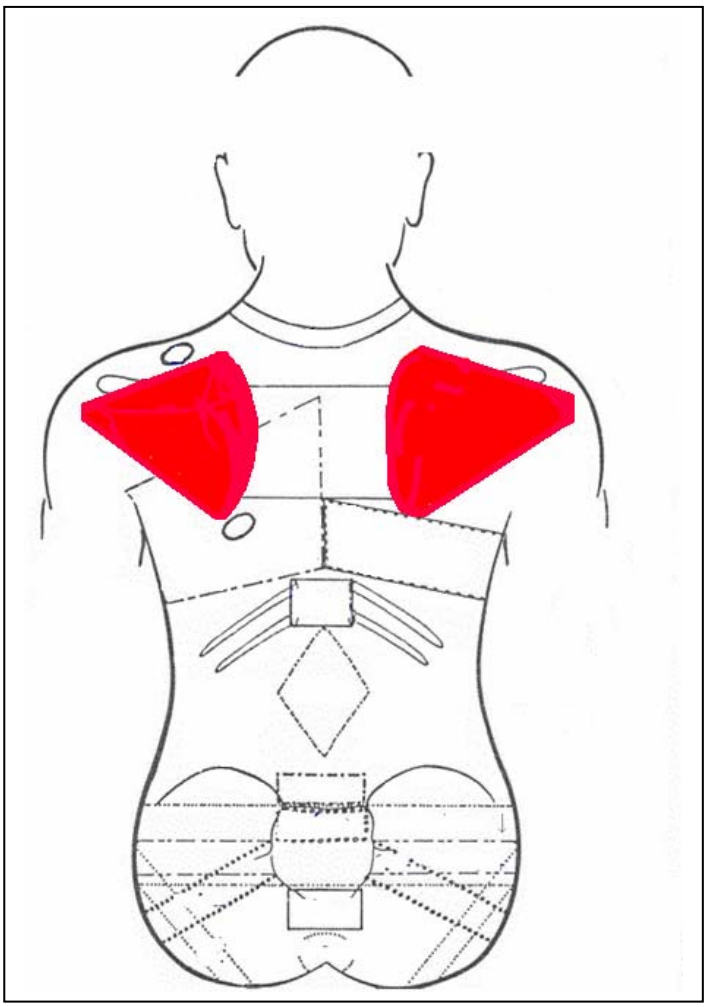

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

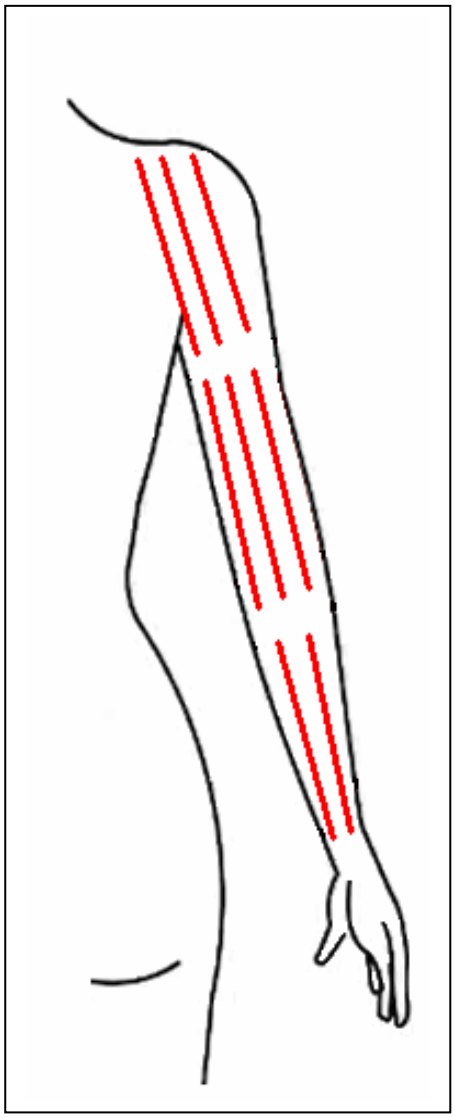

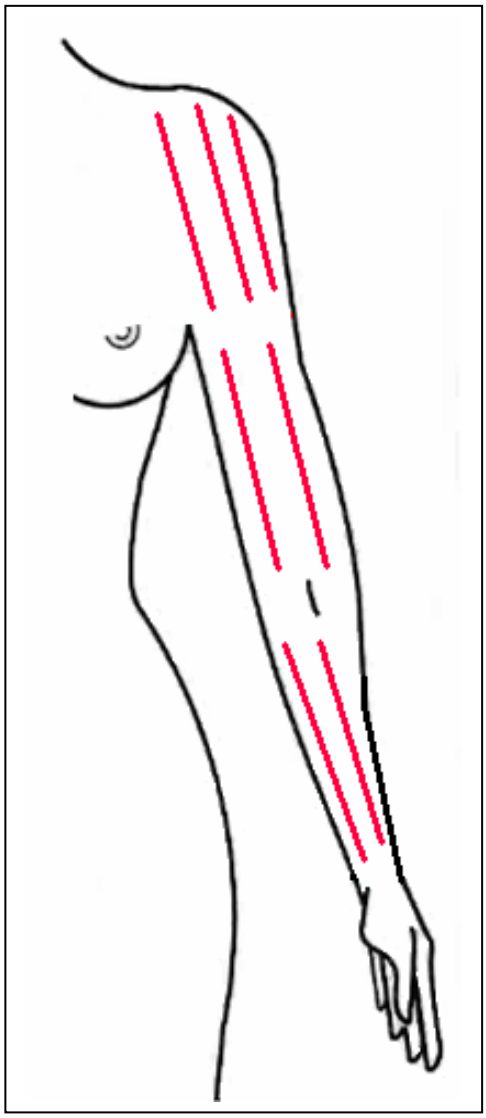

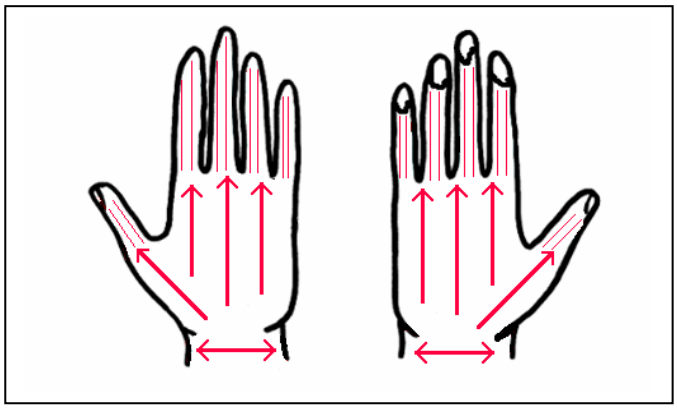

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small Suction Cups

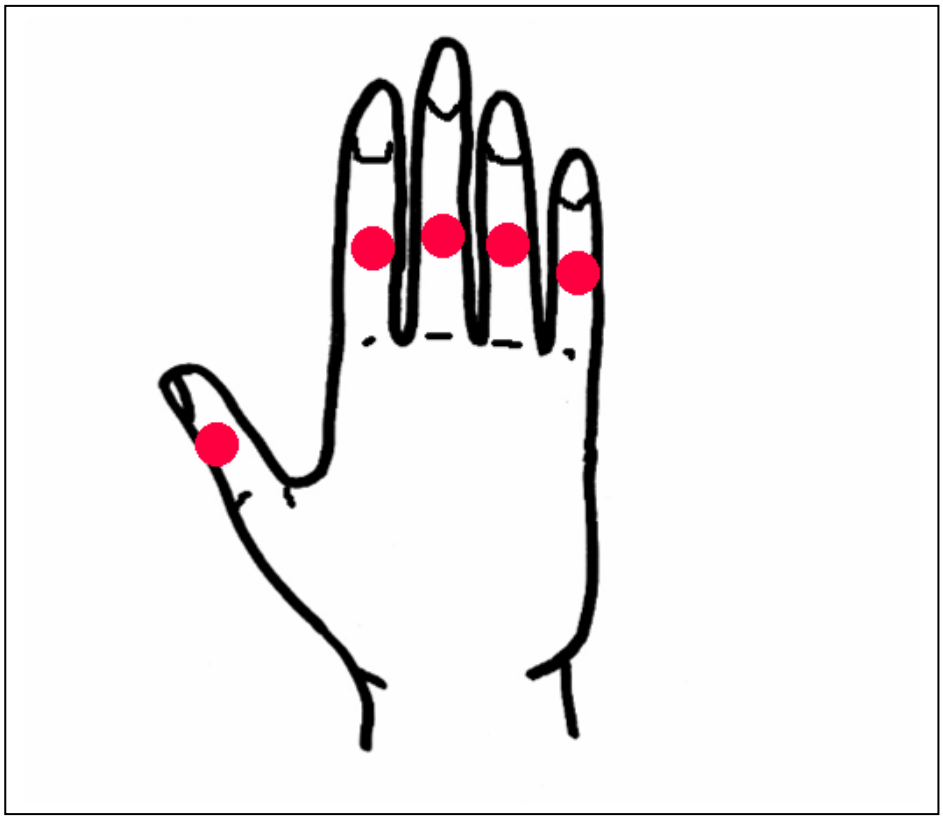

c) LOWER LIMB

HIP TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 15 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

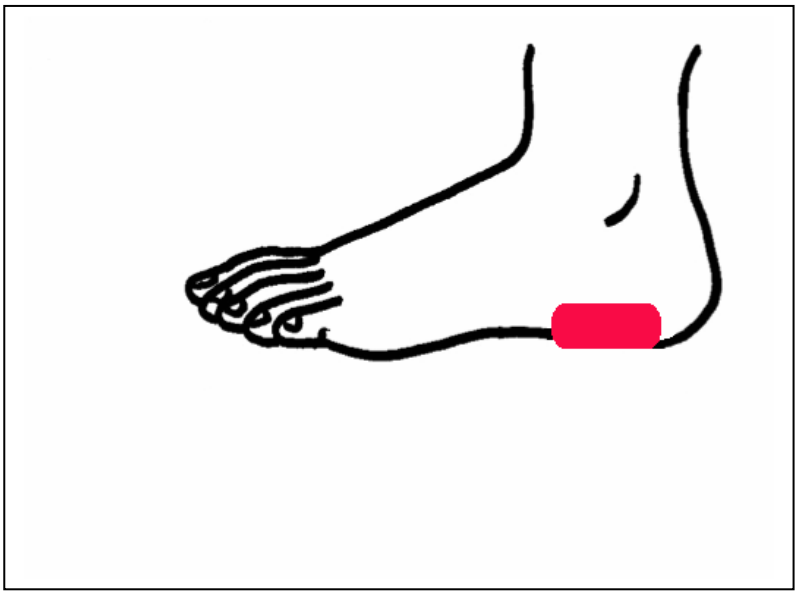

TREATMENT BY STROKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

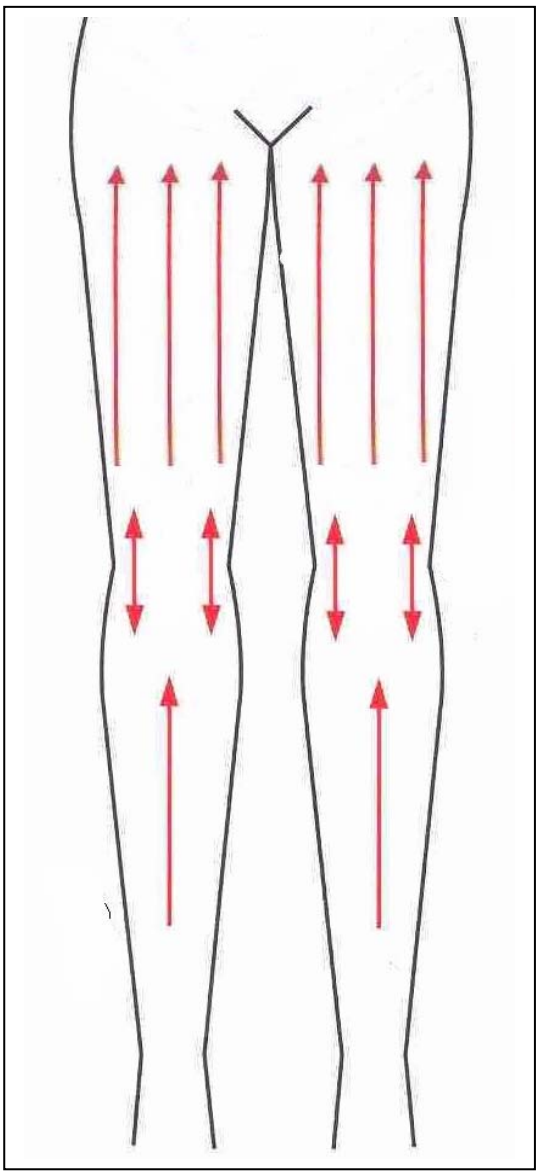

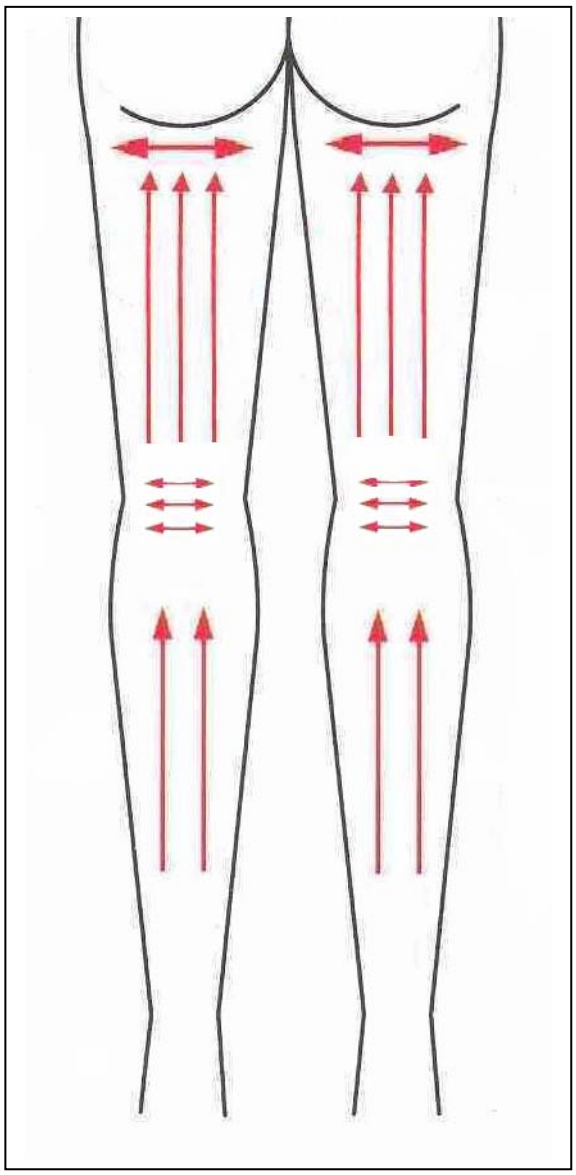

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Basic Suction Cups

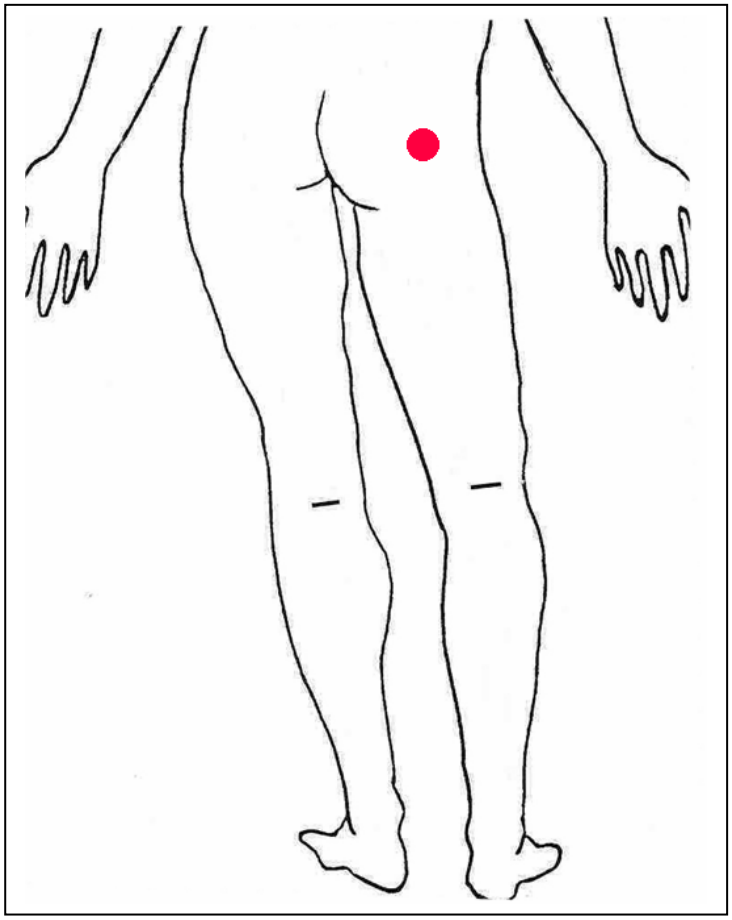

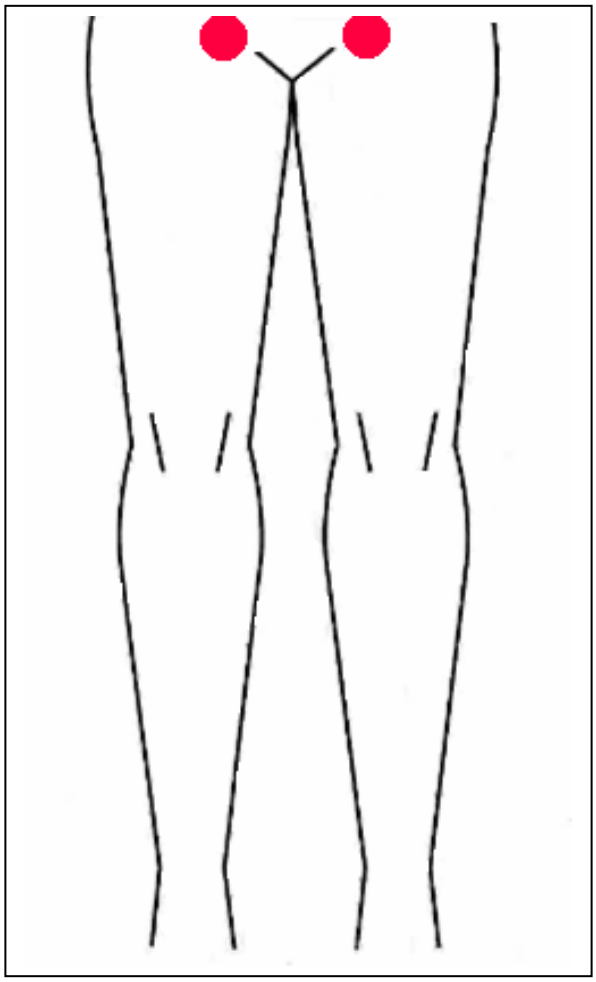

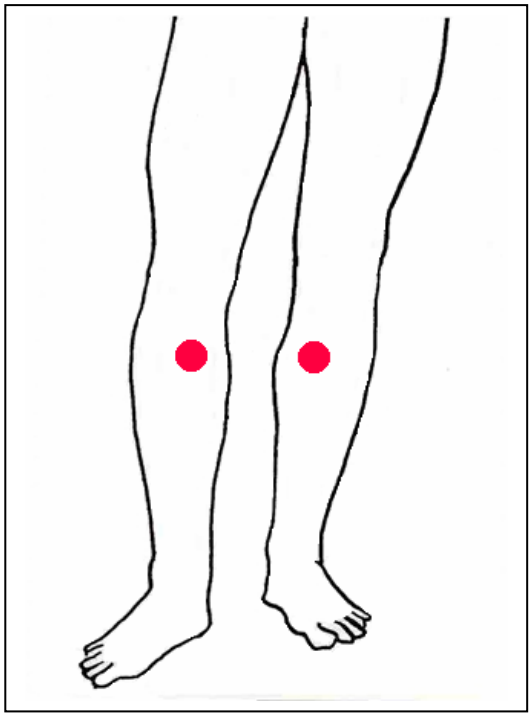

KNEE TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

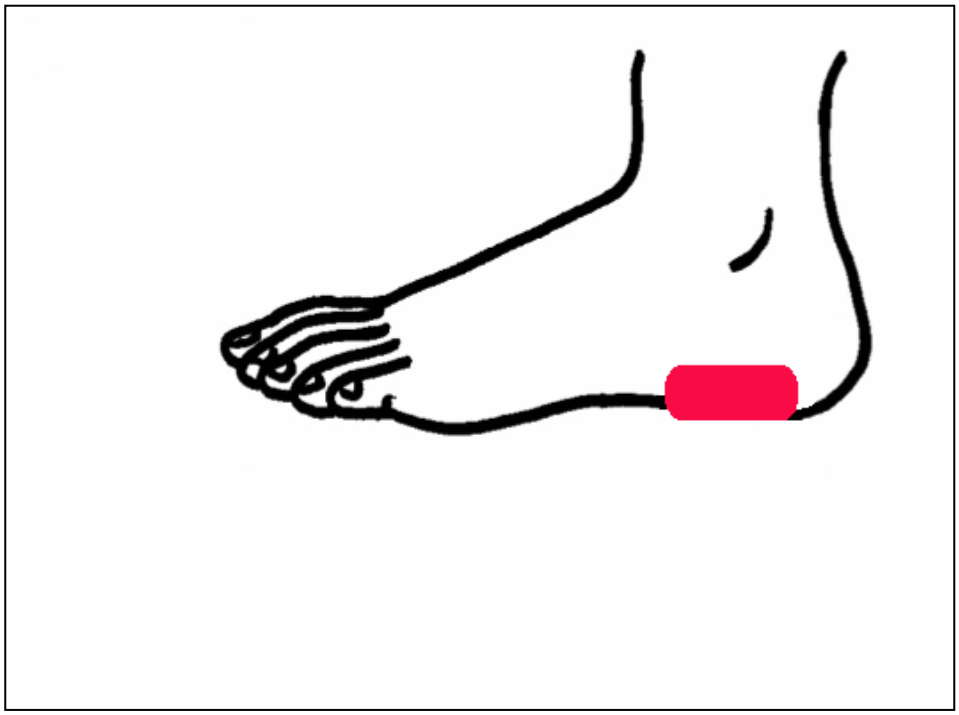

TREATMENT BY STROKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

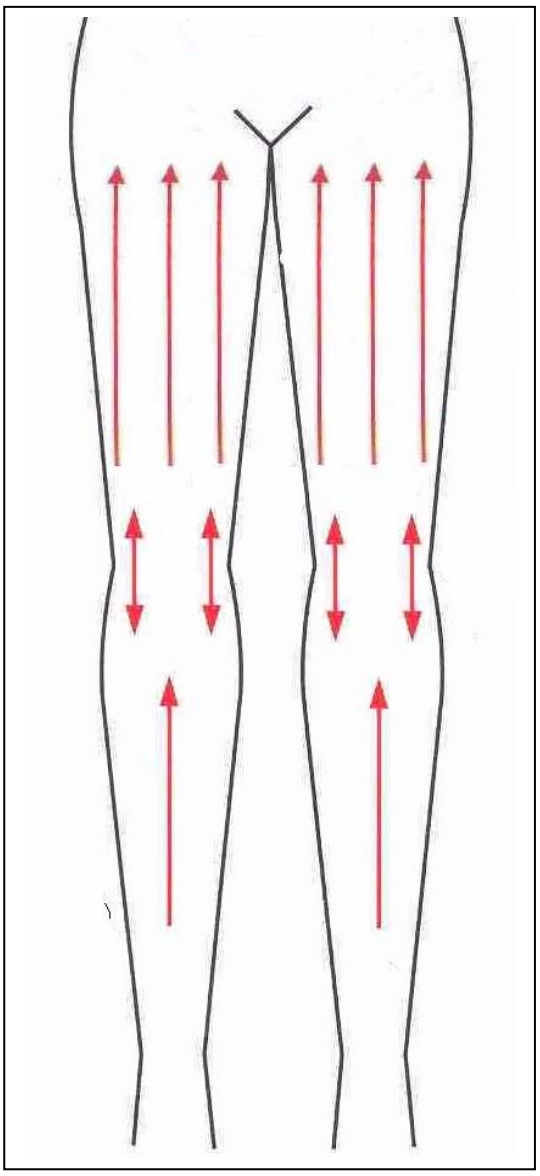

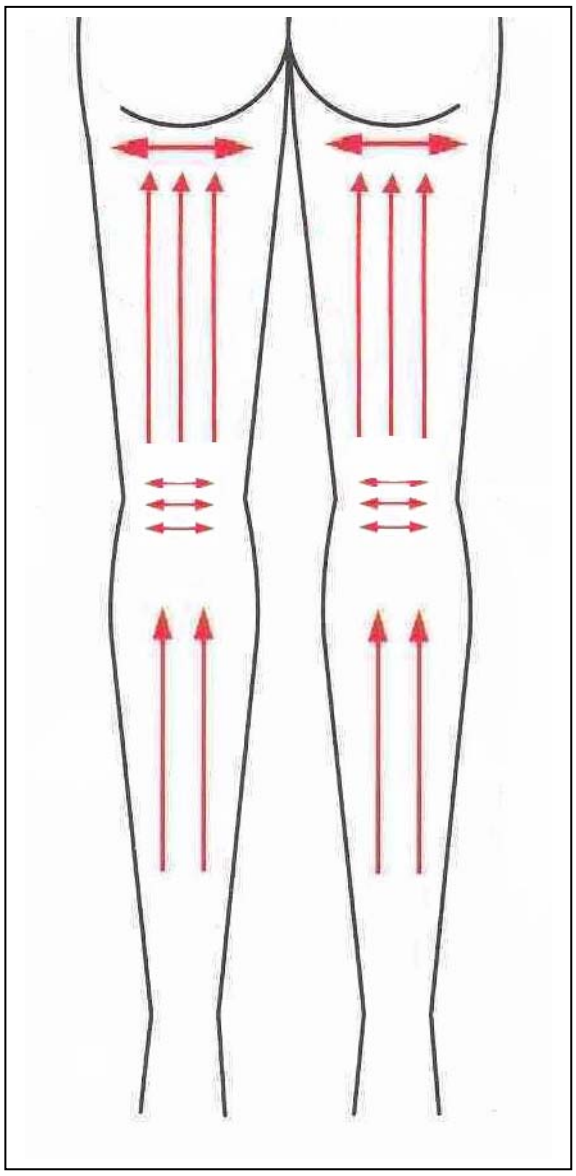

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

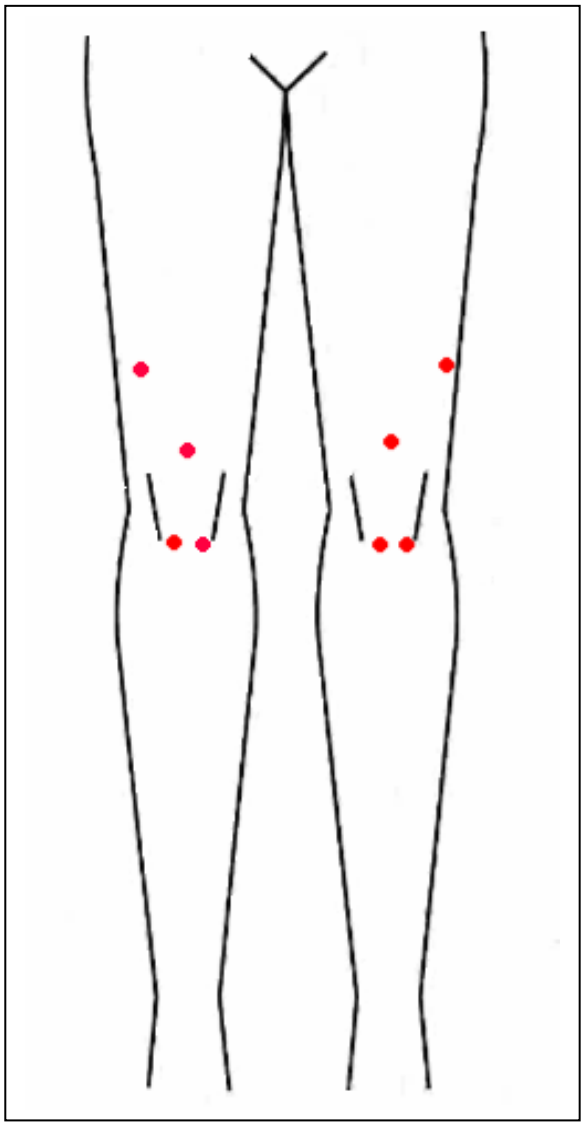

FOOT TREATMENT

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

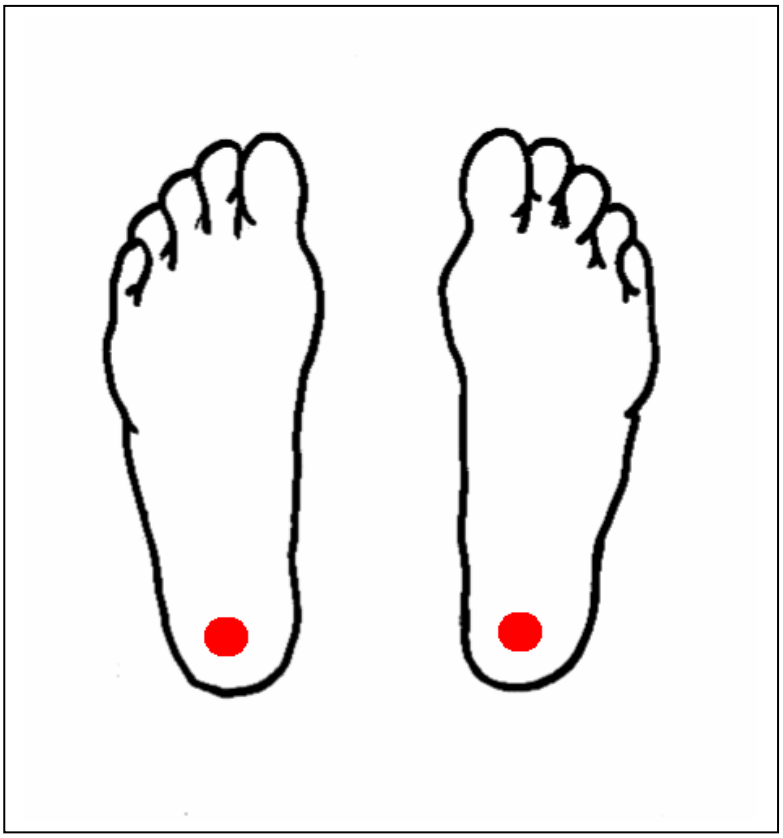

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

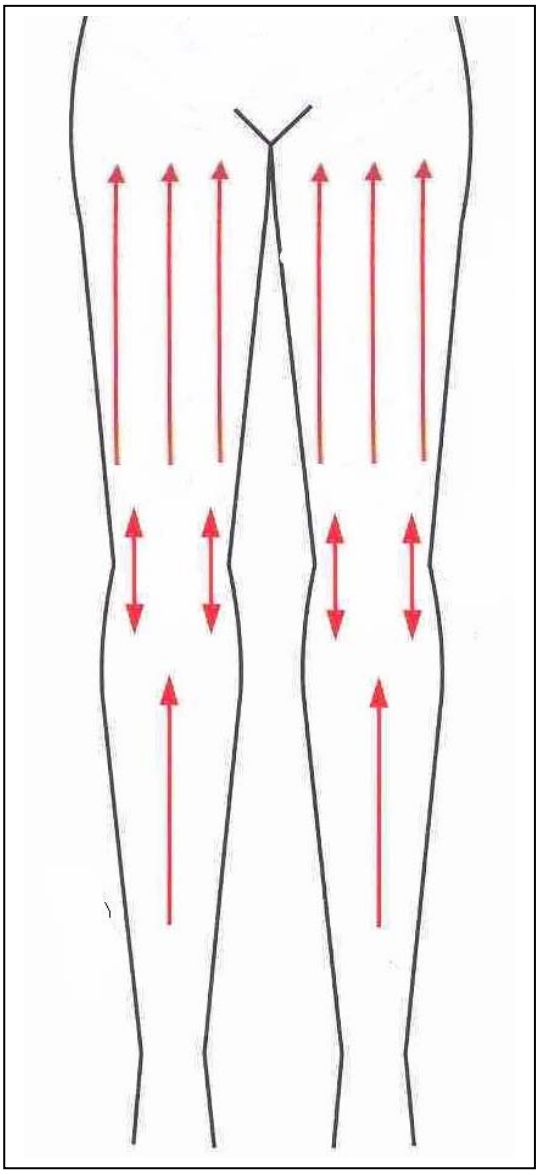

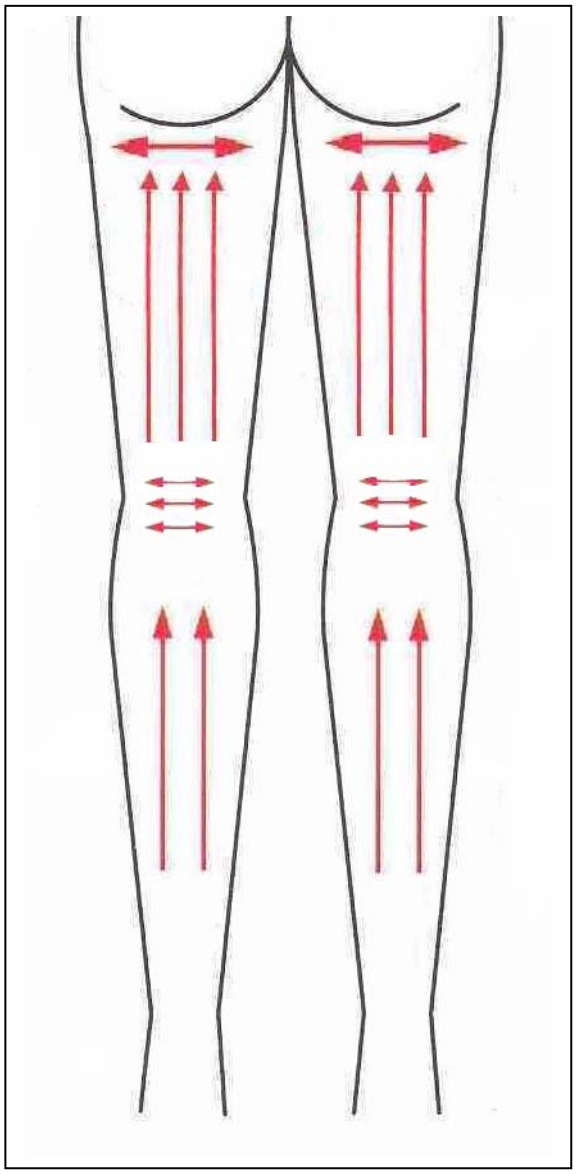

TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

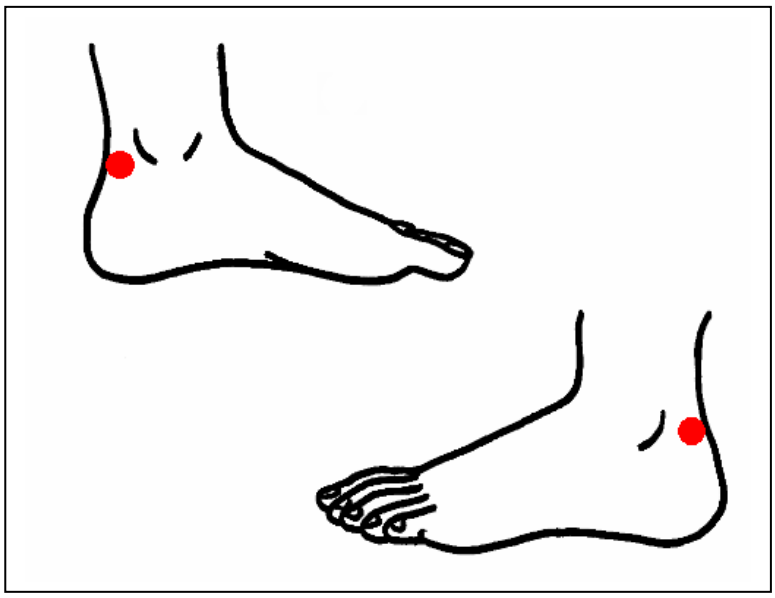

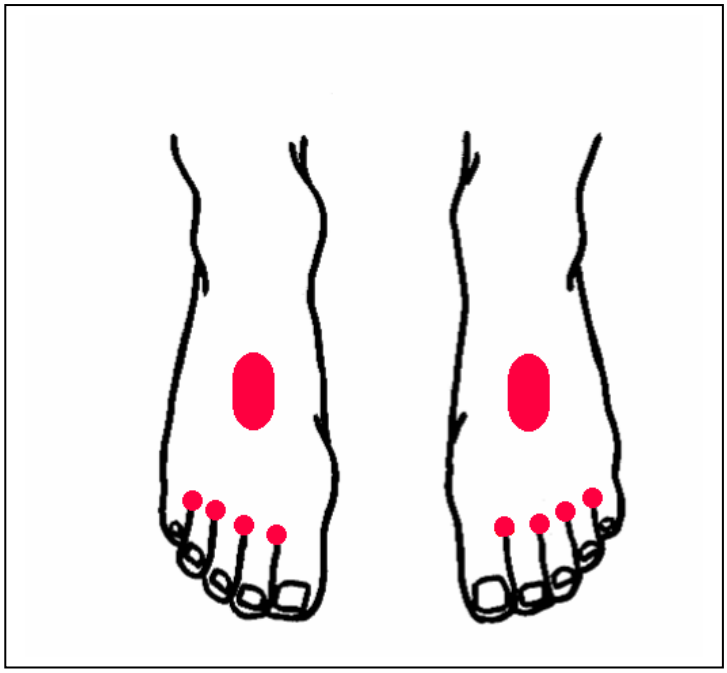

a) ANKLE SPRAIN

TRIGGER AREAS TREATMENT

- Duration : 10 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

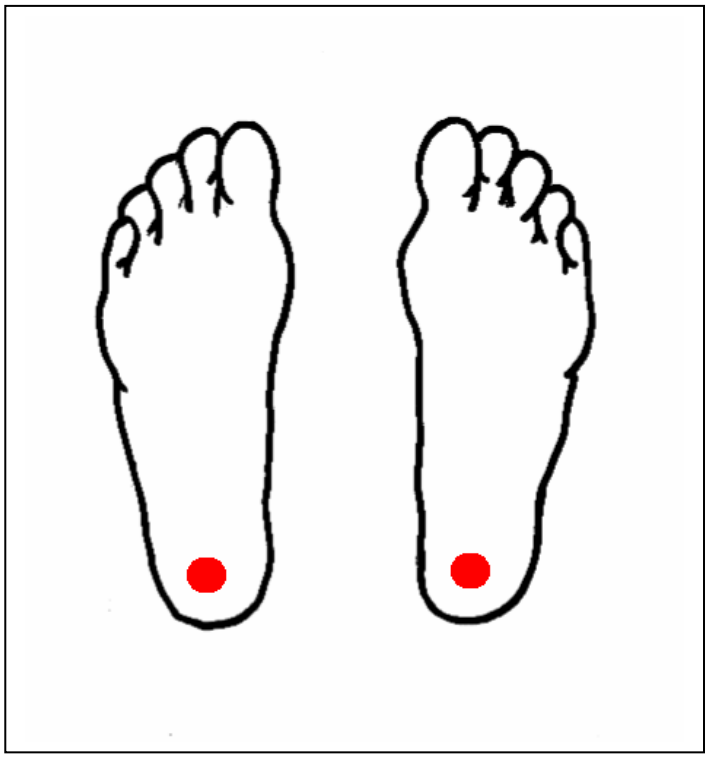

TREATMENT BY STROKES

- Duration : 15 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

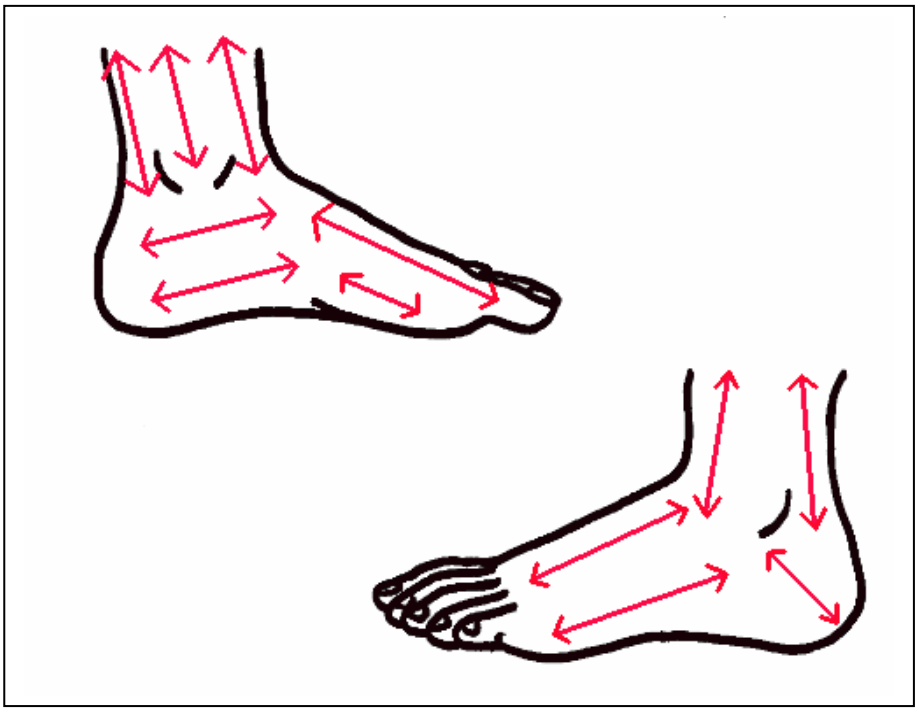

TREATMENT BY POINTS

- Duration : 10 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small Suction Cups

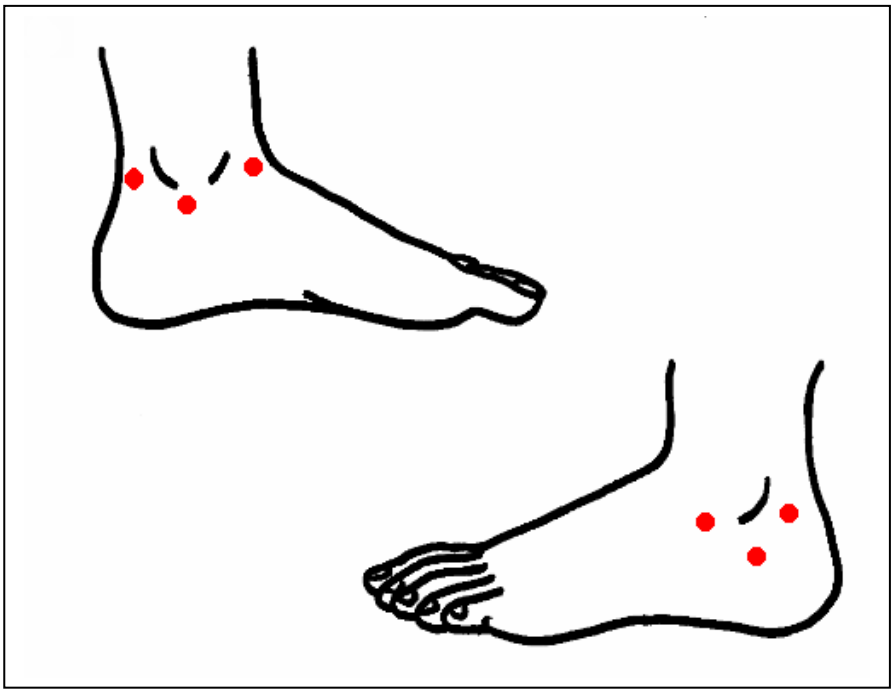

b) HEMATOMA

TRIGGER AREAS TREATMENT

- Duration : 5 minutes
- Frequency : 3,9 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

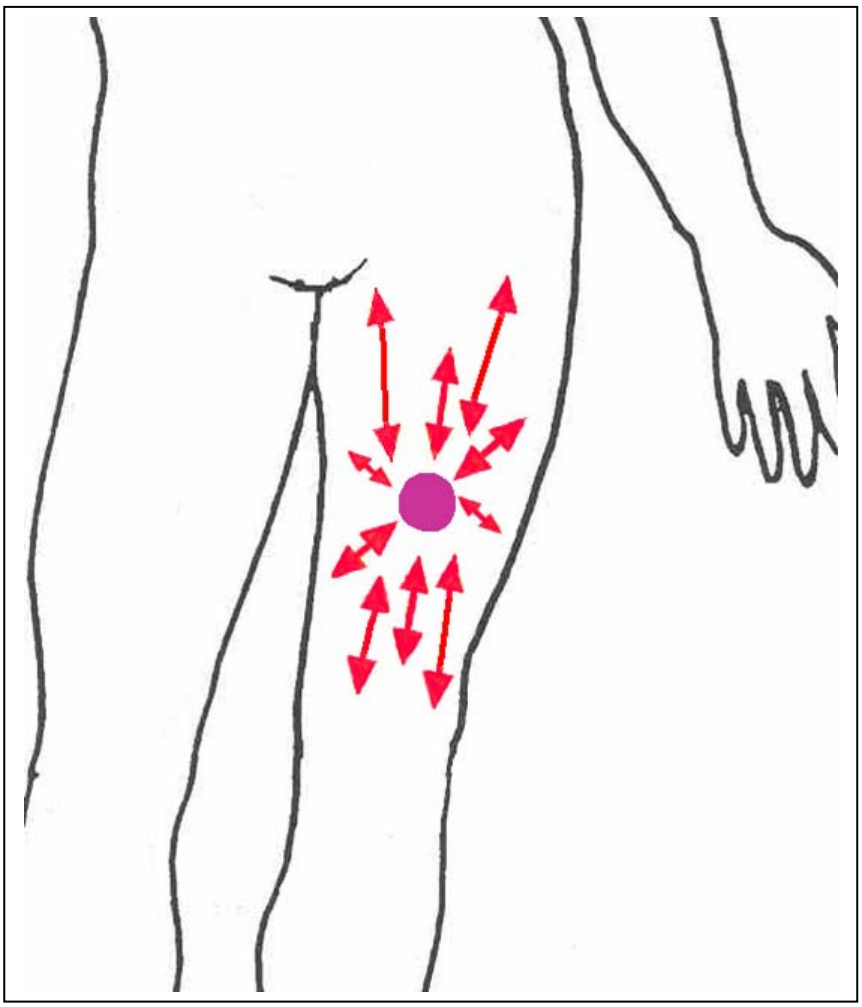

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

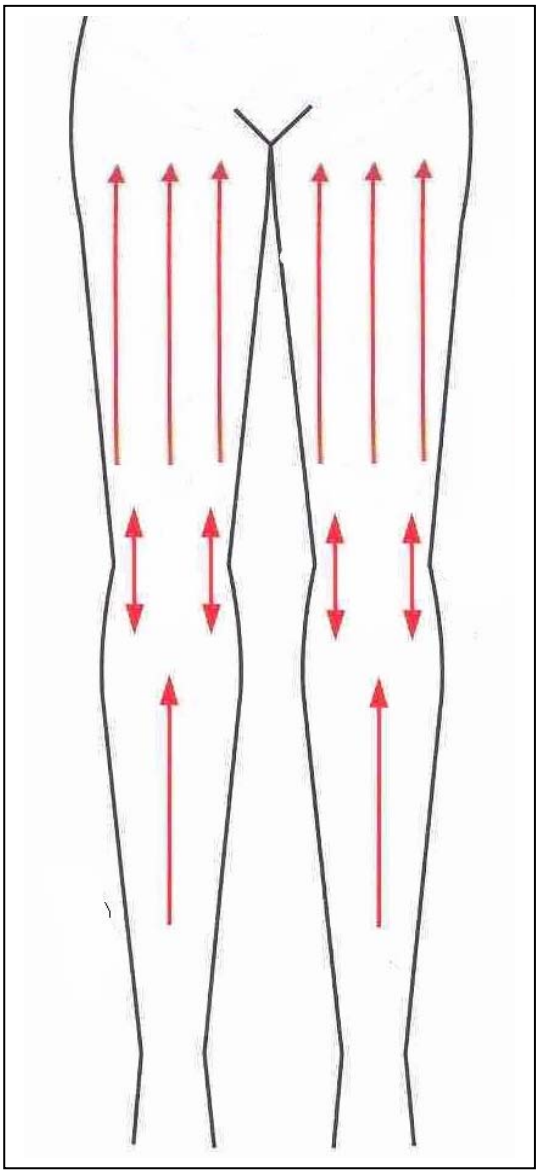

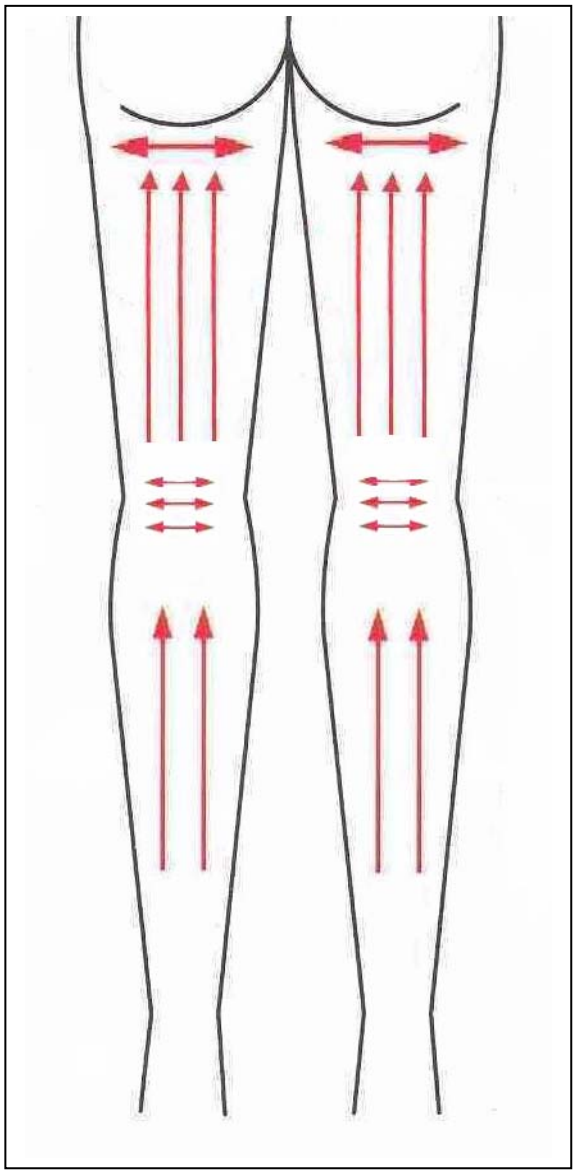

c) SCARS

- Duration : 15 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

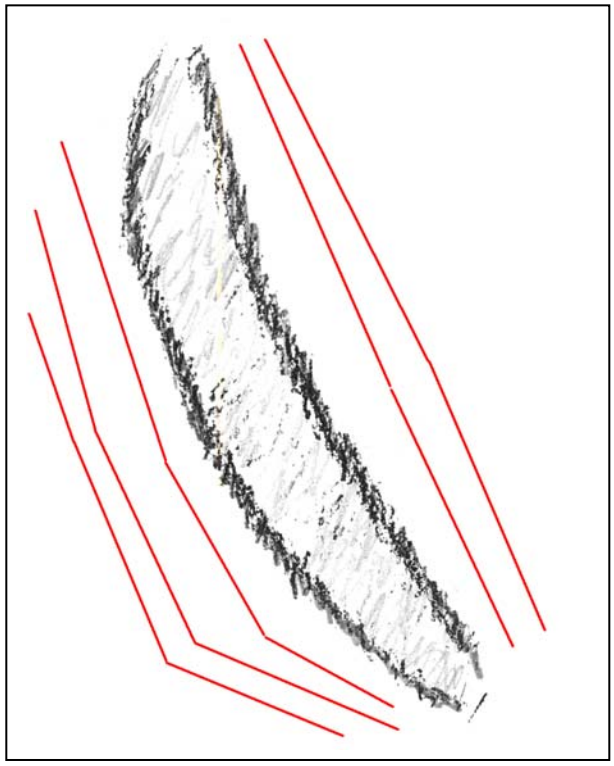

From day 1 to day 15, work lengthwise

- Duration : 15 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

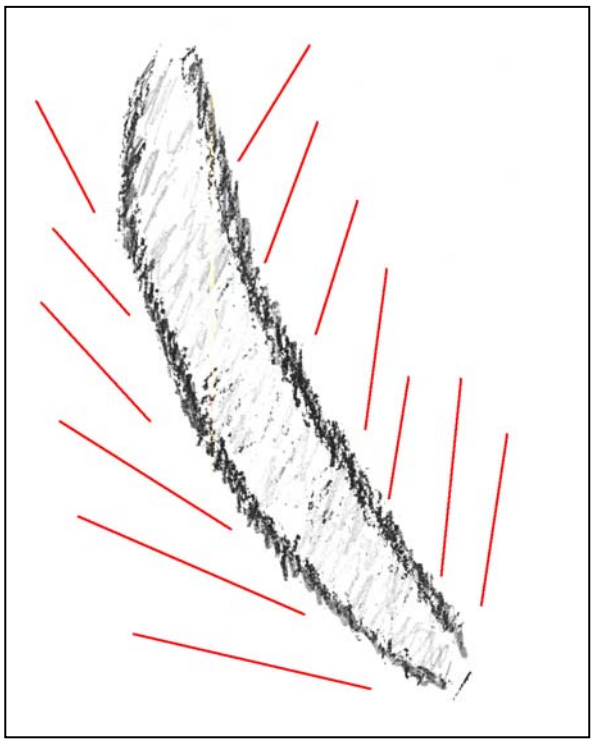

From day 16 to day 30, work tangentially

- Duration : 15 minutes
- Frequency : 0 Hz
- Cycle : C
- Treatment accessory : Treatment Head

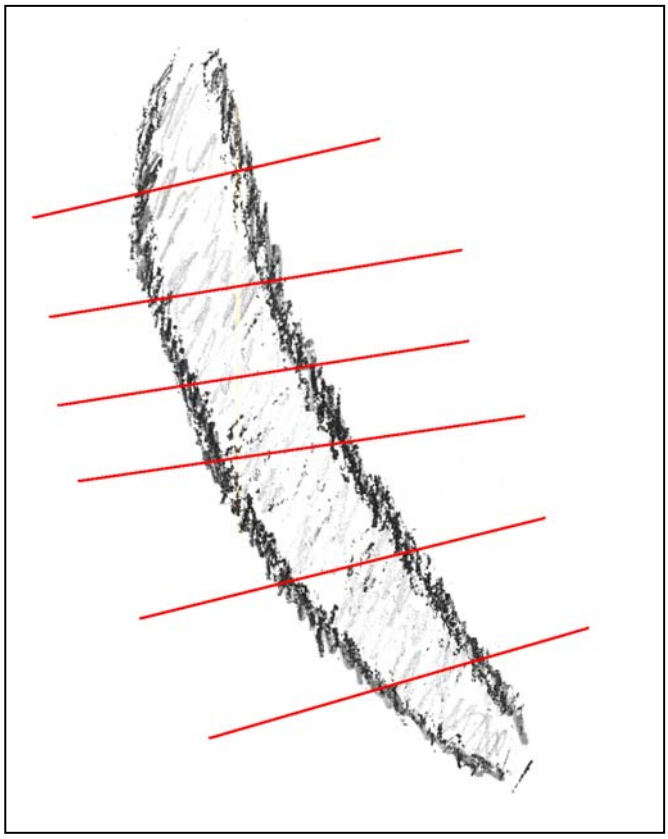

From day 31 to day 45, work perpendicularly

C) SPORT

a) MUSCLE STIFFNESS

TREATMENT BY STROKES

- Duration : 10 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

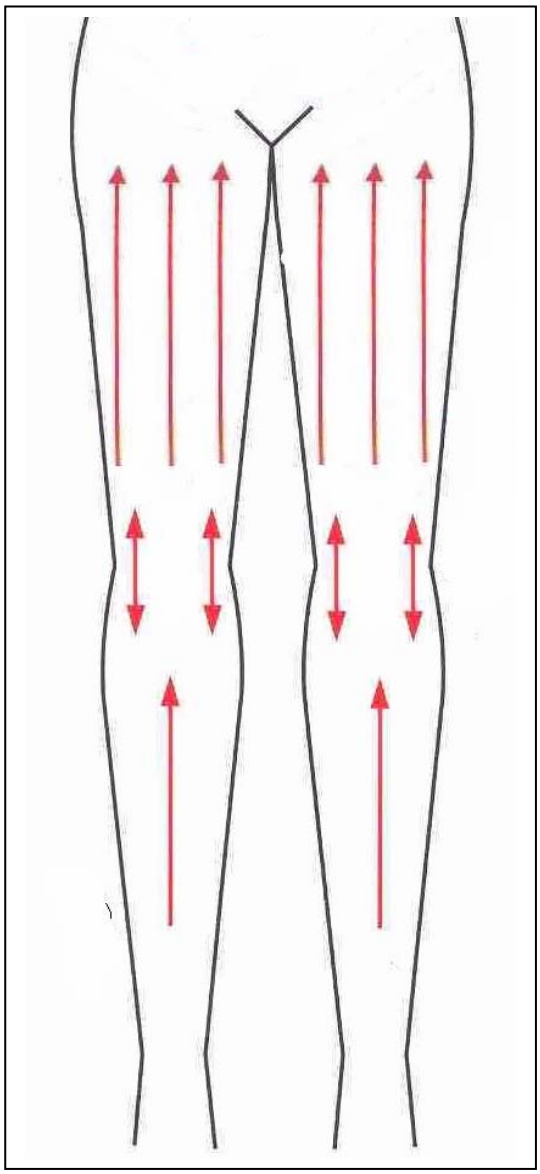

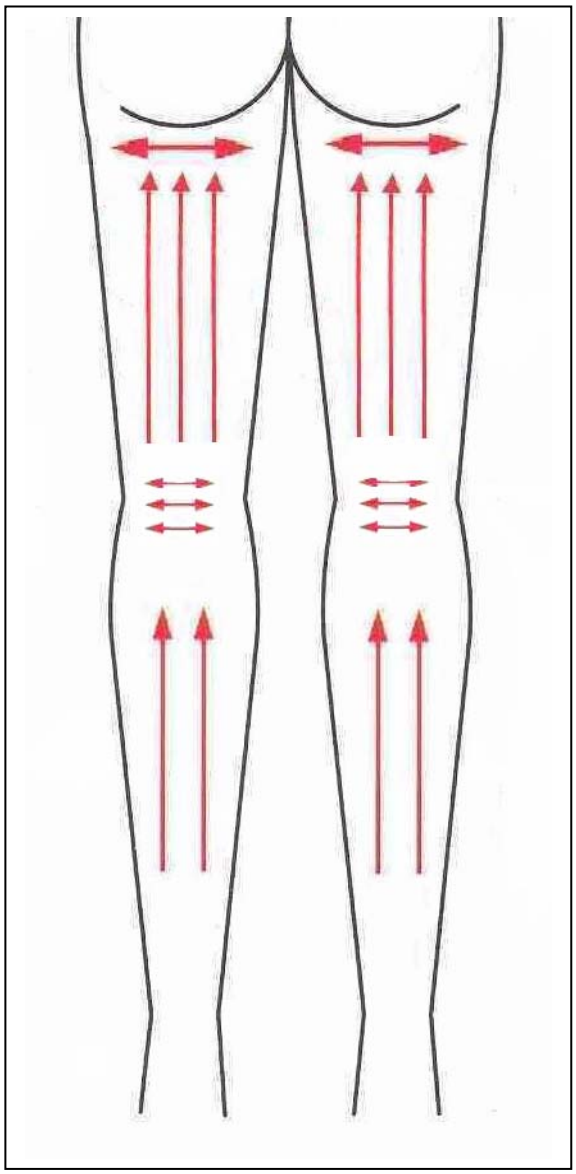

REFLEX TREATMENT BY POINT

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50 %
- Treatment accessory : Treatment Head

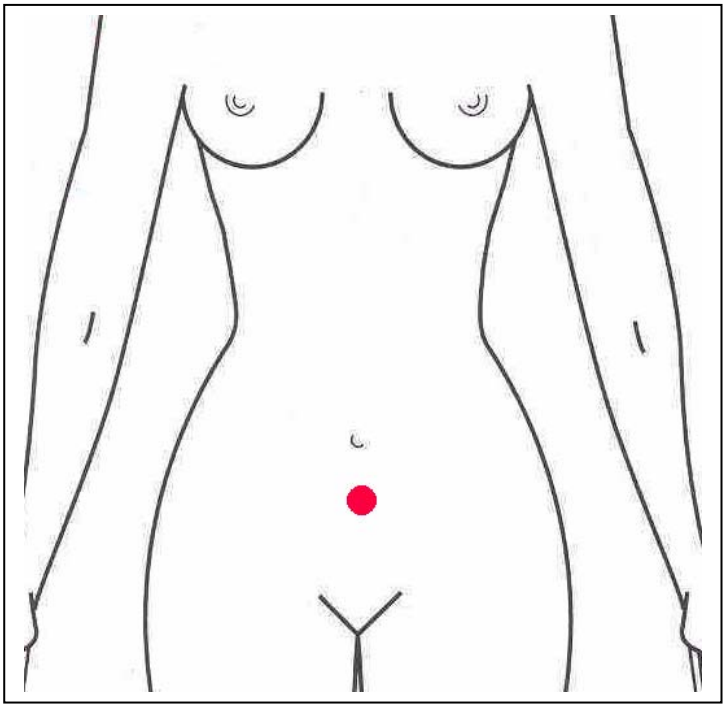

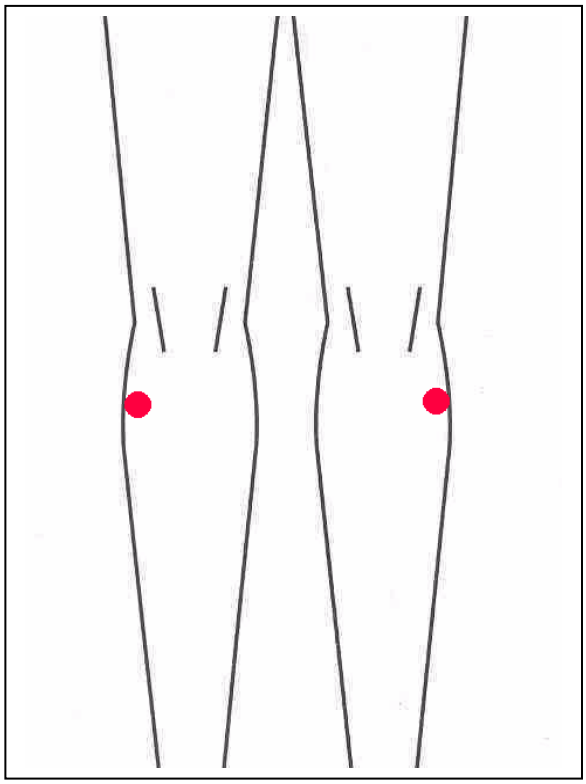

GLOBAL MASSAGE

- Duration : 10 minutes
- Frequency : 2.2 Hz
- Cycle : %
- Treatment accessory : Treatment Head

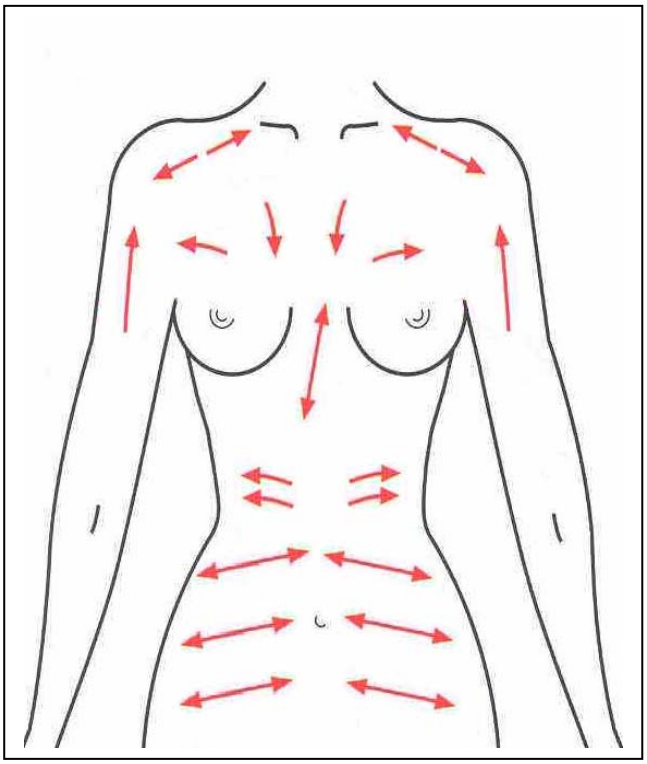

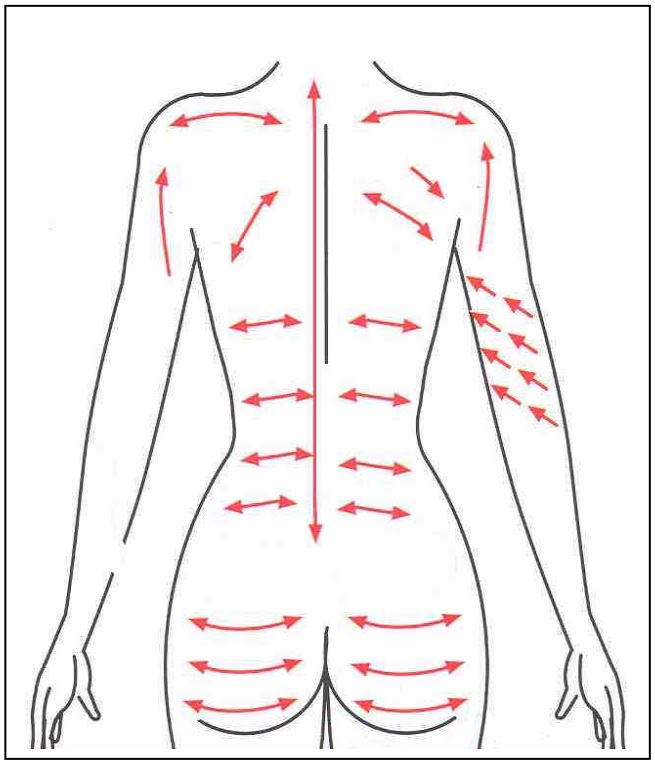

b) TENDINITIS

TREATMENT BY STROKES

- Duration : 5 minutes
- Frequency : 2,2 Hz
- Cycle : 50%
- Treatment accessory : Treatment Head

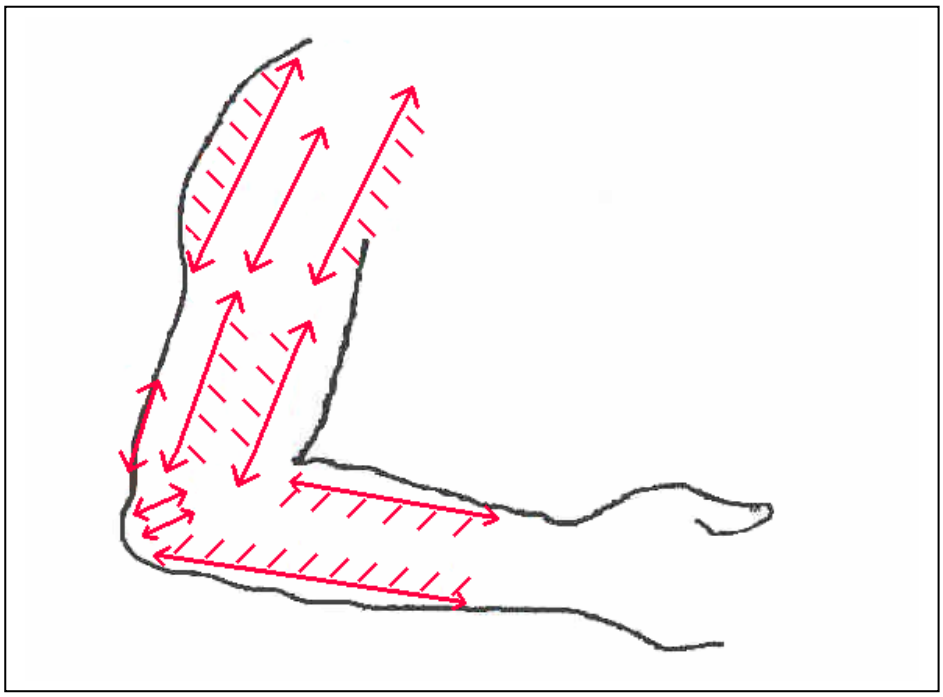

TREATMENT BY POINTS

- Duration : 5 minutes
- Frequency : 5 Hz
- Cycle : 50%
- Treatment accessory : Small or Basic Suction Cups

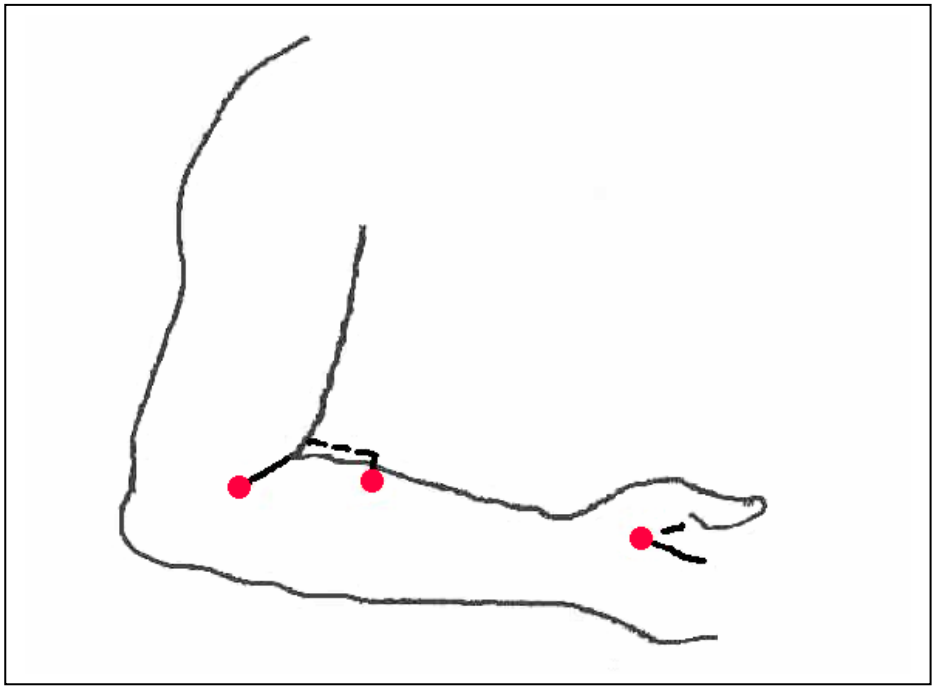

BASIC TREATMENT

- Duration : 5 minutes
- Frequency : 0 Hz
- Cycle : C%
- Treatment accessory : Treatment Head